

LIVOO
Feel good moments
Instruction manual

Electrical wok



Reference : DOC128A
Version : 1.4
Language : English

LIVOO
Feel good moments
Instruction manual

Thank you for purchasing a LIVOO product. We pay close attention to the design of our products, the ergonomics and the facility of using them. We hope our product will give you complete satisfaction.

GENERAL INSTRUCTIONS

PLEASE READ THESE INSTRUCTIONS CAREFULLY BEFORE USING THE APPLIANCE AND SAVE IT FOR ANY FURTHER NEED.

Incorrect operation or usage is likely to cause damage to the appliance and injure the user. Make sure that you follow all safety instructions. Only use this appliance for the purpose for which it has been designed; we decline all responsibility in the event of damage due to incorrect use or bad handling.

1. Check that your main voltage corresponds to that stated on the appliance.
2. The safety instructions do not by themselves eliminate any danger completely and proper accident prevention measures must always be used.
3. Never leave the appliance unsupervised when in use.
4. Children shall not play with the appliance.
5. This appliance shall not be used by children from 0 year to 8 years. This appliance can be used by children aged from 8 years and above if they are continuously supervised. This appliance can be used by people with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way

Instruction manual

and understand the hazards involved.

6. Keep the appliance and its cord out of reach of children aged less than 8 years. Cleaning and user maintenance shall not be made by children.
7. Cooking appliances should be positioned in a stable situation with the handles (if any) positioned to avoid spillage of the hot liquids.
8. If the power cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons(*) in order to avoid a hazard.
9. Do not pass the cord over objects with sharp edges and keep it at a distance from, hot objects and bare flames. Always pull on the plug to disconnect it from the feed source.
10. For extra protection it is possible to equip your home electrical system with a residual current circuit breaker with voltage break at 30 mA maximum. Ask your electrician for advice.
11. Make sure that the cord or the extension cable is not at risk of being pulled inadvertently nor of being topped over by anyone at the time of use.
12. When you use an extension cable, make sure that it is adapted to the appliance essential consumption. Contrary to this, the extension cable and/ or the plug risks overheating.
13. Only the appropriate connector must be used.
14. Only use the appliance for domestic purposes and in the way indicated in the instructions.
15. In case the appliance accidentally falls into water disconnect

Instruction manual

it immediately. Have it checked by an expert before re-using, if you do not do this you run the risk of electrocution.

16. Never try to open the casing yourself.
17. Do not use the appliance if your hands are damp if the oil is wet, or if the appliance itself is damp.
18. Do not touch the plug if your hands are damp or wet.
19. Never use the appliance near hot surfaces.
20. Surfaces are liable to get hot during use.
21. Never use the appliance outside and always place it in a dry environment. Before cleaning, always unplug the appliance from the power supply.
22. Never use accessories that are not recommended by the producer. They could constitute a danger to the user and risk to damage the appliance.
23. Never move the appliance by pulling the cord. Make sure the cord cannot get caught in any way. Do not wind the cord around the appliance and do not bend it.
24. Stand the appliance on a table or flat surface.
25. Unplug the appliance when not in use.
26. The connector must be removed before the appliance is cleaned and the appliance inlet must be dried before the appliance is used again.
27. The appliance is not intended to be operated by means of an external timer or a separate remote-control system.
28. It is absolutely necessary to keep this appliance clean at all times as it comes into direct contact with food.

Instruction manual

29. Make sure the appliance is unplugged before inserting, removing or cleaning one of the accessories. It is absolutely necessary to remove the accessories before cleaning them.
30. Keep this manual with the appliance. If the appliance is to be used by a third party, this instruction manual must be supplied with it.
31. Never carry the appliance while still hot.
32. This appliance is intended to be used in household and similar applications such as:
 - staff kitchen areas in shops, offices and other working environments
 - farm houses
 - by clients in hotels, motels and other residential type environments
 - bed and breakfast type environments.
33. Regarding the instructions for cleaning surfaces in contact with food or oil, thanks to refer to the below paragraph of the manual.
34. Never immerse the appliance base in water
35. Warning: there is potential injury from misuse
36. The heating element surface is subject to residual heat after use
37. Warning : avoid spillage on the connector
38. This appliance incorporates an earth connection for functional purposes only

(*) Competent qualified electrician: after sales department of the producer or importer or any person who is qualified, approved and competent to perform this kind of repairs in order to avoid all danger. In any case you should return the appliance to this electrician.

LIVOO

Feel good moments

Instruction manual

This instruction manual is available too on our website www.livoo.fr

SPECIAL MEASURES

Warning :



WARNING: HOT SURFACE

Surfaces can be very hot when appliance is operating

DO NOT OPERATE this product near water sources or flammable liquids.

DO NOT CLEAN OR TOUCH this product when it is still hot

DO NOT USE SHARP OBJECTS

SPECIFICATIONS

Voltage: 220-240V~,50-60Hz

Wattage:1500W

Instruction manual

DESCRIPTION

1. Lid
2. Handle
3. Wok body
4. Thermostat unit
5. Non-stick interior surface
6. Light indicator
7. Thermostat button
8. Over rack
9. Spatula



Before first use:

1. Remove all packing material and please check carefully to ensure that your Electric Wok is in good condition.
2. Wash the wok in warm, soapy water, to do this, remove the power cord, hold on the appliance making sure that the plug and thermostat unit are turned upward. Keep the plug dry. Rinse and dry thoroughly.
3. Wash the lid, the over rack and the spatula with hot soapy water.
4. Let the appliance work for about 10 minutes without any food to remove the protective coating on non-stick grilling surface. A small amount of smoke is normal – ensure that the room is well ventilated!

LIVOO

Feel good moments

Instruction manual

USE

Note: Keep the edge of the wok 5-10cm away from any walls and objects on the countertop or table. Be very careful when you use cooking oil, if it is too hot it can take fire.

1. Connect the thermostat unit to the plug on side of wok and connect to the earth socket.
2. Adjust the temperature on maximum and wait the wok heat.
3. Add a little cooking oil and adjust the cooking temperature to the desired setting. When the Indicator light goes off, the temperature has been reached and the wok is ready.
4. Do not cover the wok with the lid when heating up the cooking oil.
5. Cook the food by moving nonstop with the bamboo spatula.
6. When cooking is complete, move the temperature dial to "0" position and take food out of the wok right away.
7. Unplug the power cord from the wall immediately after you have finished cooking. When cool, remove the thermostat unit. Allow the wok to cool completely before cleaning.

CLEANING AND STORAGE

Caution: do not use wire brush or any abrasive items or liquids to clean appliance.

Be very careful when you use cooking oil, if it is too hot it can take fire.

1. Always remove the plug from the socket before cleaning.
2. Never immerse the appliance base in water.
3. Ensure that the appliance has completely cooled down.
4. Clean the wok with hot soapy water taking care not wet the plug.
If some food is hard to remove, after cooling, warm up with lower temperature after filling one glass of soapy water, wait 10 minutes and remove the food easier. Move the temperature dial to "0" position and rinse the wok.
5. Clean the lid, the over rack and the spatula with hot soapy water, rinse and dry them.
6. Wipe the base of the wok with damp cloth.
7. Never pour cold water on hot plate because it will damage it.
8. Dish washer is forbidden.

LIVOO

Feel good moments

Instruction manual



Correct disposal of the unit (Electrical and Electronic Equipment)

(Applicable in the European Union and the rest of Europe that have adopted separate collection systems countries)

The European Directive 2012/19/EU on Waste Electrical and Electronic Equipment (WEEE), requires that old household electrical appliances must not be disposed of in the normal household waste stream. Old appliances must be collected separately in order to optimize the recovery and recycling of the materials they contain and reduce the impact on human health and the environment. The symbol of the crossed out dustbin is marked on all products to remind the obligations of separate collection. Consumers should contact their local authority or retailer for information concerning the correct disposal of their product.



Pour en savoir plus :

www.quefairedemesdechets.fr



LIVOO
BP 61071
67452 Mundolsheim - FRANCE

- Photo no contractual
- Worried about the quality of his products the manufacturer reserves the right to make modifications without advance notice



Feel good moments

Instruction manual