

LIVOO
Feel good moments
Instruction manual

Mini oven 30 L with hot plates



Reference: DOC211
Version: 1.4
Language: English



Instruction manual

You have purchased a product LIVOO brand and we thank you. We take great care in design, ergonomics and ease of use of our products. We hope that this product will give you complete satisfaction.

This instruction manual is available too on our website www.livoo.fr

SAFETY ADVICES

PLEASE READ THESE INSTRUCTIONS CAREFULLY BEFORE USING THE APPLIANCE AND SAVE IT FOR ANY FURTHER NEED.

Incorrect operation or usage is likely to cause damage to the appliance and injure the user. Make sure that you follow all safety instructions. Only use this appliance for the purpose for which has been designed; we decline all responsibility in the event of damage due to incorrect use or bad handling.

1. Check that your main voltage corresponds to that stated on the appliance.
2. The safety instructions do not by themselves eliminate any danger completely and proper accident prevention measures must always be used.
3. Never leave the appliance unsupervised when in use.
4. This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved
5. Children shall not play with the appliance.

Instruction manual

6. Cleaning and use maintenance shall not be made by children unless they are older than 8 years and supervised.
7. Keep the appliance and its cord out of reach of children less than 8 years.
8. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard (*).
9. Do not pass the cord over objects with sharp edges and keep it at a distance from, hot objects and bare flames. Always pull on the plug to disconnect it from the feed source.
10. To insure an additional protection, the installation, in the electric circuit feeding the room, of an electrical system with residual differential current (DDR) of differential current of assigned functioning not exceeding 30 mA, is advised. Ask advice from your installer.
11. Make sure that the cord or the extension cable is not at risk of being pulled inadvertently nor of being topped over by anyone at the time of use.
12. When you use an extension cable. Make sure that it is adapted to the appliance essential consumption. Contrary to this, the extension cable and/ or the plug risks overheating.
13. Only use the appliance for domestic purposes and in the way indicated in the instructions.
14. In case the appliance accidentally falls into water disconnect it immediately. Have it checked by an expert before re-using, if you do not do this you run the risk of electrocution.
15. Never try to open the casing yourself.

Instruction manual

16. Do not touch hot surfaces. Use handle or knobs
17. Do not use the appliance if your hands are damp if the oil is wet, or if the appliance itself is damp.
18. Do not touch the plug if your hands are damp or wet.
19. Never use the appliance outside and always place it in a dry environment. Before cleaning, always unplug the appliance from the power supply.
20. Unplug from outlet when not in use to protect from happening any electric shock or fire accident.
21. When operating the oven, keep at least 50 cm of space above appliance and at least 20 cm at the sides to allow for adequate air circulation.
22. Never use accessories that are not recommended by the producer. They could constitute a danger to the user and risk to damage the appliance.
23. Do not place any of the following materials in the oven: cardboard, plastic, paper, or anything similar.
24. Do not cover the air inlet of oven. Do not cover CRUMB TRAY or any part of the oven with metal foil. This may cause overheating of the oven.
25. Never move the appliance by pulling the cord. Make sure the cord cannot get caught in any way. Do not wind the cord around the appliance and do not bend it.
26. Stand the appliance on a table or flat surface.
27. Unplug the appliance when not in use.
28. It is absolutely necessary to keep this appliance clean at all times as it comes into direct contact with food.

Instruction manual

29. Make sure the appliance is unplugged before inserting, removing or cleaning one of the accessories. It is absolutely necessary to remove the accessories before cleaning them.
30. Let cool and keep out the accessories before cleaning them.
31. The appliance is not intended to be operated by means of external timer or separate remote control system.
32. Keep this manual with the appliance. If the appliance is to be used by a third party, this instruction manual must be supplied with it.
33. Never carry the appliance while still hot.
34. Regarding the instructions for cleaning surfaces in contact with food, thanks to refer to the below paragraph "cleaning" in manual.
35. The accessible surfaces may be high when appliance is operating
36. The temperature of the door or the outer surface may be high when the appliance is operating.
37. Metallic objects such as knives, forks, spoons and lids should not be placed on the hotplate since they can get hot.
38. This appliance is intended to be used in household and similar applications such as:
 - staff kitchen areas in shops, offices and other working environments
 - farm houses
 - by clients in hotels, motels and other residential type environments
 - bed and breakfast type environments

Instruction manual

(*) Competent qualified electrician: after sales department of the producer or importer or any person who is qualified, approved and competent to perform this kind of repairs in order to avoid all danger. In any case you should return the appliance to this electrician.

SPECIAL MEASURES

Warning :



Surfaces are liable to get hot during use
DO NOT OPERATE this product near water sources or flammable liquids.
DO NOT CLEAN OR TOUCH this product when it is still hot
DO NOT USE SHARP OBJECTS

SPECIFICATIONS

Voltage: AC220-240V~ 50Hz

Wattage: 3300W


Before using your convection electrical oven for the first time, be sure to :

1. Read all instructions included in this manual.
2. Remove tape (if any) from the oven.
3. Confirm the accessories in the carton and remove all racks and pans to wash in hot sudsy water or in dishwasher.
4. After re-assembling your oven, we recommend that you run it at MAX temperature for approximately 15 minutes to eliminate any packing oil that may remain after shipping. **Do not worry if smoke appears during the first use. This is normal, and will disappear within 20 minutes.**

Instruction manual

DESCRIPTION

1. Small hotplate knob
2. Big hotplate knob
3. Temperature control
4. Switch for oven heating modes
5. Indicator light
6. Big hotplate
7. Small hotplate
8. Grill
9. Backing tray
10. Tray handle

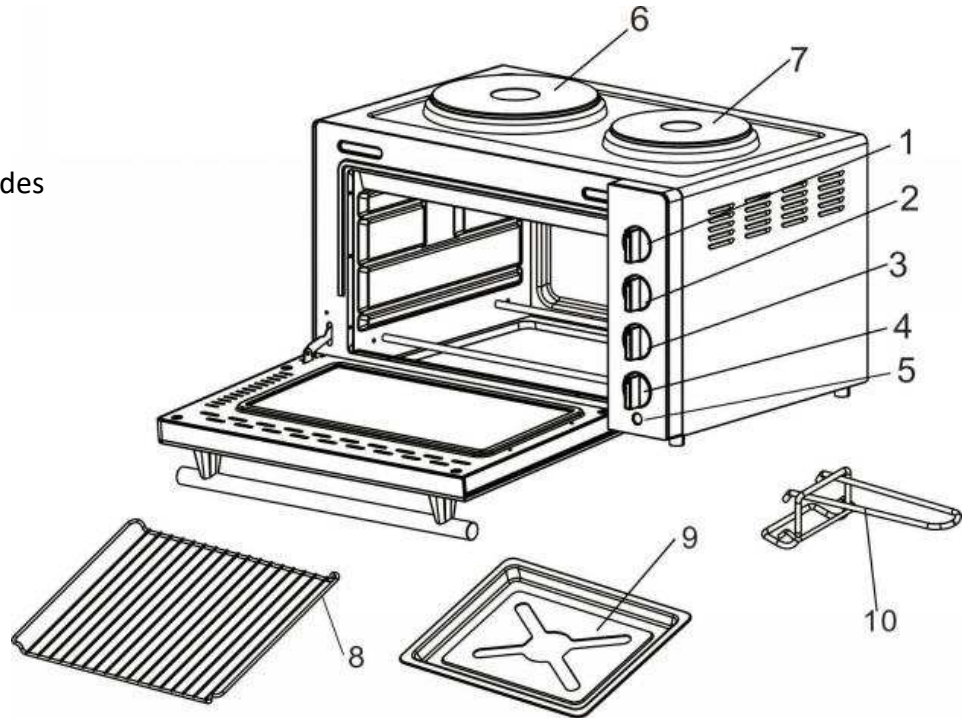

The temperature range of the oven is adjustable from *65 °C to 230 °C thanks to the thermostat knob.*

Function

Bigger Hotplate: Use for cooking various casserole dishes and other desired use.

Smaller Hotplate: Use for cooking various casserole dishes and other desired use.

Control Panel: Hotplate Switch Knob, Oven Function Knob, Oven Temperature Knob, Indicator.

Grill Rack: For toasting, baking, and general cooking in casserole dishes and loading food tray.

Food Tray: For use in broiling and roasting various foods that contain water or will release water or oil during cooking.

Food Tray Handle (For Food Tray and Grill Rack): Allows you to pick up Food Tray and Grill Rack to avoid any scald.

Door handle: Cool handle to avoid any scald.

Glass Door: Transparent tempered glass allows you to view the cooking process conveniently.

Indicator: Use to indicate running of oven / hotplate.

LIVOO
Feel good moments
Instruction manual

USE

Using Your Oven by selecting the cooking modes at:



Small hob ON



Big hob ON



Upper Heating - Grill



Lower Heating - slow cooking or reheating



Upper heating grill and convection ON



Upper and lower heating grill and convection ON

1. Insert the power plug into the socket. The Function Knob must turn OFF.
2. Place the food on grill rack or food tray and close the oven door.
 - Do not use any paper or plastic container.
 - Use Food tray for any food that is small in size or likely to drip while cooking.
 - Place the food evenly on the grill rack.
3. Set the cooking desired temperature.
4. When cooking Function ends up, you will hear beep, then you should:
 - Use accessory handle or oven mitts to remove hot food to avoid any scald.
 - In case to cease the cooking process during the middle of the cooking, make sure to turn the Function knob to “OFF” position.
5. Remove the power plug from the socket after cooking.

CLEANING AND CARE

1. Turn off the oven and remove the power plug from the wall socket before cleaning.
2. Keep the inside of the oven clean. When food splatters or spilled liquids adhere to oven walls, wipe with a damp cloth. Mild detergent may be used if the oven gets very dirty. Avoid the use of spray and other harsh cleaners as they may stain, streak or dull the door surface.

Instruction manual

3. The outside surfaces should be cleaned with a damp cloth. To prevent damage to the operating parts inside the oven, water should not be allowed to seep into the ventilation openings.
4. Wipe the door and window on both sides, the door seals and adjacent parts frequently with a damp cloth to remove any spills or splatters. Do not use abrasive cleaner.
5. Do not allow the control panel to become wet. Clean with a soft, damp cloth.
6. The oven should be cleaned regularly and any food deposits removed.



Correct disposal of the unit

(Electrical and Electronic Equipment)

(Applicable in the European Union and the rest of Europe that have adopted separate collection systems countries)

The European Directive 2012/19/UE on Waste Electrical and Electronic Equipment (WEEE), requires that old household electrical appliances must not be disposed of in the normal household waste stream. Old appliances must be collected separately in order to optimize the recovery and recycling of the materials they contain and reduce the impact on human health and the environment. The symbol of the crossed out dustbin is marked on all products to remind the obligations of separate collection. Consumers should contact their local authority or retailer for information concerning the correct disposal of their product.



Pour en savoir plus :

www.quefairedemesdechets.fr

LIVOO
BP 61071
67452 Mundolsheim - FRANCE

- Non contractual illustration
- Product information is subject to change without prior notice.