

LIVOO
Feel good moments
Instruction manual

Panini and press grill



Reference : DOC223
Version : 1.4
Language : English



Instruction manual

You have purchased a product LIVOO brand and we thank you. We take great care in design, ergonomics and ease of use of our products. We hope that this product will give you complete satisfaction.

General Instructions

PLEASE, TAKE TIME TO READ WELL THE INSTRUCTIONS FOR USE
PARTICULARLY BEFORE THE FIRST USE.

A misuse of the appliance can damage it or hurt the user. Assure that you use the appliance for the use for which it is designed; we refuse any responsibilities as for the damages by an incorrect use or a bad manipulation.

1. Before use check that the voltage of your wall outlet correspond to the rated voltage manner.
2. From time to time check the cord for damages. Never use the appliance if cord or appliance shows any signs of damage.
3. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified person in order to avoid a hazard (*).
4. Do not let cord hang over edge of table or counter or touch hot surface.
5. To reduce the risk of electric shock, never operate this product with wet hands, spill liquid in the product or submerge it in water
6. Do not touch hot surface. Use handles or knobs only.
7. Close supervision is necessary when your appliance is being used near children or infirm persons.

Instruction manual

8. Do not place an appliance on or near a hot gas or on a heated oven.
9. Do not use outdoors (Household use only).
10. This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
11. Children shall not play with the appliance.
12. Cleaning and user maintenance shall not be made by children unless they are older than 8 years and supervised.
13. Keep the appliance and its cord out of reach of children less than 8 years.
14. The appliance is not intended to be operated by means of external timer or separate remote control system.
15. It is absolutely necessary to keep this appliance clean at all times as it comes into direct contact with food.
16. Regarding the instruction for cleaning surfaces in contact with food thanks to refer to the below paragraph "cleaning" in manual.
17. The temperature of accessible surfaces may be high when appliance is operating.
18. Only connect the device to an earthed socket. If an extension cord is used, it must be connected to a built-in ground and must support the power of the unit. Make all the arrangements so that no one gets in the way.
19. Never leave the device working without supervision.

Instruction manual

20. Never use the device outdoors.
21. Always place your appliance on a flat, stable and heat resistant surface.
22. Leave a minimum free space of 20cm around the appliance while it's working.
23. Always unplug your appliance and let it cool down completely:
 - After each use
 - Before cleaning, storing or moving.
24. This appliance is intended for household use and similar applications such as:
 - staff kitchen areas in shops, offices and other working environments
 - farm houses
 - by clients in hotels, motels and other residential type environments
 - bed and breakfast type environments

(*) Competent qualified electrician: after sales department of the producer or importer or any person who is qualified, approved and competent to perform this kind of repairs in order to avoid all danger. In any case you should return the appliance to this electrician.

This instruction manual is available too on our website www.livoo.fr



Warning:

Caution hot surface!

- 1. DO NOT OPERATE** this product near water sources or flammable liquids.
- 2. DO NOT OPERATE** this product on or near any hot surface. (Hot plate, electric stoves etc).
- 3. Pleased do not touch or clean the set when it is still hot.**
4. If too much food is inserted into the appliance and the toaster cannot be closed, never close it with undue force as this could damage the lock
5. Never use sharp fork or knife to remove the food as this would damage the non-stick coating of cooking surface. Use heat-resistant wood or plastic utensils only.
6. Always unplug the appliance from the power socket when not in use.

TECHNICAL SPECIFICATIONS


Voltage: 220-240V~ 50-60Hz

Power: 2200W

Instruction manual

DESCRIPTION

- | | |
|---------------------|--------------------------|
| 1. Handle | 6. Thermostat knob |
| 2. Décorative plate | 7. Grill non-stick plate |
| 3. Upper housing | 8. Bottom housing |
| 4. Power light | 9. Hinge release button |
| 5. Ready light | 10. Removable drip tray |

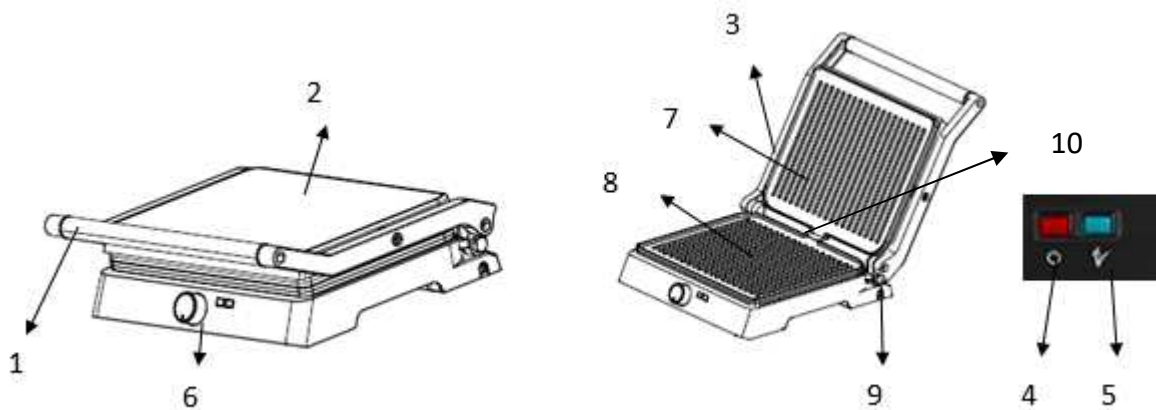

Before to use :

- Clean with a soft damp cloth. Place your appliance on the level and stable and heat resistant surface.
- Pre-heating the appliance few minutes without any food to remove the protective coating. A small smoke emission is normal; take care that the room is aerated well
- Lightly coat the plate with a little cooking oil.

USING YOUR APPLIANCE

CAUTION: Do not use this product to cook or defrost frozen food. All food must be completely defrosted before cooking it with this product.

1. Close the plates and turn the unit on by plugging it into a standard electrical outlet. Verify that the power indicator light illuminates in orange.
- WARNING:** The cooking plates and metal surfaces of the unit will become extremely hot when in use. To avoid a burn hazard, wear heat resistant mitts or gloves and touch only the black portion of the handle.
2. Set the temperature control to your desired setting, the green light illuminates in green.
3. Once the green ready light is off, indicating the product is ready for use.
4. Use the handle to lift the upper plate, if you want to open the appliance to 180° by pressing the hinge release button 9.
5. Place food on the lower plate using wooden or plastic heat-resistant utensils.
6. Use the handle to lower and rest the upper plate on top of the food
7. When the food is cooked as desired, lift the handle to open the plates, the, remove the food suing the utensils. If more cooking will be done at this time, close the plates to conserve heat.
8. Repeat steps 5-7 until all cooking is complete, reapplying cooking oil as necessary.

Instruction manual

9. Turn off the product by unplugging the power cord from the electrical outlet.
10. When the unit has completely cooled, clean and dry it.

Note: During cooking, the green pilot lamp cycles on and off to maintain the correct temperature of the appliance.

CLEANING AND STORAGE

Do not immerse the appliance in water

1. Unplug the appliance from the power supply and wait for it to completely cool down before cleaning.
2. Use a soft wet cloth to wipe the cooking surface and never use an abrasive cleaner to wipe the cooking plate otherwise the non-stick coating would be easily damaged.
3. Remove and empty the drip tray after each use and wash it in warm soapy water.
4. Clean the appliance every time after use.

Instruction manual



Correct Disposal of this product

(Waste Electrical & Electronic Equipment)

able in the European Union and other European countries with separate collection systems)



The European Directive 2012/19/EU on Waste Facilities Electrical and Electronic (WEEE)

This marking shown on the product or its literature, indicates that it should not be disposed with other household wastes at the end of its working life.

To prevent possible harm to the environment or human health from uncontrolled waste disposal, please separate this from other types of wastes and recycle it responsibly to promote the sustainable reuse of material resources.

Household users should contact either the retailer where they purchased this product or their local authority office, for details of where and how they can take this item for environmentally safe recycling.



Pour en savoir plus :

www.quefairedemesdechets.fr



LIVOO
BP 61071
67452 Mundolsheim

- Photo no contractual
- Worried about the quality of his products the manufacturer reserves the right to make modifications without advance notice