

LIVOO
Feel good moments
Instruction manual

Double induction hob



Reference : DOC236
Version : 1.6
Language: English



Instruction manual

You have purchased a product LIVOO brand and we thank you. We take great care in design, ergonomics and ease of use of our products. We hope that this product will give you complete satisfaction.

This instruction manual is available too on our website www.livoo.fr

General Instructions

PLEASE, TAKE TIME TO READ WELL THE INSTRUCTIONS FOR USE
PARTICULARLY BEFORE THE FIRST USE.

A misuse of the appliance can damage it or hurt the user. Assure that you use the appliance for the use for which it is designed; we refuse any responsibilities as for the damages by an incorrect use or a bad manipulation.

1. The appliance is intended for household use. All other using is forbidden. Don't use outdoor.
2. Before plugging in check that the voltage of your wall outlet correspond to the rated voltage manner.
3. This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
4. Children shall not play with the appliance.
5. Cleaning and use maintenance shall not be made by children unless they are older than 8 year and supervised.
6. Keep the appliance and its cord out of reach of children less than 8 years.

Instruction manual

7. Never leave the appliance unsupervised when in use.
8. Appliance inlet must be dried before the appliance is used again.
9. Never used the appliance :
 - If the power cord is damaged
 - In case of bad operation
 - It has been damaged in any manner
 - It has been submerged in water
 - If you dropped it
10. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons (*) in order to avoid a hazard.
11. Never immerse your appliance in water or any other liquid for any reason whatsoever. Never place it into the dishwasher.
12. To reduce the risk of electric shock, never operate this product with wet hands.
13. Never unplug the appliance by pulling the cord.
14. Unwind the cord of its flat to avoid the superheating of the appliance.
15. Do not place an appliance on or near a hot gas or on a heated oven.
16. It is absolutely necessary to keep this appliance clean at all times as it comes into direct contact with food.
17. Regarding the instruction for cleaning surfaces in contact with food thanks to refer to the below paragraph "cleaning" in manual.
18. The appliance is not intended to be operated by means of

Instruction manual

external timer or separate remote control system.

19. **WARNING:** Unattended cooking on a hob with fat or oil can be dangerous and may result in fire
20. **NEVER** try to extinguish a fire with water, but switch off the appliance and then cover flame e.g, with a lid or a fire blanket
21. **CAUTION:** The cooking process has to be supervised, a short term cooking process has to be supervised continuously
22. **WARNING:** Danger of fire: do not store items on the cooking surfaces
23. After use, switch off the hob element by its control and do not rely on the pan detector
24. Metallic objects such as knives, forks, spoons and lids should not be placed on the hob surface since they can get hot.
25. **Warning:** if the surface is cracked, switch off the appliance to avoid the possibility of electric shock.
26. A steam cleaner is not be used.
27. This appliance is intended to be used in household and similar applications such as:
 - staff kitchen areas in shops, offices and other working environments
 - farm houses
 - by clients in hotels, motels and other residential type environments
 - bed and breakfast type environments

(*) Competent qualified electrician: after sales department of the producer or importer or any person who is qualified, approved and competent to perform this kind of repairs in order to avoid all danger. In any case you should return the appliance to this electrician.



WARNING: HOT SURFACE

Surfaces are liable to get hot during use.

WARNING: The appliance and its accessible parts become hot during use. Care should be taken to avoid touching heating elements. Children less than 8 years of age shall be kept away **DO NOT OPERATE** this product near water sources or flammable liquids.

DO NOT CLEAN OR TOUCH this product when it is still hot.

TECHNICAL SPECIFICATIONS

Voltage: **220-240V~50-60Hz**

Power: 3500W




➤ Table 5a -Information for domestic electric hobs			
	Symbol	Value	Unit
Model identification	-	DOC236	-
Type of hob	-	Electric hob	-
Number of cooking zones and/or areas	-	two cooking zones	-
Heating technology (induction cooking zones and cooking areas, radiant cooking zones, solid plates)	-	Induction cooking zones	-
For circular cooking zones or area: diameter of useful surface area per electric heated cooking zone, rounded to the nearest 5 mm	Ø	Right zone:21.5 Left zone: 21.5	cm
For non-circular cooking zones or areas: length and width of useful surface area per electric heated cooking zone or area, rounded to the nearest 5 mm	L W	-	cm

Instruction manual

Energy consumption per cooking zone or area calculated per kg	EC _{electric cooking}	Right zone:183.7 Left zone: 184.2	Wh/kg
Energy consumption for the hob calculated per kg	EC _{electric hob}	184.0	Wh/kg

DESCRIPTION

Control panel

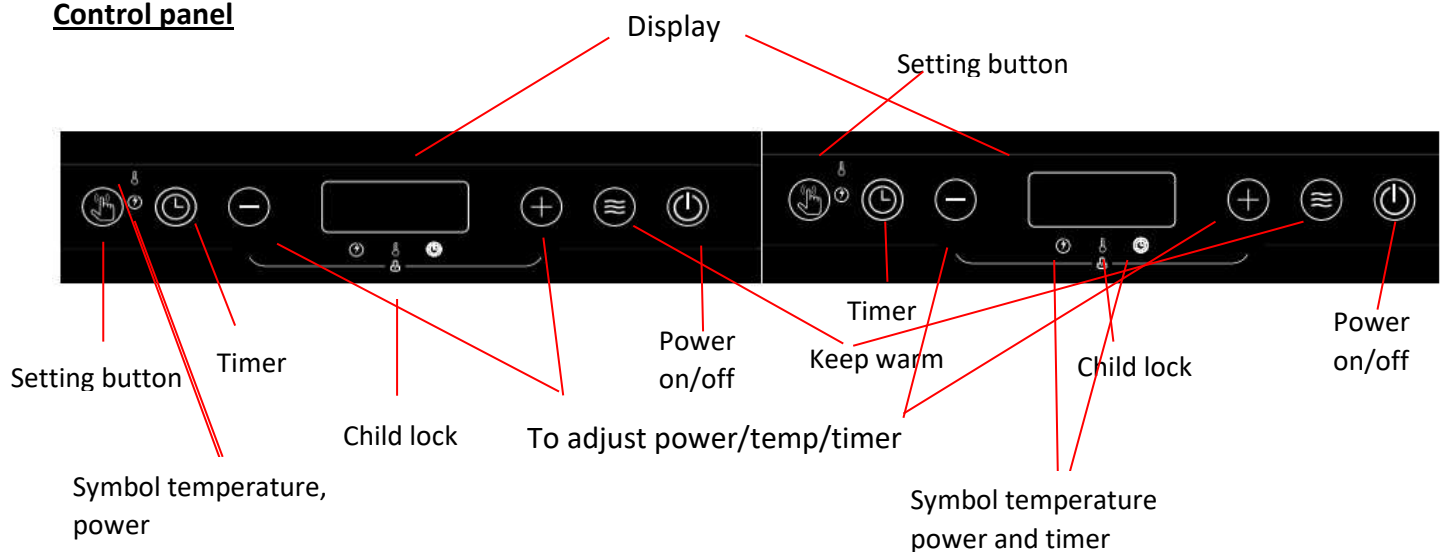

After inserting the plug in the socket, a beep will emit, the display and all control lights are activated shortly. Press on/off button LED display shows C.

Cooking mode:

Place your pot/pan on the plate, press setting button until display shows 1600W which is default power for left burner and 1600W for right burner.

It can be adjusted by pressing "+" or "-" to set power you want, from 200 until 2000W for left burner, from 200 to 1500W for right burner.

To cancel this mode, press left button to switch to other cooking modes or on/off button to stop.

Temperature setting:

Press setting button until indicator of C° lights up, display will show 200°C for left burner and 180°C for right burner (default power in degree) but it can be adjusted by pressing "+" or "-" to set power you want (from 60°C until 240°C), to cancel this mode, press setting button to switch to other cooking modes or on/off button to stop.

Note: Do not touch the hot plate

Timer function:

Instruction manual

Press the timer button, it lights up, display will show default time “10” and you can adjust time by pressing “+” or “-”, with “+” you can adjust by 10 minutes and with “-” you can adjust by one minute (range from 1 to 180min), then you can press timer button to confirm or wait until display stops flashing.

When the time is up, appliance “beep” and stops to change for standby mode automatically.

To cancel this function you can press on/off button to return on standby mode or hold the timer to resume the selected power or temperature.

Warning: after use, switch off the appliance. Don't plug it out immediately, there's 1 minute pre-set for the fan continuous working until the unit cool down. After the cooling fan stops operation, unplug the appliance from the socket

Child lock function:

To prevent children from changing settings or turning appliance on, you can press '+' and '-' at the same time, all keys would be locked.

Under 'lock' status, press '+' and '-' at the same time and hold for 3 sec., the setting is unlocked again.

Or you could press 'ON/OFF' key, it would change to standby mode, then you could set needed function again.

Note: you can use steel, cast iron, enameled iron, stainless steel, flat-bottom pans/pots with bottom diameter from 12cm to 26cm.

Do not pull out the power cord during operation.

CLEANING AND STORAGE

Before cleaning, unplug and wait for the appliance to cool down.

- Wipe with a moistened cloth.
- Do not clean with any abrasive items or liquids, as this will damage the appliance.
- Do not immerse in water or any other liquid.

Symptoms	Check points	Remedy
After connecting the power and pressing the “power” key, the appliance has no response.	Is the electricity in suspension?	Use after resuming the electricity.
	Is the fuse broken down?	Check the root causes carefully. If the problem cannot be fixed, please contact Service Centre for checking and repairing.
	Is the plug connected firmly?	
Heating being interrupted in normal use and a “Beep” will be	Incompatible cookware or no cookware is used?	Replace compatible cookware for the induction cooker.
	Is the cookware not considerably	Place the cookware at the

Instruction manual

heard.	placed form the center of the heating zone?	center of the defined heating zone.
	Is the cookware being heated but continually being removed?	Place a cookware inside the heating zone.
Symptoms	Check points	Remedy
No operation during the heating being in use.	Is the cookware empty or the temperature too high?	Please check whether the appliance is being misused.
	Is the air intake/exhaust vent clogged or dirt has accumulated?	Remove the stuff clogging the air intake/exhaust vent. Operate the appliance again after cooling down.
	Is the cooker working over 2 hours without any external instruction?	Reset cooking modes or use timer function.
Error codes occur.	E0 Without cookware or Incompatible cookware used E1 IGBT sensor open circuit/short circuit E2 IGBT overheat E3 Over-voltage 270V E4 Under-Voltage 90V E5 Top plate sensor open/short circuit E6 Top plate overheat	When showing error signal E0, E5, please check whether the cookware is not suitable, or switch on the appliance again after it is cooled down naturally. When showing E1, E2, E6, please contact Service Centre for checking and repairing. When showing E3, E4, please check power supply wait until the power supply back to normal.

Instruction manual



**Correct disposal of the unit
(Electrical and Electronic Equipment)**

(Applicable in the European Union and the rest of Europe that have adopted separate collection systems countries)

The European Directive 2012/19/EU on Waste Electrical and Electronic Equipment (WEEE), requires that old household electrical appliances must not be disposed of in the normal household waste stream.

Old appliances must be collected separately in order to optimize the recovery and recycling of the materials they contain and reduce the impact on human health and the environment.

The symbol of the crossed out dustbin is marked on all products to remind the obligations of separate collection.

Consumers should contact their local authority or retailer for information concerning the correct disposal of their product.



LIVOO
BP 61071
67452 Mundolsheim

- Photo no contractual
- Worried about the quality of his products the manufacturer reserves the right to make modifications without advance notice