

Hot-dog machine



Reference : DOC238
Version : 1.7
Language : English

You have purchased a product LIVOO brand and we thank you. We take great care in design, ergonomics and ease of use of our products. We hope that this product will give you complete satisfaction.

This instruction manual is available too on our website www.livoo.fr

GENERAL INSTRUCTIONS

PLEASE, TAKE TIME TO READ WELL THE INSTRUCTIONS FOR USE
PARTICULARLY BEFORE THE FIRST USE.

A misuse of the appliance can damage it or hurt the user. Assure that you use the appliance for the use for which it is designed; we refuse any responsibilities as for the damages by an incorrect use or a bad manipulation.

1. Before use check that the voltage of your wall outlet correspond to the rated voltage manner.
2. Do not operate the appliance with a damaged cord or after malfunction or has been damaged in any manner.
3. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard (*).
4. Do not let cord hang over edge of table or counter or touch hot surface.
5. Never immerse the appliance, the cord or plug in water or any other liquid for any reason whatsoever. Never place it into the dishwasher.
6. Close supervision is necessary when your appliance is being used near children or infirm persons.
7. Do not place an appliance on or near a hot gas or on a heated oven.

8. Household use only. Only use the appliance for domestic purposes and in the way indicated in these instructions. The appliance is not suitable for outdoor use.
9. Cleaning and user maintenance shall not be made by children unless they are older than 8 and supervised.
10. Keep the appliance and its cord out of reach of children less than 8 years.
11. This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities, or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
12. Appliances can be used by persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
13. Children shall not play with the appliance.
14. Never leave the unit unattended when switched on.
15. The appliance is not intended to be operated by means of external timer or separate remote control system.
16. Never use this appliance :
 - If the socket or the cord is damaged
 - If case of dysfunction
 - If the appliance is damaged in any manner
 - If it fell in the water

- If you dropped it
- 17. It is absolutely necessary to keep this appliance clean at all times as it comes into direct contact with food.
- 18. Regarding the instructions for cleaning surfaces in contact with food, thanks to refer to the below paragraph "cleaning" in manual.
- 19. There is potential injury from misuse.
- 20. Be careful if hot liquid is poured into the tank as it can be ejected out of the appliance due to a sudden steaming.
- 21. Never turn on your device without the cover.
- 22. Heating element surface is subject to residual heat after use.
- 23. Appliance must not be immersed.
- 24. Warning: there is potential injury from misuse
- 25. This appliance is intended for household use and similar applications such as:
 - staff kitchen areas in shops, offices and other working environments
 - farm houses
 - by clients in hotels, motels and other residential type environments
 - bed and breakfast type environments

(*) **Competent qualified electrician:** after sales department of the producer or importer or any person who is qualified, approved and competent to perform this kind of repairs in order to avoid all danger. In any case you should return the appliance to this electrician

SPECIAL MEASURES

Warning:




- Surfaces are liable to get hot during use
- The water level must always be below Max level. Warning, if the cup is overfilled, boiling water may be ejected when the water comes to a boil: **RISK OF BURNS**
- Do not clean or touch this product when it is still hot.

SPECIFICATIONS

Voltage: 220-240V ~ 50-60Hz
Power: 340W

DESCRIPTION

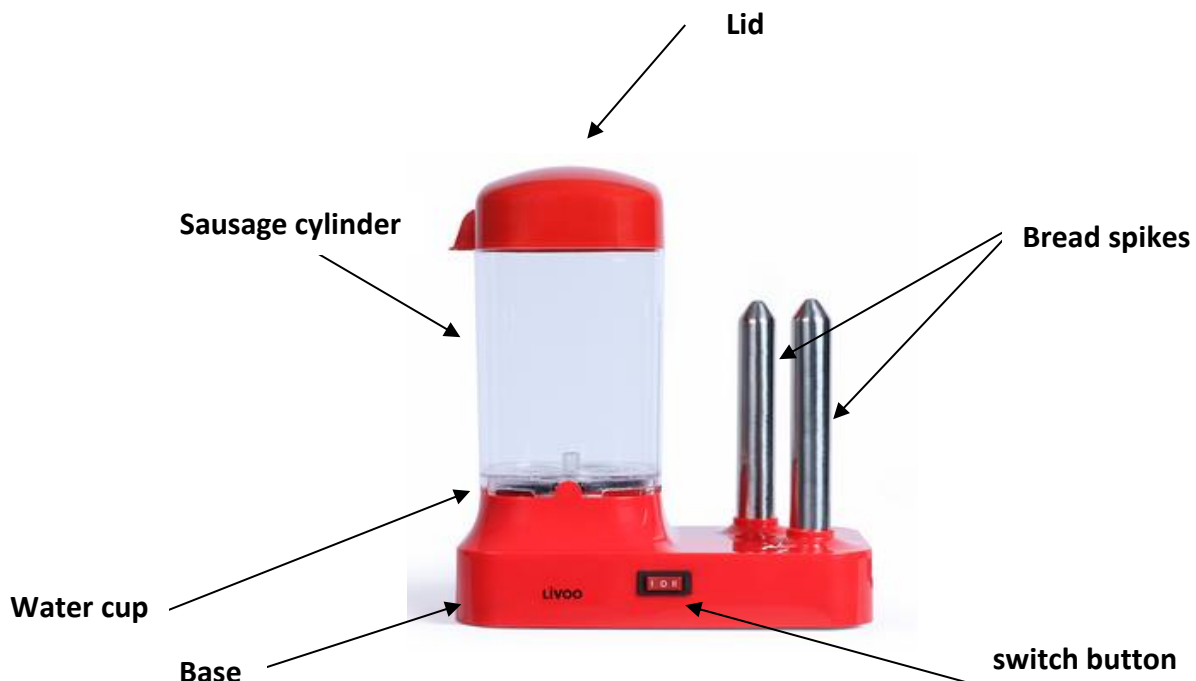

PREPARATION BEFORE USE

LIVOO
Feel good moments
User manual

1. Check that the voltage marked on the product corresponds with your supply voltage. Ensure the switch is on OFF position before plug in.
2. Do not use it on damp or wet surface or near water.
3. When first used, odours or smoke may appear. This is normal and does not affect the proper functioning of your appliance.

USING YOUR APPLIANCE

1. Put the hot dog machine on flat surface and put water into water tank (water should be at the MAX level).
2. Fix the removable transparent tank with slots provided for this purpose. Then place sausages inside (6 max) and put on the cover.
3. Connect to the power supply socket. Switch to “I” position to heat water and cook sausages, the hot dog machine begins heating.
4. After about 6 to 8 minutes, the sausages are ready.

Warning: The cooking time depends on the size of sausages.

5. Turn the switch to the “II” position to heat the spikes for bread
6. At mid cooking, press two rolls or baguette pieces on spikes

Warning: spikes for bread are very hot, risk of burns!

7. Carefully remove the lid and take out the sausages one by one using a fork.
8. Slide the hot sausage in bread, you can add mustard or ketchup.
After use, put the button on OFF position and unplug the hot dog machine.
9. The device is designed for continuous use of approximately 20 minutes. After this time, turn off the device and let it cool down before reheating.

CLEANING AND STORAGE

1. Make sure the plug is removed from the power supply socket before cleaning.
2. When the hot dog machine set is completely cooled down, clean the body, spikes and water tank with a damp soft cloth, then dry them.
3. The sausage container is dishwasher safe. The lid can be washed in soapy water.
4. Never immerse the base in water.
5. Never clean the unit with abrasive as this will damage the coating.

DECALCIFICATION

The water tank is equipped with a release liner to prevent the scale from depositing.
But if there more deposit form at the bottom of the water tank, simply wipe with a damp cloth.

LIVOO
Feel good moments
User manual

For larger deposits, use water mixed with vinegar.

LIVOO
Feel good moments
User manual



**Correct Disposal of this product
(Waste Electrical & Electronic Equipment)
(Applicable in the European Union and other European countries with separate collection systems)**



The European Directive 2012/19/EU on Waste Facilities Electrical and Electronic (WEEE)

This marking shown on the product or its literature, indicates that it should not be disposed with other household wastes at the end of its working life.

To prevent possible harm to the environment or human health from uncontrolled waste disposal, please separate this from other types of wastes and recycle it responsibly to promote the sustainable reuse of material resources.

Household users should contact either the retailer where they purchased this product or their local authority office, for details of where and how they can take this item for environmentally safe recycling.



LIVOO

BP 61071

67452 Mundolsheim