

LIVOO
Feel good moments
Instruction Manual

Mini Crepes maker



Reference:	DOC266
Version:	1.5
Language:	English

Instruction Manual

You have purchased a product LIVOO brand and we thank you. We take great care in design, ergonomics and ease of use of our products. We hope that this product will give you complete satisfaction.

This instruction manual is available too on our website www.livoo.fr

General Instructions

PLEASE, TAKE TIME TO READ WELL THE INSTRUCTIONS FOR USE
PARTICULARLY BEFORE THE FIRST USE.

A misuse of the appliance can damage it or hurt the user. Assure that you use the appliance for the use for which it is designed; we refuse any responsibilities as for the damages by an incorrect use or a bad manipulation.

1. Before use check that the voltage of your wall outlet correspond to the rated voltage manner.
2. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard (*).
3. Do not let cord hang over edge of table or counter or touch hot surface.
4. To reduce the risk of electric shock, never operate this product with wet hands, spill liquid in the product or submerge it in water
5. Do not touch hot surface. Use handles or knobs only.
6. Close supervision is necessary when your appliance is being used near children or infirm persons.
7. Do not place an appliance on or near a hot gas or on a heated

Instruction Manual

oven.

8. Do not use outdoors (Household use only).
9. To avoid the risk of personal injury, this product should not be operated by children or people who are not familiar with these instructions.
10. This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities, or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance.
11. Cleaning and user maintenance shall not be made by children unless they are older than 8 and supervised. Children shall not play with the appliance.
12. Keep the appliance and its cord out of reach of children less than 8 years.
13. The appliance is not intended to be operated by means of external timer or separate remote control system.
14. Save these instructions.
15. This appliance is intended to be used in household and similar applications such as:
 - staff kitchen areas in shops, offices and other working environments
 - farm houses
 - by clients in hotels, motels and other residential type environments
 - bed and breakfast type environments
16. It is absolutely necessary to keep this appliance clean at all

Instruction Manual

times as it comes into direct contact with food.

17. Temperature of accessible surface may be high when the appliance is operating.
18. Cooking appliance should be positioned in a stable situation with the handles (if any) positioned to avoid spillage of the hot liquids.
19. Appliance must not be immersed.
20. Warning: avoid spillage on the connector.
21. Potential injury from misuse.
22. The heating element surface is subject to residual heat after use.
23. Place the device on a flat, stable, heat-resistant surface.
24. Regarding the instructions for cleaning surfaces in contact with food or oil, thanks to refer to the below paragraph "cleaning" in manual.
25. Surfaces are liable to get hot during use.

(*) Competent qualified electrician: after sales department of the producer or importer or any person who is qualified, approved and competent to perform this kind of repairs in order to avoid all danger. In any case you should return the appliance to this electrician

SPECIFICATIONS

Power consumption: 220-240V~ 50-60Hz

Rating Voltage: 1500W



Instruction Manual

USING YOUR APPLIANCE

Before first use, remove all packaging and wipe the cooking plate with a damp cloth, then dry it, spread a teaspoon of oil and wipe the excess.

1. Insert the flex cable into the appliance and the plug into a power outlet.
2. Wait for 8 to 10 minutes to preheat the cooking plate. It may have a little smoke and odor, it is normal for first use.
3. You can put a small amount of butter onto the cooking plate and spread it.
4. Put small quantity of crepe batter on cooking plate round circle (measure according to the desired thickness: full quantity for pancake, less quantity for crepes or wraps) then add the topping of your choice.
5. Cook the crepes 2 minutes on each face lift (longer for pancakes, blinis) until just golden. To turn over the crepe, use a spatula.

Note: never rest plastic or wooden spatula on hot plate to avoid damage.

6. Once cooked, remove the crepe of the plate. After use, unplug the appliance. Allow the appliance to cool then clean before storing.

CLEANING AND STORAGE

Caution:

Do not use wire brush or any abrasive items or liquids to clean the appliance.

1. Never immerse the appliance in water.
2. Always remove the plug from the socket before cleaning the appliance and ensure that the appliance has completely cooled down.
3. Clean the baking plate with sponge.
4. Use damp cloth to clean the appliance base.

Instruction Manual



**Correct Disposal of this product
(Waste Electrical & Electronic Equipment)
(Applicable in the European Union and other European countries with separate collection systems)**



The European Directive 2012/19/EU on Waste Facilities Electrical and Electronic (WEEE)

This marking shown on the product or its literature, indicates that it should not be disposed with other household wastes at the end of its working life.

To prevent possible harm to the environment or human health from uncontrolled waste disposal, please separate this from other types of wastes and recycle it responsibly to promote the sustainable reuse of material resources.

Household users should contact either the retailer where they purchased this product or their local authority office, for details of where and how they can take this item for environmentally safe recycling.



LIVOO
BP 61071
67452 Mundolsheim - FRANCE

- Photo no contractual
- Worried about the quality of his products the manufacturer reserves the right to make modifications without advance notice