
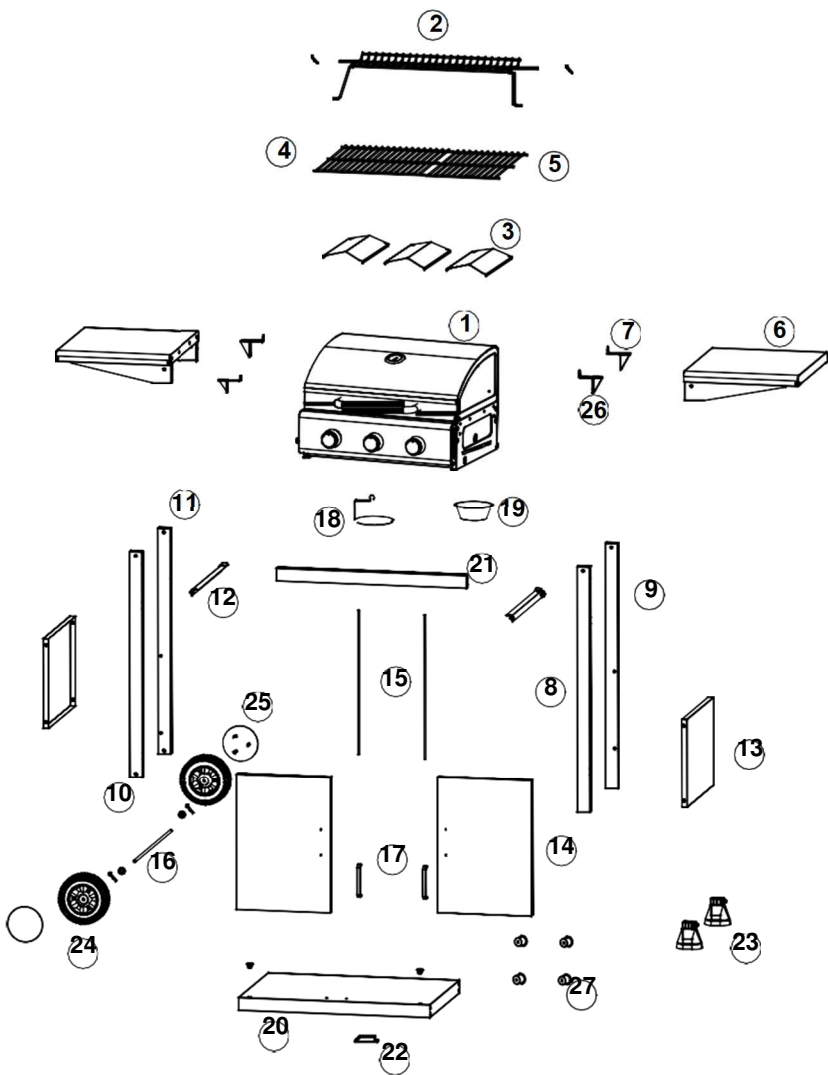
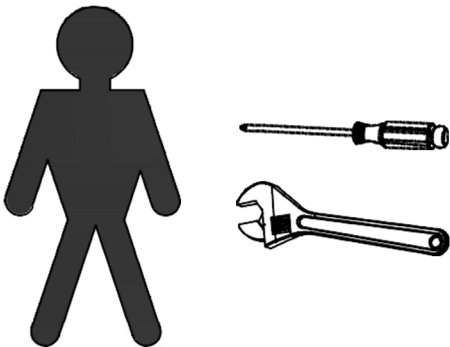


DOC279


Assembly instructions

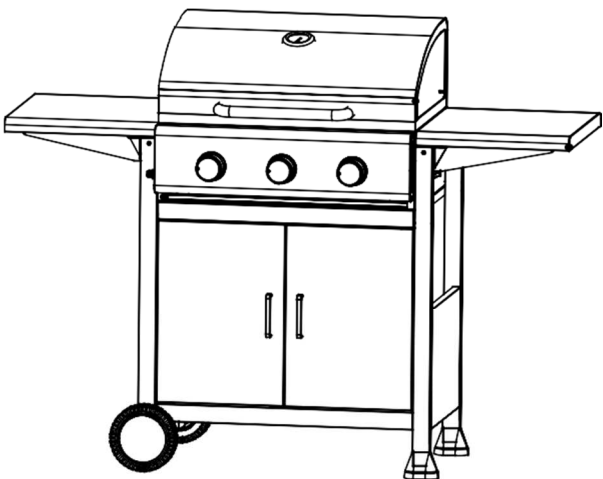

① *1	② *1	③ *3
④ *1	⑤ *1	⑥ *2
⑦ *2	⑧ *1 (RF)	⑨ *1 (RB)
⑩ *1 (LF)	⑪ *1 (LB)	⑫ *2
⑬ *2	⑭ *2	⑮ *2
⑯ *1	⑰ *2	⑱ *1
⑲ *1	⑳ *1	㉑ *1
㉒ *1	㉓ *2	㉔ *2
㉕ *2	㉖ *2	㉗ *4
A M5-55*16	B M5-12*34	C M4-8*4
D *2	E *4	F M4-12*2
G *2		


1. B M5*12 4PCS

Fix the left front leg and left back leg to the left board with 4pcs M5*12

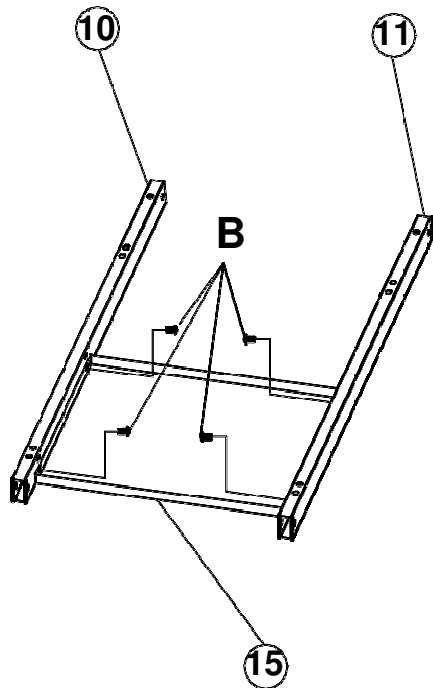


2. B M5*12 4PCS

Fix the right front leg and right back leg to the right board with 4pcs M5*12

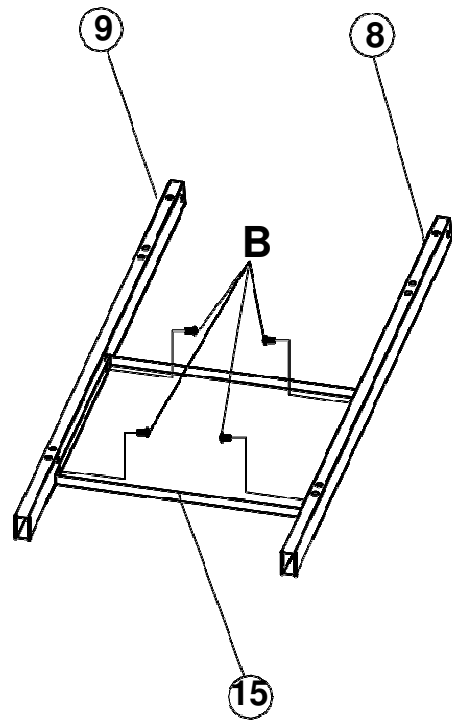


3. A M5*55 4PCS

Connect the bottom board and the side trolley parts

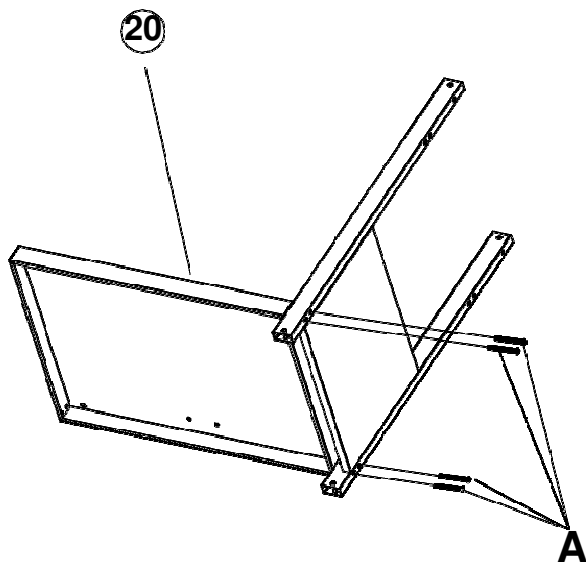


4. A M5*55 4PCS

Connect the bottom board and the side trolley parts

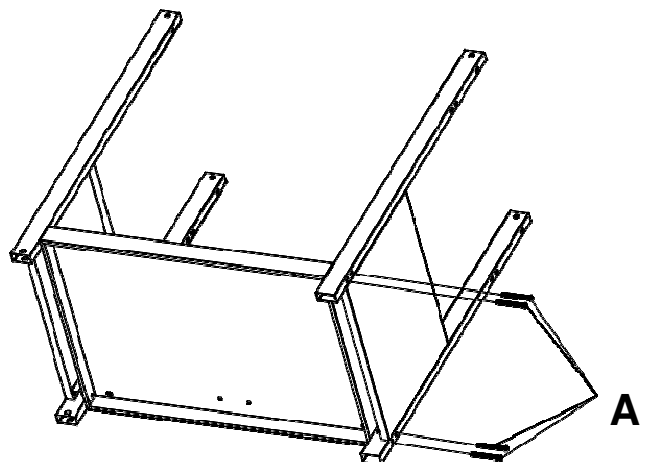


5. **B M5*12 2PCS**
A M5*55 4PCS

Attach the beams to the legs

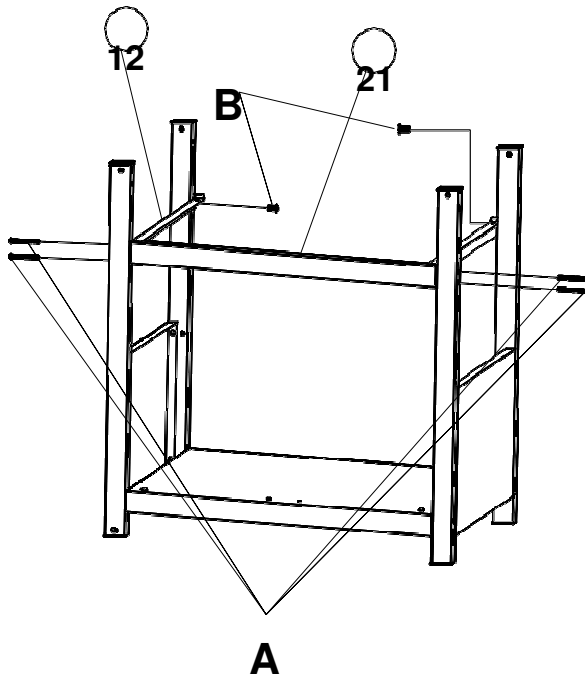


6. **D 2PCS**
E 2PCS


Install the wheel

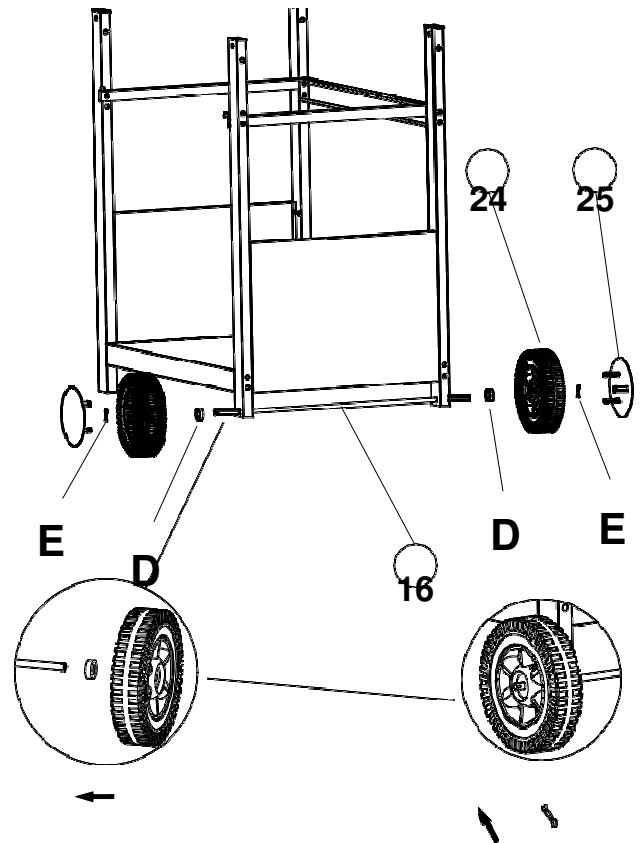

7. **F M4*12 2PCS**

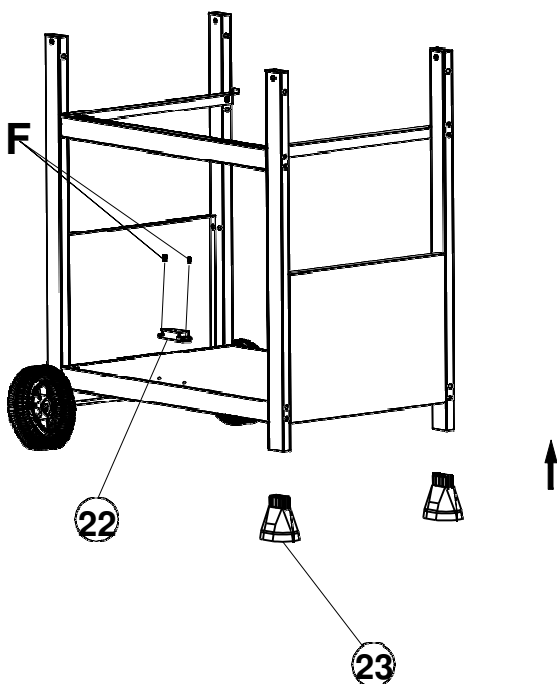


8. **C M4*8 4PCS**

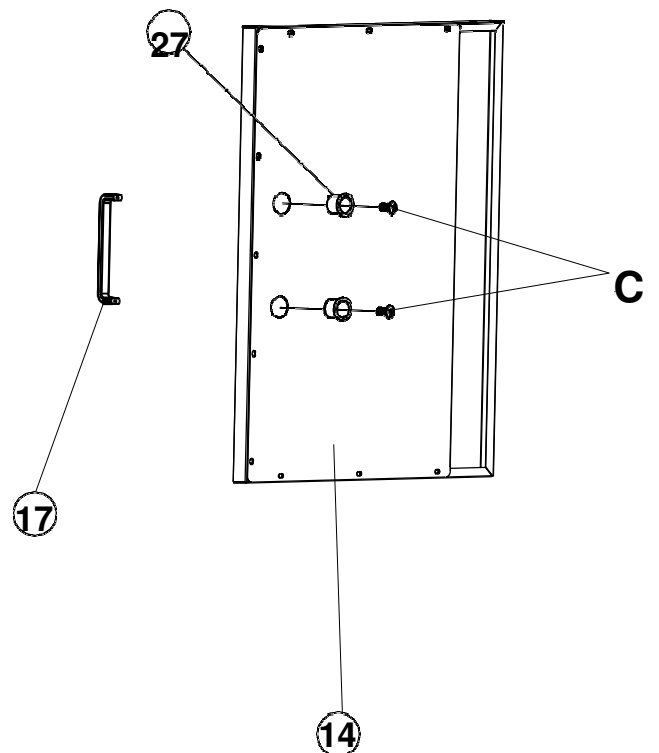


Attach the door handle to the door

9.

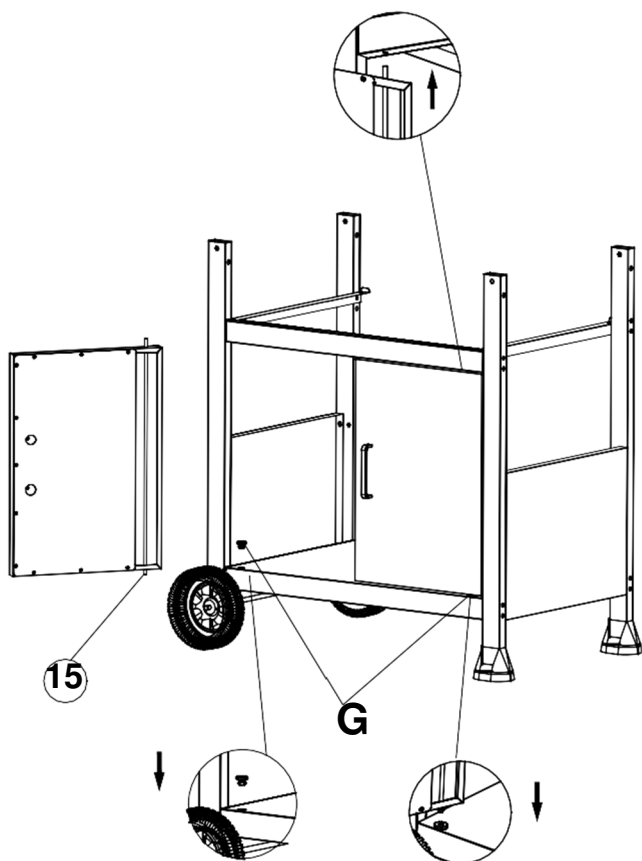


Install the door

10. B M5*12 4PCS
A M5*55 4PCS

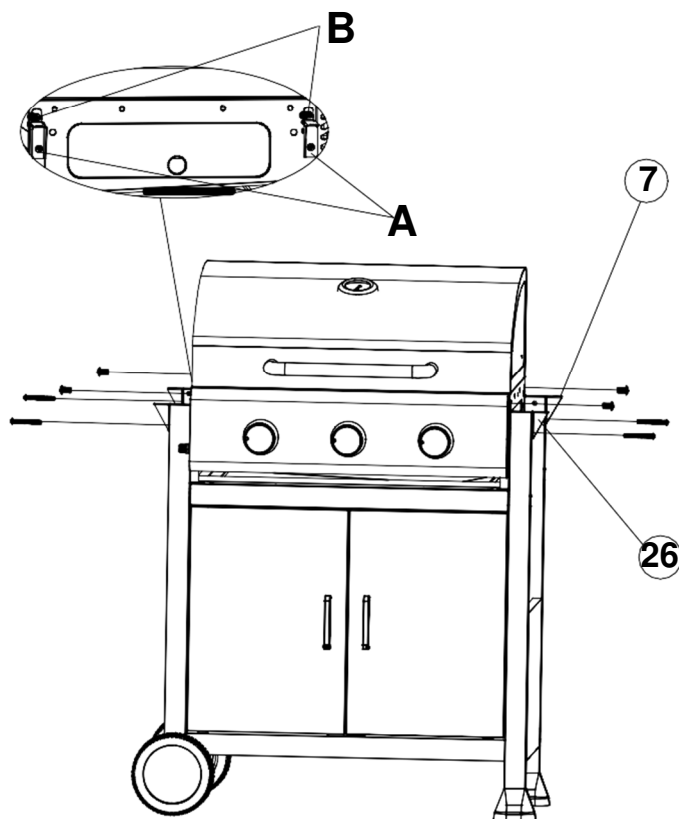


Install the firebox on trolley

11.

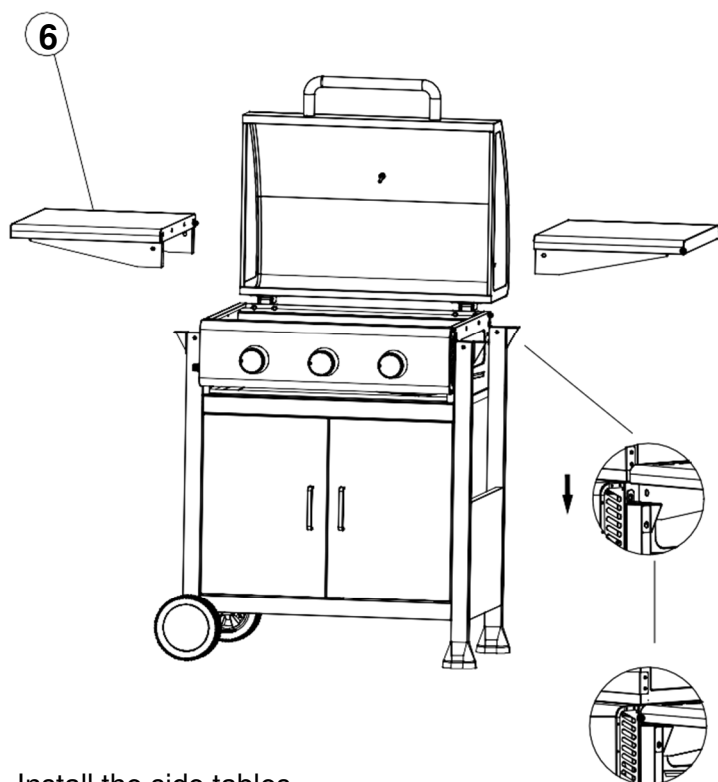


Install the side tables

12. B M5*12 20PCS

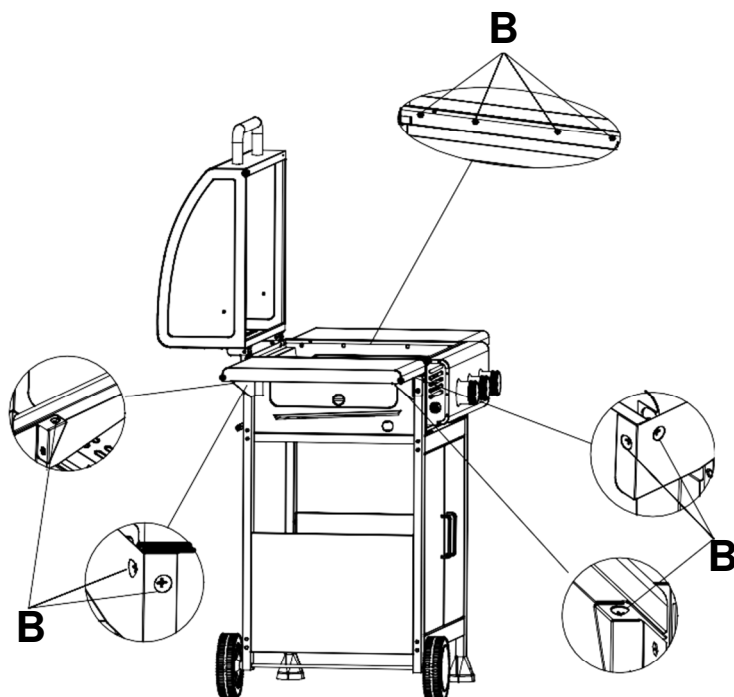


Fix the side tables

13.

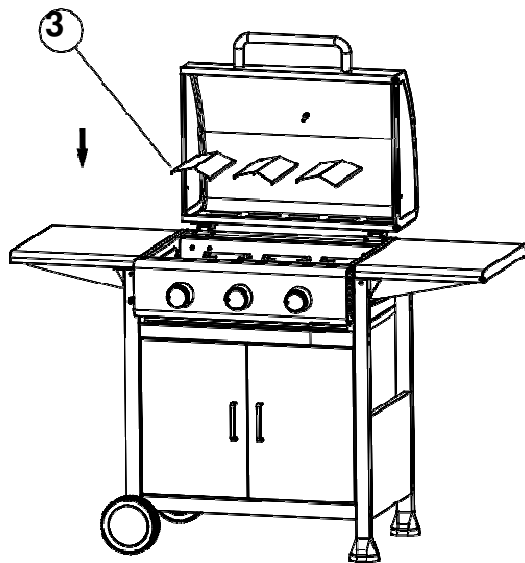


Place the flame tamers into the trolley.

14.

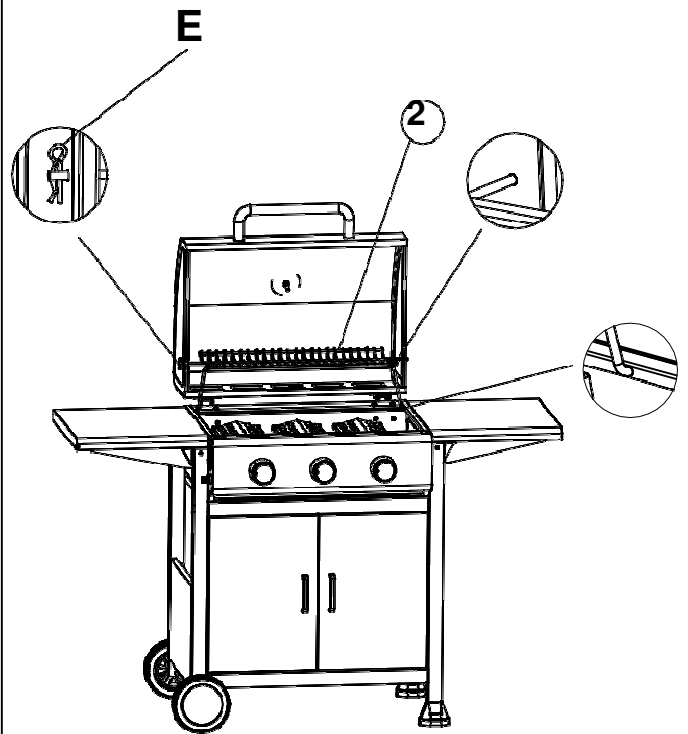


Place the warming rack onto the trolley make sure the warming rack is flat and stable.

15.

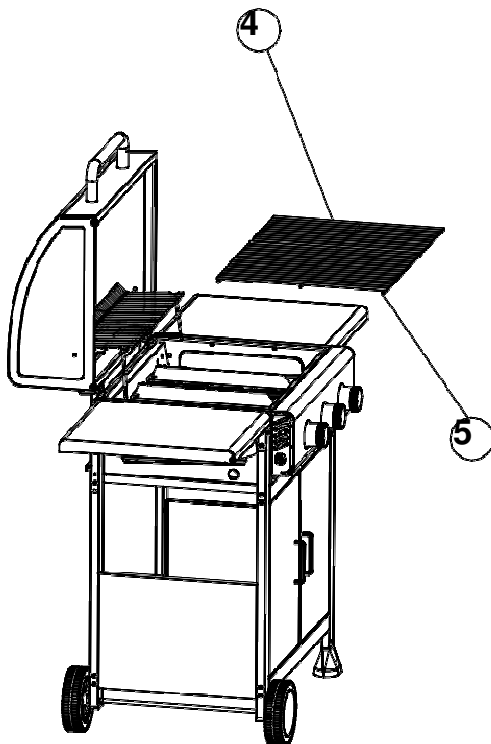


Place the cooking grills into the trolley.

16.

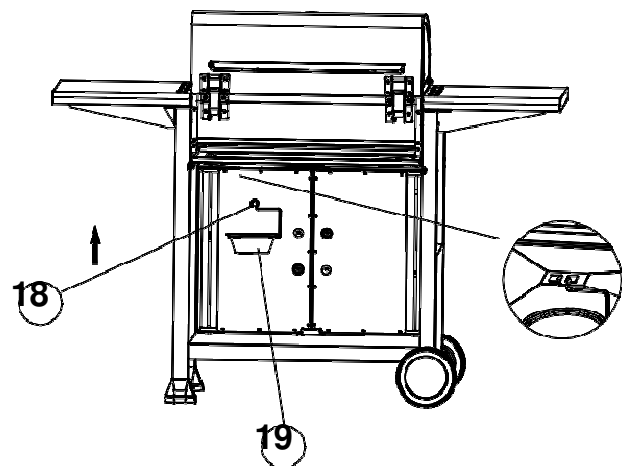


Attach the grease cup to the grease tray. The grease cup needs to be under the grease drip hole.

17.

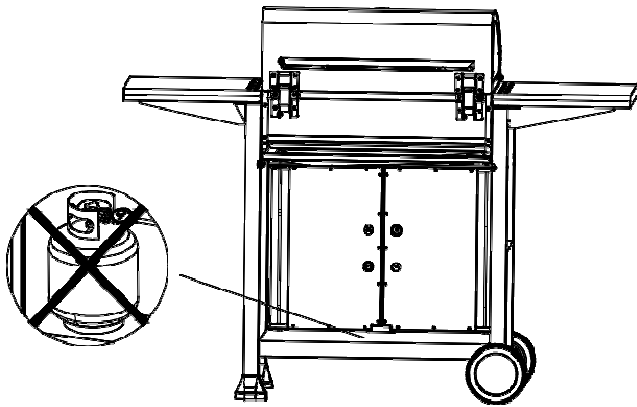

18.

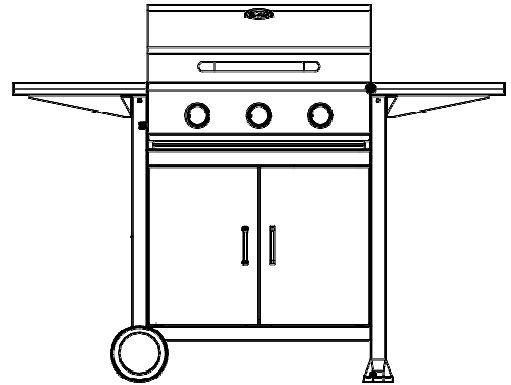

Plancha gaz station 3 burners



Reference : DOC279
Version : 1.5
Language : English

Instruction Manual

You have purchased a product LIVOO brand and we thank you. We take great care in design, ergonomics and ease of use of our products. We hope that this product will give you complete satisfaction.

This instruction manual is also available on our website www.livoo.fr

LIVOO					
Model.	DOC279				
CS Number	CS 117884				
Description:	Plancha gaz station 3 burners				
Max power	9kW (654g/h)	CE 2575-21 Pin: 2575DM30340			
Category of gaz :	I ₃₊ (28-30/37) 	I _{3B} /P(30)	I _{3B} /P(50)	I _{3B} /P(37)	
Types of gas :	Butane (654g/h)	Propane (642g/h)	LPG GAS MIXTURES (654 g/h)		
Gas pressure :	28-30 mbar	37 mbar	30 mbar	50mbar	37 mbar
Injector size :	0.86 mm		0.86 mm	0.76 mm	0.82 mm
Injector mark :	0.86			0.76	0.82
Number and code	20211125				
Year	2021				
To be used only outside the premises This appliance must be installed in accordance with current regulations and used in a well-ventilated area Consult the instructions before use Caution: accessible parts can be very hot, keep away from young children This appliance must be kept away from flammable materials during use Do not move the appliance during use Close the gas container valve after use. Do not modify the appliance					
DESTINATION LAND					
I ₃₊ (28-30/37): BE, CH, CY, CZ, ES, FR, GB, GR, IE, IT, LT, LU, LV, PT, SK, SI.					
I _{3B} /P(30): BE, CY, DK, EE, FI,FR, HU, IT, LT, NL, NO, SE, SI, SK, RO, HR, TR, BG, IS, LU, MT.					
I _{3B} /P(50): AT, CH, DE, SK					

Instruction Manual

I3B/P(37), PL

DELTA - BP61071 - 67452 Mundolsheim - FRANCE

General Safety Instructions

1. PLEASE READ THE FOLLOWING INSTRUCTIONS CAREFULLY BEFORE USING THE APPLIANCE AND KEEP THEM FOR FUTURE
2.  **CAUTION: This appliance will become very hot. Do not move it during use.**
3. **Do not move the unit while in use.**
4.  **CAUTION: Do not leave the appliance within the reach of children and pets.**
5. Never leave the appliance unattended during use.
6. Do not allow children to use or play with the appliance.
7. Use the appliance only for its intended purpose.
8.  **WARNING! Do not use in closed or confined spaces. Make sure it is placed in a well ventilated area.**
9. **The appliance is intended for outdoor use only and in accordance with local regulations.**
10. Incorrect use or action and non-compliance with the safety instructions in this manual can result in serious injury or

Instruction Manual

death.

11. Incorrect use or action and failure to observe the safety instructions in this manual may result in fire or explosion, causing serious material damage.
- 12. Carry out a leak test every year and whenever the gas cylinder is changed or disconnected. Check that the gas hose connections are tight and in good condition.**
- 13. The appliance must be installed on a flat, level, stable and heat-resistant surface or floor before and during use.**
14. Do not obstruct the ventilation openings of the barbecue/plancha.
15. Do not use near flammable materials or substances. Do not store unplugged gas cylinders or aerosol cans near this appliance. Do not use within 1.5 metres of combustible material.
16. No ignition products should be used with this appliance.
17. Do not lean over the appliance during lighting or cooking.
18. This appliance is for private use only. Do not use at events or in public places.
19. Do not modify the appliance. This gas grill must be assembled according to the assembly instructions provided. If the appliance has been assembled in a shop, make sure that the assembly has been carried out correctly and carry out a leak test before using the grill. Incorrect assembly of the appliance can be dangerous.
20. Do not use the barbecue/plancha in strong winds.
21. Do not use the barbecue/plancha if all parts are not in place.

Instruction Manual

Be sure to follow the assembly instructions to properly assemble this barbecue/plancha. Incorrect assembly can be dangerous.

22. Use appropriate heat-resistant barbecue utensils to handle cooking food. Wear protective gloves when using the barbecue/plancha to avoid burns. Some accessible parts can be very hot.
23. Do not cover the cooking grate with foil, dish or container to avoid heat build-up. Do not cook in foil.
24. If your appliance has a lid, be careful when opening it. Hot steam may be released from the inside.
25. DO NOT cook with the lid (if fitted) down when the valves are on high heat, otherwise your appliance may be damaged.
26. Allow the barbecue/plancha the ashes and its accessories or parts to cool down completely before cleaning and storing it. It is recommended to empty the ashes 24 hours after using the barbecue/plancha.
27. Always allow to cool before storing or cleaning.
28. Clean the appliance and its accessories after each use to avoid the accumulation of grease (risk of fire).
29. Please store the appliance in a dry and sheltered place.
30. For details on how to clean food contact surfaces, refer to the following paragraph of the manual.
31. If you detect a smell of gas:
 - Turn off the gas supply to the appliance
 - Open the lid if the model has one

Instruction Manual

- Extinguish any open flame
- If the smell persists, stop using the appliance, move away from the appliance and contact your dealer or the fire brigade immediately.

A gas leak may cause a fire or explosion which could result in serious injury or death or damage to property.

32. Always close the gas cylinder when you are not using your barbecue/plancha.
33. Please purchase gas connection accessories (hose, regulator and gasket) that comply with the national regulations in force in the country of destination. These components must be replaced periodically, according to the date indicated on the body of each of them, or according to the national regulations in force in the country of destination.
34. The gas supply pipe (not supplied) must be installed so that it does not come into contact with the hot surfaces of the grill during operation or during storage and travel.
35. Never attempt to disconnect the pressure regulator or any gas connection while using the barbecue/plancha.
36. Follow the instructions for connecting the regulator for your gas barbecue/plancha.
37. Inspect the gas supply hose before each use. If it is excessively cracked, worn or cut, it must be replaced with a pressure regulator and hose assembly specified by the manufacturer before using the grill hose with a replacement assembly specified by the manufacturer

Instruction Manual

before using the grill.

38. Do not overtighten connections. Do not use Teflon tape or sealing fluids on connections.
39.  **Warning. Never connect your appliance to town gas (natural gas). The gas circuit is designed exclusively for butane/propane gas (G30/G31).**
40. Ensure that the gas cylinder is placed outside the appliance during use.
41. Gas cylinders must never be used or stored lying down
42. After each use, ensure that all control levers are in the off position (STOP) and that the gas cylinder supply is closed.

Although this appliance has been manufactured to avoid sharp edges, care should be taken when handling all parts to avoid the risk of injury.

Remove all protective packaging and keep it away from children. Read the safety instructions carefully before you start using your barbecue/plancha.

Refer to the parts list and assembly diagrams to assemble your barbecue/plancha. Make sure that no parts or pieces are missing or damaged/broken, which could impair the proper functioning of the appliance. The guarantee for this appliance cannot be applied for abnormal conditions of use, incorrect storage conditions, lack of maintenance, modification of the product, use for professional purposes, etc.

IGNITION

Make sure that the appliance is positioned on a stable, flat surface.

Wear protective gloves and open the vents wide (if the model has them) so that the air can flow in and accelerate the combustion.



CAUTION: This barbecue/plancha will become very hot. Do not move it during use.

This product is intended for use with bottled gas only.

A regulator in accordance with EN16129 of 28 mbar must be used for butane gas or 37 mbar for

Instruction Manual

propane gas.

Never use an adjustable regulator with the product.

Make sure that the regulator is correctly set so that the supply pipe and valves are filled with gas.

Otherwise, the burners will not have enough power and will not light or will cut out regularly.

If you need to replace the gas cylinder, make sure that the appliance is switched off and that there is no source of ignition nearby (spark, cigarette, open flame, etc.).

Make sure that the gas hose is not twisted, stretched, bent or kinked to allow free flow of gas.

ASSEMBLY INSTRUCTION

CHECK JOINED DOCUMENT WITH ASSEMBLY INSTRUCTIONS

INSTRUCTIONS FOR USE

Never grill your food in the flames.

Flames can be caused by residues of grease and juice dripping onto the burners. To imitate the flames, clean the burners regularly, when not in use and when the appliance is completely cool.

The burners should ALWAYS be in the low position during cooking.

Protect your hands when cooking with protective gloves.

Do not use in strong winds. Do not use wood or lava stone.

1. Assembly steps

Make sure your grill is assembled correctly. The detailed assembly instructions below provide specific assembly procedures for each model. Follow these instructions carefully to ensure proper assembly of your grill.

Caution: While we strive to make the assembly process as easy as possible, machined steel parts may have sharp corners and edges that can cause cuts if handled improperly during assembly procedures. Use caution when handling parts during assembly. It is strongly recommended that you protect your hands with a pair of work gloves.

This equipment must be installed with sufficient ventilation to prevent unacceptable concentrations of substances harmful to health from developing in the area where it is installed.

2. Preparation

You will need a gas cylinder and a regulator appropriate for the gas pressure to operate this gas barbecue. The regulators must comply with the NF standard for France, and BSEN 16129:2013 for other countries.

Note: For other countries, the cylinder and regulator are dependent on the national situations of the recipient countries.

Consejos para ahorrar energía:

a) Réduire le temps nécessaire à l'ouverture du couvercle.

Instruction Manual

- b) Éteignez le gril dès que la cuisson est terminée.
- c) Ne préchauffez le gril à gaz que pendant 10 à 15 minutes. (Sauf pour la première utilisation)
- d) Ne pas préchauffer plus longtemps que recommandé.
- e) N'utilisez pas un réglage plus élevé que nécessaire.
- f) Raccordez le tuyau et le régulateur au réservoir de gaz situé sur le côté gauche du gril à gaz, en tenant compte du fait que le réservoir de gaz doit être maintenu à l'écart de la chaleur et dans une position sûre. La longueur recommandée du tuyau ne doit pas dépasser 1,5 m.

3. Installation

After purchasing your gas cylinder, you are ready to install it with your gas grill.

- a) Changing the gas cylinder should be done away from any source of ignition. Place the gas cylinder on the left side or inside of your barbecue, keeping in mind that the cylinder must be kept away from heat and in a safe position.
- b) When you are ready to use your gas barbecue insert the regulator into the gas bottle valve and tighten it firmly.



Caution: Before attempting to light your gas barbecue, you must refer to the lighting instructions and the safety and warning points.

Check the hose before each use for cracks, cuts or scratches. If the hose is found to be defective, do not attempt to use your gas barbecue under any circumstances.

When changing your gas cylinder, make sure there are no sources of ignition nearby (fire, cigarettes, open flames, etc.).

Make sure the hose is not twisted in any way that would affect the flow of gas when installing your gas grill. The hose should not have excessive tension and should not touch any part of the gas grill that may be hot.

Please choose a flexible hose that is resistant to heat over 80 °C


The flexible hose should be changed when the expiration date indicated on the hose is reached. It is necessary to change the flexible tube when national conditions require it and if it is found to be defective.

How to change your cylinder

- Note: turn off the gas cylinder (no key is needed)
- If you place the gas bottle outside the barbecue the height of the gas bottle must be less than 47 cm, and the width less than 31 cm. The net weight of the gas bottle should not exceed 5 kg;


Instruction Manual

Figure 1

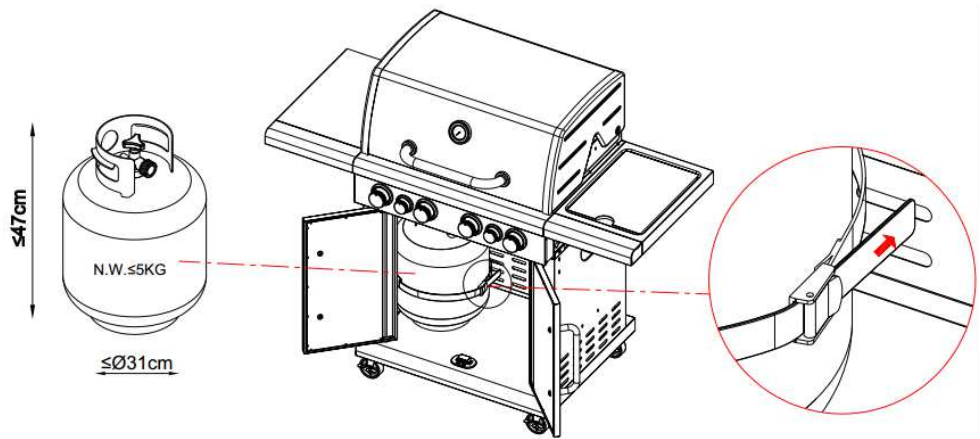


If you place the gas cylinder outside the barbecue, the height of the gas cylinder is less than 80 cm and the width is less than 35 cm, the net weight of the gas cylinder should not exceed 15 kg

Figure 2

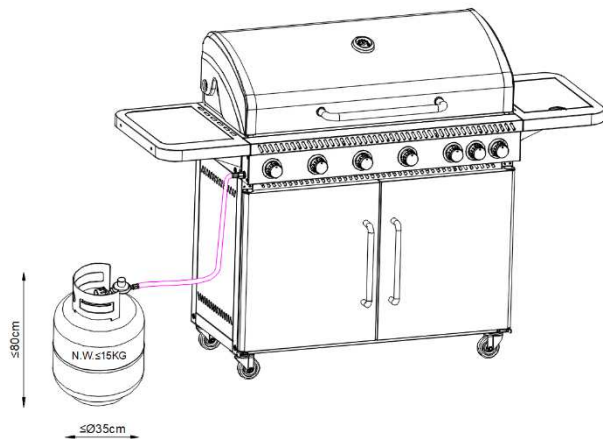

How to connect the gas cylinder

This appliance is designed only for use with low pressure butane, propane or their mixture of gases and a suitable **low pressure regulator** using a flexible hose. The hose must be attached to the regulator and the appliance with hose clamps.

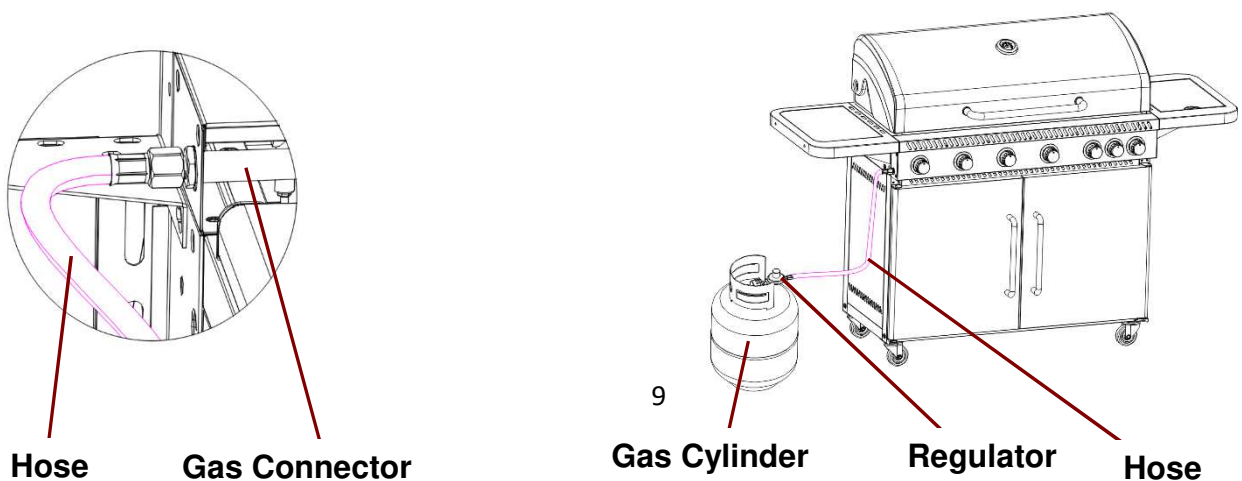

Instruction Manual

Illustration for barbecue and hose connection

Illustration for connection of gas cylinder, regulator and hose

Figure 3



Warning: Always check for leaks in the gas line at the connector with soapy water by terminating all connections.


How to disconnect a gas cylinder

- Except in the case of two-cylinder installations with a switching valve, close the gas stopcock if it is installed on the appliance. Wait until the burner and pilot have extinguished. In installations with a reversing valve, it is only necessary to close the empty cylinder.
- Replace the orange safety cap on the empty gas cylinder.

Inserting / changing the batteries (if available)

This appliance is equipped with a battery-operated igniter which ignites the electrodes of one group of burners (left and right) at a time.

- Remove the electronic igniter cover by turning it counterclockwise (Fig.1).
- Insert an LR6/AA into the tube (Fig.2). Observe the correct polarity (+ and -).
- Screw the cap back on clockwise (Fig.3).

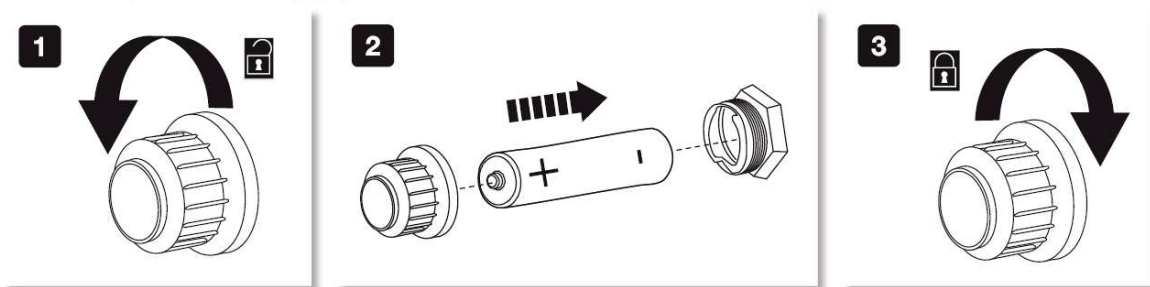

4. Safety Precautions

- Always check for leaks in the gas line at the connector with soapy water after making connections.
- The top cover must always be open when lighting the burner.
- Use oven gloves and sturdy, long-handled utensils when cooking on the grill.
- Be prepared in case of an accident or fire. Know where the first aid kit and fire extinguishers are and how to use them.
- Keep any electrical power cords and the fuel supply hose away from any heated surfaces.

Instruction Manual

f) Always cook very carefully.

g) Do not heat any unopened glass or metal containers on the grill. Pressure may build up and cause the container to burst, which could result in serious personal injury or damage to the grill.

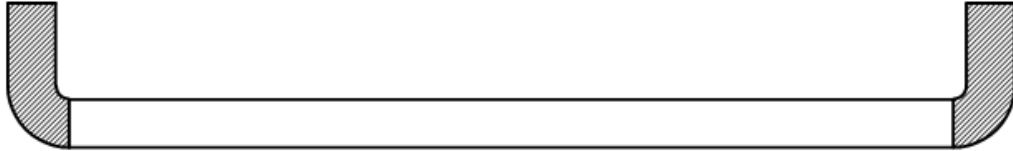


Figure 4



WARNING: The black area on the handle (see image above for reference) will become hot when the gas grill is in use, be careful! Do not touch the black area.

LIGHTING INSTRUCTIONS

Caution: The lid must be open when lighting the burner.
Do not stand with your face directly over the gas grill when lighting it.
Your gas grill will have the following method of ignition:

Pilot gas control ignition (main burner or main burner with side burner or main burner with side burner and rear burner):

With all gas controls on the gas grill in the "OFF" position, turn the gas cylinder valve to the ignition position on the regulator. To create a spark you must press the gas control knob (A) and hold it in this position for 3-5 seconds to allow gas flow and then turn counterclockwise to "HI" (B). You can jump the spark to the burner ignition tube (C). You will hear a "click" from the igniter and also see an orange flame coming out of the burner ignition tube on the left side of the burner (D). Continue to hold the gas control knob for two seconds after the "click", this will allow the gas to flow completely through the burner tube (E) and ensure ignition. When the burner is lit, adjacent burners will cross-light when their knobs are set to "HI". In the "HI" position, the burner flame should be approximately 12-20 mm long with a minimum orange flame. Turn the gas control knob fully counterclockwise to obtain the minimum setting. If you have any difficulty lighting your gas grill by following the above steps, contact your dealer for advice. If you are unable to use the automatic ignition, remove the cooking grate and heat diffuser (hotplate), and turn the valve counterclockwise 90°, to ignite with a barbecue lighter at a distance of 5 mm from the burner fire hole. Replace the cooking grate and heat diffuser (hotplate), please wear the flame retardant and heat resistant gloves.



Warning: If the burner still does not light, turn the gas control knob to "● OFF" and wait 2 minutes for the unburned gas to evaporate before turning the burner back on.

Instruction Manual

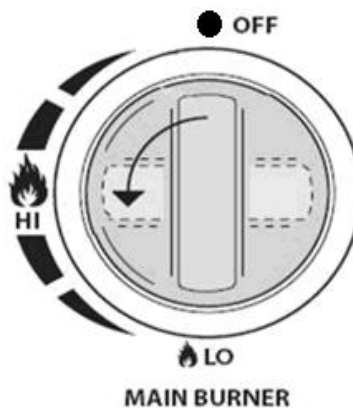
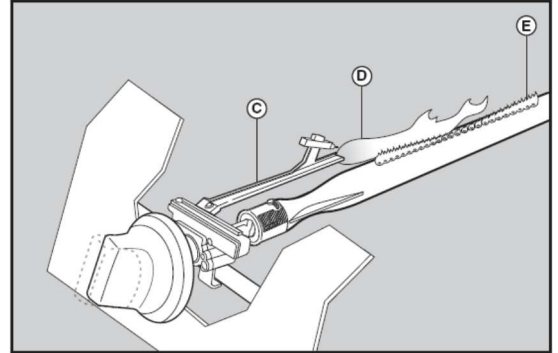
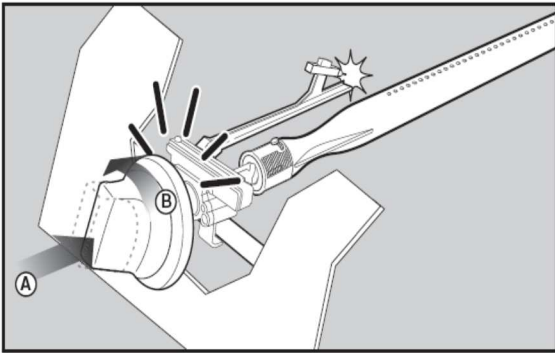


Figure 5

STORAGE AND CLEANING

Rust spots may appear on the product due to the metallic particles contained in the stainless steel used in the manufacture of this product. We recommend that you brush them off quickly to limit their spread.

After each firing, wait for the product to cool down completely.

Empty the grease trap and clean your appliance and utensils after each use to avoid a highly flammable and toxic grease deposit on the cooking surfaces.

Do not use sharp objects or abrasive cleaners on the cooking surface. It is preferable to use a heavy-duty degreaser.

Do not leave standing water in the appliance; this can lead to rust and rapid deterioration of the materials.

Protect your appliance with a cover if you leave it outside in fine weather. Protect from rain and moisture during extended periods of non-use.

Before use, check the hose for nicks, cracks and signs of severe wear. Make sure the expiry date has not passed.

Carry out a leak test at the beginning of each season and each time you replace the cylinder to ensure that the appliance and its connections are working properly.

NEVER USE AN OPEN FLAME TO DETECT GAS LEAKS. DO NOT LIGHT THE APPLIANCE DURING THE TEST.

Turn all appliance controls to STOP, Connect your gas cylinder correctly, Open the gas cylinder valve.

To detect a leak, brush a solution of equal parts liquid soap and water over all the gas connections (valves, hose, regulator and hex nut).

If bubbles form anywhere, this indicates a leak.

Instruction Manual

GAS CYLINDER

The appliance can be used with any gas cylinder of weights between 4.5KGS and 15KGS butane and 3.9KGS to 13KGS propane. The gas cylinder should not be dropped or handled roughly! If the appliance is not in use, the cylinder must be disconnected. Replace the protective cap on the cylinder after disconnecting the cylinder from the appliance.

Cylinders must be stored outdoors in an upright position and out of the reach of children. The cylinder must never be stored where temperatures can reach over 50°C.

The height of the gas cylinder is below the 80cm, and the width is within 35cm.

CLEANING

Performing a "heat cleaning" (by heating the griddle) after each use (for about 15 minutes) will remove some of the food residue.

OUTSIDE SURFACE

Use mild detergent or baking soda and hot water solution. Non-abrasive scouring powder can be used on stubborn stains, then rinse with water.

Clean thoroughly with strong hot soapy water solution. Rinse with water and allow to completely dry. NEVER USE OVEN CLEANER

COOKING PLATE

Remove residues with a brush, scraper and/or sponge, then wash with a soapy water solution. Rinse with clean water and allow to dry completely.

Clean with a soft cloth and soapy water. Rinse with clean water. Do not use abrasive cleaners, paint strippers or grill cleaner on the plastic parts.

CÓMO LIMPIAR EL ENSAMBLE DEL QUEMADOR

Asegúrese de que los tubos de ventilación del quemador estén limpios y que no haya obstrucciones. Le recomendamos que utilice un limpiador de tuberías para limpiar la zona del tubo venturi.

TROUBLE SHOOTING

Emergencies	Possible cause	Prevention/ Solution
Gas leaking from cracked/cut/burned hose	Damaged hose	Turn off gas at LP tank, if hose is cut or cracked, replace hose. See LP tank lead test and connection regulator to the LP tank
Gas leaking from LP tank	Mechanical failure due to resting or mishandling	Turn off LP tank valve. Return LP tank to gas supplier

Instruction Manual

Gas leaking from LP tank valve	Failure of tank valve from mishandling or mechanical failure	Turn off LP tank valve. Return LP tank to gas supplier
Gas leaking between LP tank and regulator connection	Improper installation, connection not tight, failure of rubber seal	Turn off LP tank valve, remove regulator from cylinder and visually inspect rubber seal for damage, see LP tank test and connection regulator to the LP tank
Fire coming through control panel	Fire in burner tube section of burner due to partial blockage	Turn off control knobs and LP tank valve. After fire is out and grill is cold, remove burner and inspect for spider nests or rust. see natural hazard and cleaning the burner assembly pages.

Troubleshooting: Problem	Possible cause	Prevention/ Solution
Grease fire or continuous excessive flames above cooking surface	Too much grease buildup in burner area	flames to die down. After cooling, clean food particles and excess grease from inside firebox area, grease cup/pan/tray, and other surfaces
Burner will not light using ignitor	Gas issues 1. Trying to light wrong burner 2. Burner not engaged with control valve 3. Obstruction in burner 4. No gas flow 5. Vapor lock at coupling nut to LP tank 6. Coupling nut at LP tank valve not fully connected.	1. See instructions on section Lighting instructions 2. Make sure valve are positioned inside of burner tubes. 3. Ensure burner tubes are not obstructed with spider webs or other matted, see cleaning section of use and care 4. Make sure LP tank is not empty. 5. Turn off knobs and disconnect coupling nut from LP tank. Reconnect and retry. 6. Turn the coupling nut approximately one-half to three-quarters

Instruction Manual

Burner will not light using ignitor	Electrical issues: 1. Electrode cracked or broken;" sparks at crack." 2. Electrode tip not in proper position 3. Wire and/or electrode covered with cooking residue. 4. Wires are loose or disconnected 5. Wires are shorting (sparking) between ignitor and electrode. 6. push button sticks at bottom sparking between ignitor and electrode	1. Replace electrode. 2. Tip of electrode should be pointing toward port hole in burner. The distance should be 1/8" to 3/16". Adjust if necessary. 3. Clean wire and or electrode with rubbing alcohol and clean swab. 4. Reconnect wires or replace electrode/wire assembly. 5. Replace ignitor wire 6. Replace ignitor 7. Inspect wire insulation and proper connection. Replace wires if insulation is broken.
Burner will not light	See "gas issues;" on previous page. 1. Improper method of match-lighting	1. See "Pilot Gas Control Ignition" section of use and care.
Sudden drop in gas flow or low flame	1. Grease buildup. 2. Excessive fat in meat. 3. Excessive cooking temperature	1. Clean burners and inside of grill/ firebox 2. Trim fat from meat before grilling.
Flames blow out	High or gusting winds. Low on LP gas. Excess flow valve tripped.	Turn front of grill to face wind or increase flame height. Refill LP tank. Refer to "sudden drop in gas flow" above.
Persistent grease fire	Grease trapped by food buildup around burner system.	Turn knobs to OFF. Turn gas off at LP tank. After grill cools, remove and clean all parts
Flashback... (fire in burner tube(s))	Burner and burner tubes are blocked	Turn knobs to OFF. clean burner and/or burner tubes. See burner cleaning section of cleaning and care manual
Flame-up	1. Grease buildup. 2. Excessive fat in meat. 3. Excessive cooking temperature	1. Clean burners and inside of grill/ firebox 2. Trim fat from meat before grilling. 3. Adjust (lower) temperature
One burner does not light from other burner(s)	Grease buildup or food particles in end of carry over tube	Clean carry-over tube with wire brush

Instruction Manual

UE DECLARATION OF CONFORMITY

We

DELTA

BP61071

67452 Mundolsheim – France

Declare under our own responsibility that the article :

- **Description : 4 burners gaz barbecue**
- **Reference : DOC279**

to which this declaration applies, is in conformity with the applicable EU harmonization legislation :

DIRECTIVES	STANDARDS or SPECIFICATIONS
2016/426 (appliances burning gaseous fuels and repealing)	The notified body INTERTEK, n°2575, has delivered the CE certificate 210610074GZU-001 on the 05/11/2020 which is valid until 19/09/2031 EN498 2012 EN484 2019+AC 2020

Mundolsheim, the 31/03/2022



**Correct disposal of the unit
(Electrical and Electronic Equipment)**

(Applicable in the European Union and the rest of Europe that have adopted separate collection systems countries)

The European Directive 2012/19/EU on Waste Electrical and Electronic Equipment (WEEE), requires that old household electrical appliances must not be disposed of in the normal household waste stream. Old appliances must be collected separately in order to optimize the recovery and recycling of the materials they contain and reduce the impact on human health and the environment. The symbol of the crossed out dustbin is marked on all products to remind the obligations of separate collection.

Consumers should contact their local authority or retailer for information concerning the correct disposal of their product.

Instruction Manual



Pour en savoir plus :
www.quefairedemesdechets.fr

LIVOO
BP 61071
67452 Mundolsheim - FRANCE

- Photo no contractual
- Worried about the quality of his products the manufacturer reserves the right to make modifications without advance notice