

Jungle Toaster



Reference : DOD170
Version : 1.4
Language : English

LIVOO

Feel good moments

User manual

You have purchased a product LIVOO brand and we thank you. We take great care in design, ergonomics and ease of use of our products. We hope that this product will give you complete satisfaction.

SAFETY ADVICES

PLEASE, TAKE TIME TO READ WELL THE INSTRUCTIONS FOR USE
PARTICULARLY BEFORE THE FIRST USE.

A misuse of the appliance can damage it or hurt the user. Assure that you use the appliance for the use for which it is designed; we refuse any responsibilities as for the damages by an incorrect use or a bad manipulation.

1. The appliance is intended for household use. All other using is forbidden. Don't use outdoor.
2. Before plugging in check that the voltage of your wall outlet corresponds to the rated voltage manner.
3. The appliance should only be connected to an earthed socket.
4. This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental

capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.

5. Children shall not play with the appliance.
6. Cleaning and user maintenance shall not be made by children unless they are older than 8 years and supervised.
7. Keep the appliance and its cord out of reach of children less than 8 years.
8. Never leave the appliance unsupervised when in use.
9. Unplug the appliance when not in use or when you clean it.
10. Never used the appliance :
 - If the power cord is damaged
 - In case of bad operation
 - It has been damaged in any manner
 - It has been submerged in water

- If you dropped it
- 11. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons (*) in order to avoid a hazard.
- 12. Never immerse the base of your appliance in water or any other liquid for any reason whatsoever. Never place it into the dishwasher.
- 13. Regarding the instructions for cleaning surfaces in contact with food, thanks to refer to the below paragraph “cleaning” in the manual.
- 14. To reduce the risk of electric shock, never operate this product with wet hands.
- 15. Do not let cord hang over edge of table or counter or touch hot surface.
- 16. Never unplug the appliance by pulling the cord.
- 17. Unwind the cord of its flat to avoid the

superheating of the appliance.

18. Do not place an appliance on or near a hot gas or on a heated oven.
19. The appliance is not intended to be operated by means of external timer or separate remote control system.
20. It is absolutely necessary to keep this appliance clean at all times as it comes into direct contact with food.
21. Surfaces are liable to get hot during use.
22. This appliance is intended to be used in household and similar applications such as:
 - staff kitchen areas in shops, offices and other working environments
 - farm houses
 - by clients in hotels, motels and other residential type environments
 - bed and breakfast type environments

(*) **Competent qualified electrician:** after sales department of the producer or importer or any person who is qualified, approved and competent to perform this kind of repairs in order to avoid all danger. In any case you should return the appliance to this electrician.

This instruction manual is available too on our website www.livoo.fr

SPECIAL MEASURES

Warning: Hot surface

- Empty the crumb tray frequently. Crumbs will accumulate in the crumb tray and could catch fire if not emptied periodically.
 - Do not touch hot surfaces. Use Handles or knobs.
1. Hand or utensils as pins or needles must not be inserted in a toaster as they may involve a risk of fire or electric shock.
 2. The bread may burn, therefore do not use the toaster near or below combustible material, such as curtains. They must be watched.
 3. Only use the appliance for domestic purposes and in the way indicated in the instructions.

4. The supplier can't be responsible in case of bad operation or if user didn't respect the safety instruction.
5. Do not place or insert nothing above the appliance.
6. Do not toast or reheat bread with butter or covered with jam.
7. Do not toast bread not suitable size or which is deformed.
8. Stand the appliance on a table or flat surface, clean and resistant to heat.
9. Do not take the bread during the heat.
10. Do not place the appliance near electric or gas hot plate and warm oven.
11. Toasting Lever must be in the "Up" position before attaching or disconnecting the plug from wall outlet.
12. Make sure the crumb tray is clean and place correctly before using the appliance.

LIVOO

Feel good moments

User manual

SPECIFICATIONS

Voltage: 220-240V 50-60Hz

Power: 715-850W

DESCRIPTION



- 1. BREAD SLOT**
- 2. TOASTER LEVER**
- 3. HOUSING**
- 4. STOP BUTTON**

- 5. DEFROST BUTTON**
- 6. REHEAT BUTTON**
- 7. TOASTER DARKNESS CONTROL**
- 8. CRUMB TRAY**

USE

Before using the appliance the first time

1. Remove all packaging materials and any transport safety devices.
2. Check to make sure that all accessories are present.
3. Clean the toaster with a damp cloth, as described in the chapter "Cleaning and care".
4. Check to make sure that all parts are assembled correctly and the appliance is stable. Make sure that there is sufficient space between the toaster and walls or other appliances, since the toaster becomes hot during operation.
5. Connect the appliance via the power cord to the power supply (220-240V 50-60Hz).
6. Before toasting bread the first time, conduct one toasting cycle without bread. Press the toast lever down until it locks into place.
7. When the toasting cycle is completed, the toast lever automatically jumps up. Now you can start toasting bread.

LIVOO

Feel good moments

User manual

Operation - Toasting

1. Prepare the toaster as described in the section "Before using the appliance the first time".
2. Place the bread slices in the slots in the toasting chamber.
3. Set the desired toast darkness with the darkness control. You can select from seven toast darkness settings: level 1. is very light and level 7. is very dark. For golden brown toast set the lever in the middle position.
4. Press the toast lever down until it locks into place. The indicator lamp for "Stop" lights up and the toaster starts toasting.
5. You can interrupt the toasting cycle any time by pressing the "Stop" button.
6. When the bread has been toasted to the set darkness, it is automatically ejected. The appliance shuts off automatically.
7. For easier removal of the toasted bread slices, the toaster features a lift function. Press the toast lever upward to remove the toast.

Operation - Thawing

The DEFROST function first thaws out the bread and then toasts it, which means that the thawing cycle lasts somewhat longer than the normal toasting cycle.

1. Place the bread slices in the slots in the toasting chamber.
2. Press the toast lever down until it locks into place.
3. Select the desired toast darkness setting.
4. We recommend the following toast darkness settings:
 - *Low for bread from the refrigerator or thin frozen bread slices. (1-2 for light toasting)
 - *Medium for frozen waffles (3-4 for medium toasting)
 - *High for thicker frozen bread slices and thick toast slices. (5-7 for dark toasting)
5. Press the toast lever down until it locks into place.
6. Then press the button "DEFROST" right away. The indicator lamp on this button lights up.
7. The bread or roll is thawed and toasted.
8. You can interrupt the cycle any time by pressing the "Stop" button.
9. After completion of the thawing cycle the bread is automatically ejected and the indicator lamps goes out. The appliance shuts off automatically.

Reheat Function

Your toaster can re-heat toast if it has cooled too quickly.

1. Replace the toast in the toaster.
2. Set the browning control to a low setting.
3. Press the loading handle down.
4. Press the REHEAT button, the reheat indicator will light up ensure toast doesn't burn.
5. The loading handle will rise automatically when toast is reheated.

Tips for ideal toasting results

1. Different types of bread have varying moisture content. Therefore, the same toast darkness setting can produce different results.
2. For bread that is slightly dry, use a lower toast darkness setting.
3. For fresh bread or whole grain bread, use a higher toast darkness setting.
4. Bread with an irregular surface requires a higher toast darkness setting.
5. Thick bread slices need more time for toasting; it may even be necessary to toast the bread a second time.
6. When toasting raisin bread, remove all raisins from the surface, since otherwise they could burn.

LIVOO

Feel good moments

User manual

7. If you toast only one slice, please select a low toast darkness setting.
8. If you toast several slices one after the other, the bread will be somewhat darker at the same toast darkness setting.
9. To toast frozen bread, waffles, etc. Please use the thaw button.

CLEANING AND STORAGE

1. Allow the appliance to cool before cleaning it.
2. Before cleaning, always turn off the appliance and unplug it from the power supply.
3. Do not immerse the appliance and power cord in water or other liquids or wash them in the dishwasher.
4. Wipe off the toaster with a damp cloth and a little dish washing detergent. Do not use any abrasive scouring agents, steel wool, metal objects, hot cleaning agents or disinfectants, since they can damage the appliance.
5. To remove stuck bread slices, unplug the toaster and turn it over and shake lightly. Never attempt to remove stuck bread slices with sharp or pointed tools or silverware.
6. Remove crumbs and any small pieces of bread from the crumb tray regularly. To do this, pull the crumb tray on the side all the way out and empty it. Wipe the crumb tray with a damp cloth, then dry it thoroughly and push it back into the appliance.
7. The appliance must be completely dry before you use it again.

LIVOO

Feel good moments

User manual



Correct disposal of the unit (Electrical and Electronic Equipment)

(Applicable in the European Union and the rest of Europe that have adopted separate collection systems countries)



The European Directive 2012/19/EU on Waste Electrical and Electronic Equipment (WEEE), requires that old household electrical appliances must not be disposed of in the normal household waste stream.

Old appliances must be collected separately in order to optimize the recovery and recycling of the materials they contain and reduce the impact on human health and the environment.

The symbol of the crossed out dustbin is marked on all products to remind the obligations of separate collection.

Consumers should contact their local authority or retailer for information concerning the correct disposal of their product.



Pour en savoir plus :

www.quefairedemesdechets.fr

LIVOO
BP 61071
67452 Mundolsheim - FRANCE

- Photo no contractual
- Worried about the quality of his products the manufacturer reserves the right to make modifications without advance notice