

Automatic kettle – tea pot



Reference : DOD175
Version : 1.5
Language : English

You have purchased a product LIVOO brand and we thank you. We take great care in design, ergonomics and ease of use of our products. We hope that this product will give you complete satisfaction.

Safety Advices

PLEASE READ THESE INSTRUCTIONS CAREFULLY BEFORE USING THE APPLIANCE AND SAVE IT FOR ANY FURTHER NEED.

Incorrect operation or usage is likely to cause damage to the appliance and injure the user. Make sure that you follow all safety instructions. Only use this appliance for the purpose for which it has been designed; we decline all responsibility in the event of damage due to incorrect use or bad handling.

1. Before use check that the voltage of your wall outlet corresponds to the rated voltage manner.
2. This appliance can be used by children aged from 8 years and above if they have been given supervision or instruction concerning use of the appliance in a safe way and if they understand the hazards involved. Cleaning and user maintenance shall not be made by children unless they are older than 8 and supervised.
3. Appliances can be used by persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and if they understand the hazards involved.
4. Children shall not play with the appliance.
5. Keep the appliance and its cord out of reach of children aged

less than 8 years.

6. The appliance must not be immersed. Never place it into the dishwasher.
7. Never let the machine operate while unattended.
8. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard (*).
9. Never use the appliance outdoors and always place it in a dry environment.
10. Always remove the plug from the socket in case of any malfunction, before filling or after use, or before cleaning.
11. Do not allow the appliance or its supply cord to touch hot surfaces or to come into contact with any heat sources.
12. To reduce the risk of electric shock, never operate this product with wet hands.
13. Never touch the hot surface of product. Use the handle only or the button.
14. Never unplug or move the appliance by pulling the cord. Do not wind the cord around the appliance or twist it
15. Stand the appliance on a stable, flat surface.
16. Never let the cord of the kettle from table pending.
17. Never use your kettle without water in it. Only use fresh and cold water.
18. Never fill the water tank beyond the Max. Level. Do not use your kettle in case of overflowing.
19. If the kettle is overfilled, boiling water may be ejected.
20. Never put the jug in an oven (including microwave oven) to warm up water.

User manual

21. Do not forget that the temperature of water prepared is high, handle with care the jug to avoid scalding.
22. The kettle is only to be used with the stand provided.
23. Always set any control to “off” before unplugging from the socket.
24. Make sure the ambient temperature is above 0°C, otherwise the appliance does not function properly.
25. Always descale the appliance regularly to ensure optimum performance and prevent malfunction.
26. Make sure that the appliance completely cooled down before cleaning.
27. This kind of appliance cannot work continuously; it is not a professional type of appliance. It is necessary to make temporary stops.
28. It is absolutely necessary to keep this appliance clean at all times as it comes into direct contact with food.
29. Regarding the instructions for cleaning surfaces in contact with food, thanks to refer to the below paragraph “cleaning” in manual.
30. Make sure the appliance is unplugged before inserting, removing or cleaning.
31. The appliance is not intended to be operated by means of external timer or separate remote control system.
32. Never used the appliance:
 - If the power cord is damaged
 - In case of bad operation
 - If it has been damaged in any manner
 - If it has been submerged in water

- If you dropped it
- 33. Unwind the cord completely to avoid the superheating of the appliance.
- 34. The guarantee can only cover the manufacturing defect and household use. All deterioration resulting of failure to respect the safety instruction are not cover by the guarantee.
- 35. All the appliances are submitted to quality control, some tries are made with one of them taken at random, that's why there is sometimes tracks of use.
- 36. Never try to open the casing yourself.
- 37. There is a potential injury from misuse.
- 38. This appliance is intended to be used in household and similar applications such as:
 - staff kitchen areas in shops, offices and other working environments
 - farm houses
 - by clients in hotels, motels and other residential type environments
 - bed and breakfast type environments
- 39. Only the appropriate connector must be used

(*) Competent qualified electrician: after sales department of the producer or importer or any person who is qualified, approved and competent to perform this kind of repairs in order to avoid all danger. In any case you should return the appliance to this electrician.

This instruction manual is available too on our website www.livoo.fr

SPECIAL MEASURES

Warning:

- DO NOT remove the lid while the water is boiling.
- Position the lid so that steam is directed away from the handle
- If the kettle is overfilled, boiling water may be ejected.
- Always ensure that the lid is tightly closed.
- Use only cold water when filling the appliance.
- The water level must be between the MAX. and MIN. marks.
- Insure that the appliance is switched off before removing it from its stand.
- Avoid any spillage on the connector.
- Heating element surface is subject to residual heat after use.

SPECIFICATIONS

Voltage: 220-240V~ 50-60Hz

Power: 1850W-2200W

LIVOO

Feel good moments

User manual

DESCRIPTION



- 1. Removable basket
- 2. Anti-scale Filter
- 3. Cover
- 4. Handle

- 5. Control panel
- 6. Body
- 7. Cordless base
- 8. Spout

Power base indicator panel:



Temperature setting buttons

Time setting buttons

LIVOO
Feel good moments
User manual

Before using for the first time

Prior to initial use, clean it by going through several boiling cycles, using clean water with each cycle and filling the kettle to its upper marking.

Note: the maximum capacity for boiling water is 1.7L, and the maximum capacity and minimum capacity for brewing tea is 1L and 0.5L respectively. Ensure that the lid is firmly in place before plugging the power outlet.

USE

ON/OFF button

Press this button to start or stop working mode.

During working, the “DEPART DIFFERE” button, Thé button and the “Durée button” are invalid.

Press the “ ” button, the appliance will enter into keep warm mode. Press it again to exit.
To select the brewing time, press the Durée button.

Thé button

Type of tea and the corresponding temperatures:

Green: 80°C, the temperature of water for brewing shall be 80°C +/- 5°C, the tea temperature shall be $\geq 60^{\circ}\text{C}$;

Black: 100°C, the temperature of water for brewing should be $> 96^{\circ}\text{C}$, the tea temperature shall be $\geq 60^{\circ}\text{C}$;

White: 85°C, the temperature of water for brewing should be 85°C +/- 5°C, the tea temperature shall be $\geq 60^{\circ}\text{C}$;

Herbal: 100°C, the temperature of water for brewing should be $> 96^{\circ}\text{C}$, the tea temperature shall be $\geq 60^{\circ}\text{C}$;

Oolong: 90°C, the temperature of water for brewing should be 90°C +/- 5°C, the tea temperature shall be $\geq 60^{\circ}\text{C}$;

Custom: 70-100°C, the temperature of water for brewing should be $> 96^{\circ}\text{C}$, others are +/- 5°C of the set temperature;

Durée Button

It's used for selecting the strength of tea, and the corresponding brewing time for each tea strength is as following.

Type of tea	Strong	Medium	Mild	Custom
Green	4 mins	3 mins	2 mins	0-10 mins
Black	3 mins	2 mins	2 mins	0-10 mins
White	4 mins	3 mins	2 mins	0-10 mins
Herbal	5 mins	4 mins	3 mins	0-10 mins
Oolong	4 mins	3 mins	2 mins	0-10 mins

LIVOO
Feel good moments
User manual

Départ différé Button

Press the “Départ différé” button, its corresponding indicator illuminates in blue, the LCD display turns on and indicates the “Current time” and “Auto-start time”, then press the “ON/OFF button to activate the “Départ différé” function. To exit from the “Départ différé” working mode, press any button except the “ON/OFF” button or “ ” button.

Note: Do not fill the water over the maximum level, as water may spill out of the spout when boiling.

Note: the appliance is equipped with a power base which can be rotated 360°.

FUNCTION DESCRIPTION

BOIL WATER

Turn the kettle lid to the right to make the “Open” mark align with the “” position, then open the kettle lid and fill the kettle with appropriate amount of water, then turn the kettle lid to the left to make the “Close” mark align with the “” position to lock the kettle lid in place.

Put the kettle body on the power base, connect with the power source, the “Brewing temperature” shown in the LCD display is 100°C, and the “Brewing time” is 0:00. At this time, press the “Temperature setting buttons” to set the brewing temperature. After finishing setting, press “ON/OFF” button, the appliance starts to work, the indicator of “ON/OFF” button illuminates in blue, and the LCD display firstly indicates 25°C and then indicates the current temperature. When the temperature reaches the selected temperature, a beep could be heard, the appliance will stop working, the indicator of “ON/OFF” button will turn off and the LCD display will extinguish after 15 seconds, then the appliance enters into standby mode. (before the water boiled, if you press on/off button again, the electric kettle stops working)

BREW TEA

Turn the kettle lid to the right to make the “Open” mark align with the “” position to open the kettle lid, then add some tea leaves into the brewing and fill kettle with appropriate amount of water, then turn the kettle lid to the left to make the “Close” mark align with the “” position to lock the kettle lid in place. Put the kettle body on the power base, connect with the power source, the “Brewing temperature” shown in the LCD display is 100°C, and the “Brewing time” is 0:00.

1. Press the “Thé” button to select your desired type of tea. Then press the “Temperature setting buttons” to set the brewing temperature, and the LCD display will indicate the set brewing temperature.
2. Press the “Durée” button to select your desired tea strength, when setting the strength of tea, the LCD display will indicate the set brewing time.
3. Finally, press “ON/OFF” button, the appliance starts to boil water and the indicator of “ON/OFF” button illuminates in blue, and the LCD display firstly indicates 25°C and then indicates the current water temperature. When the temperature reaches the set temperature, the brewing basket will go down into the water for brewing the tea, and the brewing time will start to count down. When the brewing time is “0:00”, the brewing basket will go up automatically, a long beep can be heard, the appliance will stop working, the indicator of “ON/OFF” button will turn off and the LCD display will extinguish after 15 seconds, then the appliance will enter into standby mode. (During working,

LIVOO
Feel good moments
User manual

if you press On/off button again, the electric kettle stop working)

AUTO-START FUNCTION

After choosing your brew type (water or tea according to the explanation above), hold and press the “Départ différé” button for 3 seconds: its corresponding indicator illuminates in blue, and the LCD display indicates the “Current time” and “Auto-start time”.

Press the “arrow buttons” on the left side of the LCD screen to set current time, and press the “arrow buttons” on the right side of the LCD screen to set the auto-start time. A.M. are the hours from midnight to noon, P.M. are the hours from noon to midnight. The time cycle is 12H, not 24H

Then press the “ON/OFF” button to enter into the auto-start working mode. At that time, the indicator of the “ON/OFF” button illuminates in blue; the LCD display lights solidly. The current time starts to count up until it reaches the auto-start time, then the tea-brewing function is activated and the appliance will enter into standby mode after finish brewing.

KEEP WARM

Press “  ” button, the appliance enters into the keep-warm mode after finishing brewing, at that time, it's corresponding indicator illuminates in blue; the keep-warm temperature is $\geq 60^{\circ}\text{C}$, and the keep-warm time is 30 minutes.

BOIL-DRY PROTECT

Should you accidentally let the kettle operate without water, the boil-dry protection will automatically switch off the power. If this occurs, allow the kettle to cool before filling with cold water before re-boiling.

CLEANING AND MAINTENANCE

1. Make sure the appliance is unplugged from the supply socket and fully cooled down before cleaning.
2. To clean the exterior surfaces, slightly wipe over with a soft damp cloth and dry thoroughly.
3. To clean the inner walls of the kettle, use a soft damp cloth or a soft brush to remove the residues

Note: Never use abrasive product

4. Never immerse the jug kettle or its base in water.
5. Dish washer forbidden.
6. The appliance has to be descaled regularly to ensure optimum performance. The frequency depends on the water hardness and the boiling frequency.

If you begin to notice the increase of the noise during boiling, or if the kettle switches off before water boils, this indicates that descaling is necessary.


Generally, the descaling should be done in the following periodicity:

- If you use soft water, at least once every 3 months.
- If you use hard water, at least once every 2 weeks

You can use descaling agent (In this case read carefully the instructions supplied with the product) or with vinegar mixed with water (1/3 vinegar+ 2/3 water), while respecting the maximum level marked on the product.

LIVOO
Feel good moments
User manual

After descaling, rinse the inner of the kettle thoroughly with clean water.

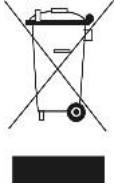

**Correct disposal of the unit
(Electrical and Electronic Equipment)**

(Applicable in the European Union and the rest of Europe that have adopted separate collection systems countries)

The European Directive 2012/19/EU on Waste Electrical and Electronic Equipment (WEEE), requires that old household electrical appliances must not be disposed of in the normal household waste stream.

Old appliances must be collected separately in order to optimize the recovery and recycling of the materials they contain and reduce the impact on human health and the environment.

The symbol of the crossed-out dustbin is marked on all products to remind the obligations of separate collection.

Consumers should contact their local authority or retailer for information concerning the correct disposal of their product.



LIVOO

BP 61071

67452 Mundolsheim - FRANCE

- Photo no contractual
- Worried about the quality of his products the manufacturer reserves the right to make modifications without advance notice