

LIVOO
Feel good moments
Instruction manual

Vacuum Cleaner wet & dry



Reference: DOH109
Version: 1.4
Language: English

Instruction manual

You have purchased a product LIVOO brand and we thank you. We take great care in design, ergonomics and ease of use of our products. We hope that this product will give you complete satisfaction.

This instruction manual is available too on our website www.livoo.fr

General Instructions

PLEASE, TAKE TIME TO READ WELL THE INSTRUCTIONS FOR USE
PARTICULARLY BEFORE THE FIRST USE.

A misuse of the appliance can damage it or hurt the user. Assure that you use the appliance for the use for which it is designed; we refuse any responsibilities as for the damages by an incorrect use or a bad manipulation.

1. The appliance is intended for domestic use only. Commercial and industrial use may cause damages and will void warranty.
2. Plug in your appliance to an earth socket.
3. Before use check that the voltage of your wall outlet correspond to the rated voltage manner.
4. To reduce the risk of electric shock, never operate this product with wet hands, spill liquid in the product or submerge it in water
5. Close supervision is necessary when your appliance is being used near children or infirm persons.
6. Do not use the device if appliance fell, if there are visible signs of damage.
7. Do not make roll on its cable.
8. Do not use this appliance to suck up incandescent or sharp

Instruction manual

objects (cigarette ends of cigarettes, lit matches, hot ashes, nails).

9. Do not use this vacuum cleaner to suck up pins, threads, cement, plaster, or quite different material of construction or decoration.
10. Never suck up liquid products nor toxic matter, cleaners or gasoline or dangerous or flammable products. You would risk to damage seriously your device.
11. The appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities, or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
12. Children shall not to play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
13. Never use the appliance on somebody or on animals body
14. Make sure to block never the zones of air inlets.
15. Keep the appliance away from heating surface.
16. Never use the electric cable to raise, transport or disconnect the appliance.
17. The appliance is not intended to be operated by means of external timer or separate remote control system.
18. This appliance is intended to be used in household and similar applications such as:
 - staff kitchen areas in shops, offices and other working environments

Instruction manual

- farm houses
- by clients in hotels, motels and other residential type environments
- bed and breakfast type environments

19. Plug must be removed from the socket-outlet before cleaning or maintaining the appliance.
20. The appliance is only to be used with the power supply unit provided with it.
21. Do not try to replace the internal batteries. Do not disassemble the appliance.
22. Don't use the recharge seat to recharge or supply electrical appliances other.

(*) Competent qualified electrician: after sales department of the producer or importer or any person who is qualified, approved and competent to perform this kind of repairs in order to avoid all danger. In any case you should return the appliance to this electrician.

TECHNICAL INFORMATION

Battery Voltage: 7,2V IPX4

Motor Power: 45W

Input: 11.0V d.c 250mA

CLASS II

Information published	Value and precision	Unit
DELTA BP61071 67452 Mundolsheim – France	-	-
Model identifier	DOH109	-
Input voltage	100-240	V
Input AC frequency	50-60	Hz

Instruction manual

Output voltage	11,0	VDC
Output current	0.25	A
Output power	2.75	W
Average active efficiency	75.70	%
Efficiency at low load (10 %)	0.3	A
No-load power consumption	0.09	W

WARNING

When aspirating water, always keep the appliance in the vertical position, with the suction inlet facing downwards. Never place the appliance in any other position and never allow water to come into contact with the motor.


Never exceed the MAX level when sucking up water.

Do not use the appliance without its "dust filter".

Empty the container after each use.

DESCRIPTION

1. Open container button
2. On/off switch
3. Light indicator
4. Handle
5. Recharge contact
6. Ventilation opening
7. Dust filter
8. Suction nozzle
9. Recharge seat
10. Transformer
11. Recharge plug
12. Crevice nozzle
13. Brush
14. Dust container
15. Squeegee nozzle

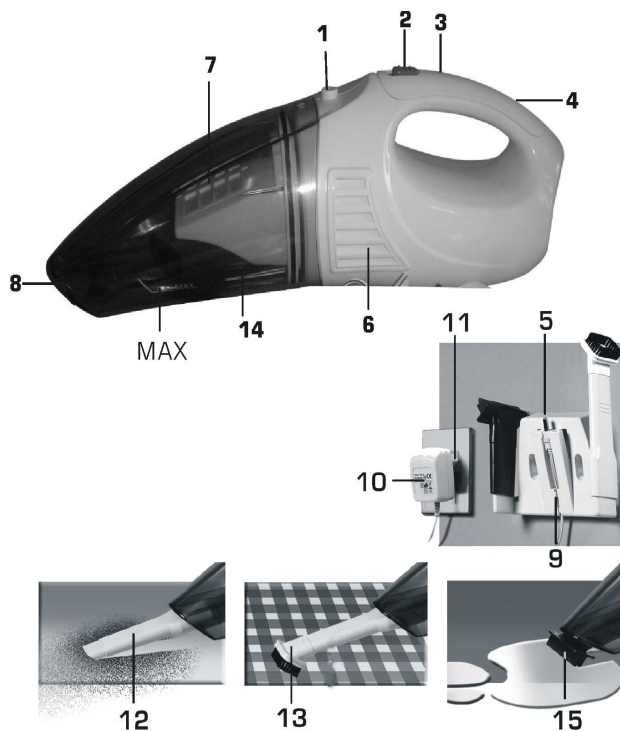

Details of end pieces :

- Crevice nozzle (12) : Use the crevice nozzle to vacuum textile or places which are hard to reach
- Brush (13): you can use the floor brush to clean delicate objects.

Instruction manual

- Squeegee nozzle (15): You can use this nozzle to suck up small quantities of liquids (water, coffee or juice)

Before first use:

Unpack appliance and remove any stickers that may be present on it.

Fixing the recharge seat to the wall:

- Fix the recharge seat (9) to the wall, on a stable, clean and dry surface.
- Use only the screws included with the appliance.

The recharge plug must be turned upwards so that the appliance can be hung with the dust container (14) facing downwards.

Never place the seat on any container with water, full bathtubs or washbasins, sources of heat, stoves, ovens or other similar objects.

- Charge up the battery before first use, this first charge will last for 14 hours (check below).

USE

Charging the appliance:

- Make sure that the filter is correctly installed (see paragraph "How to empty the container and remove the filter").
- Make sure the on/off switch (2) is in OFF position (turned off).
- Insert the plug of transformer into the power outlet.
- Place the appliance for recharging. When the appliance will be correctly positioned then the light indicator (3) will display a red light.
- Once charged, disconnect at first the charger of the wall grip then the appliance.


Note:

- When you are not using the appliance, keep it always placed in its recharge seat (9).
- After 5 minutes of continuous use, the suction power may decrease. Place the appliance in its seat and let it recharge for at least 2 hours.
- Don't let the device uncharged for a long time, because the inner accumulators may be damaged.

How to empty the container and remove filter:

- Press the opening button (1) and unhook the dust container (14).
- Remove the dust filter (7) from the inside of the container and empty the dust container.
- Clean the filter and, if necessary, clean the inside of the container with a dry cloth.
- Replace correctly the filter in the container.
- Reassemble again the container and the body, inserting at first the lower part and then the upper part, to obtain the complete closure.

Instruction manual

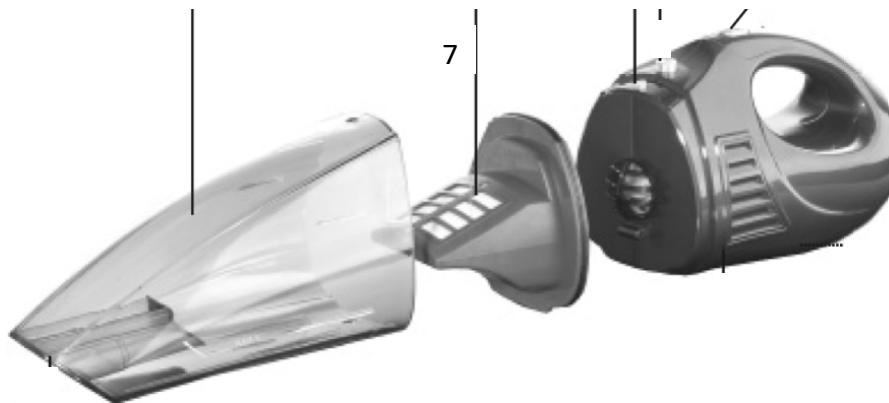

To suck up :

1. Remove the appliance from his recharge seat (9)
2. Insert the accessory you need, brush or crevice (12). For the brush (13), it must be attach to the crevice if you want to use it.

Note: the appliance can suck up crumbs without the terminal attachment too.

3. Push the on/off switch (2)
4. Guide the nozzle over the surface to be cleaned, check whether the maximum fill level on the collecting container has been reached. If this is the case, it needs to be emptied (check below paragraph).

Note: while the appliance is operating, keep the accessory turned downwards.

5. Push the on/off switch down again to switch off the appliance and put back in charge if necessary.

Note: Do not suck up the following material:

- Glowing ash, cigarette ends, matches
- Very fine dust
- Pointed, hard objects such as large shards of glass

To suck up water:

Warning:

- **Never use the appliance to suck up any other liquid than cold water.**
- Do not exceed the indicated MAX level when sucking up liquids (the MAX level must always be measured when the appliance is in the vertical position, with the suction inlet facing down).
- When sucking up water, always keep the appliance in the vertical position, with the suction inlet facing downwards.
- Never place the appliance in any other position and never allow water to come into contact with the motor.

Instruction manual

1. Remove the appliance from his recharge seat (9).
2. Use the liquid squeegee attachment (15); apply pressure to it to attach it.
3. Push the on/off switch (2). Suck up the water keeping the appliance on with the suction inlet facing down at all times.
4. Push the on/off switch down again to switch off the appliance.
5. Empty the container (14) immediately after use and wash the filter (7).
6. Rinse the container in cold water and let all parts dry completely before reassembling them and put back in charge if necessary.

CLEANING AND STORAGE

Before cleaning the appliance, always remove it from its seat and make sure it has completely cooled.

1. Unplug the appliance before clean it
2. Do not use wire brush or any abrasive items or liquids
3. Only the dust container (14) and the dust filter (7) can be washed in cold water. Let the parts dry completely before reassembly. (Caution! Never use tumble drying or hair dryer).
4. Do not wash the appliance or its parts in the dishwasher.
5. Do not immerse the body of appliance, the power or the recharge seat in water.

Note: The filter may change of color over time. This is normal

6. Keep the appliance ready for operation. Charge up the battery after each use.

Instruction manual



**Correct Disposal of this product
(Waste Electrical & Electronic Equipment)
(Applicable in the European Union and other European countries with separate collection systems)**



The European Directive 2012/19/EU on Waste Facilities Electrical and Electronic (WEEE)

This marking shown on the product or its literature, indicates that it should not be disposed with other household wastes at the end of its working life.

To prevent possible harm to the environment or human health from uncontrolled waste disposal, please separate this from other types of wastes and recycle it responsibly to promote the sustainable reuse of material resources.

Household users should contact either the retailer where they purchased this product or their local authority office, for details of where and how they can take this item for environmentally safe recycling.



LIVOO

BP 61071

67452 Mundolsheim - FRANCE

- Photo no contractual
- Worried about the quality of his products the manufacturer reserves the right to make modifications without advance notice