

LIVOO
Feel good moments
Instruction Manual

Plancha Teppan Yaki



Reference : DOM174
Version : 1.4
Language : English



Instruction Manual

You have purchased a product LIVOO brand and we thank you. We take great care in design, ergonomics and simplify the using of our products. We hope that this product will give you complete satisfaction.

GENERAL INSTRUCTIONS

PLEASE, TAKE TIME TO READ WELL THE INSTRUCTIONS FOR USE PARTICULARLY BEFORE THE FIRST USE.

A misuse of the appliance can damage it or hurt the user. Assure that you use the appliance for the use for which it is designed; we refuse any responsibilities as for the damages by an incorrect use or a bad manipulation.

1. Check that your main voltage corresponds to that stated on the appliance.
2. The safety instructions do not by themselves eliminate any danger completely and proper accident prevention measures must always be used.
3. Never leave the appliance unsupervised when in use.
4. Keep the appliance and its cord out of reach of children less than 8 years.
5. Children shall not play with the appliance.
6. Cleaning and user maintenance shall not be made by children unless they are older than 8 years and supervised.
7. This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.

Instruction Manual

8. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard (*).
9. Do not pass the cord over objects with sharp edges and keep it at a distance from, hot objects and bare flames. Always pull on the plug to disconnect it from the feed source
10. For extra protection it is possible to equip your home s electrical system with a residual current circuit breaker with voltage break at 30 mA max mum. Ask your electrician for advice
11. Make sure that the cord or the extension cable is not at risk of being pulled inadvertently nor of being topped over by anyone at the time of use
12. When you use an extension cable. Make sure that it is adapted to the appliance essential consumption. Contrary to this, the extension cable and/ or the plug risks overheating.
13. Only use the appliance for domestic purposes and in the way indicated in the instructions.
14. Never immerse the base of your appliance in water or any other liquid for any reason whatsoever. Never place it into the dishwasher.
15. In case the appliance accidentally falls into water disconnect it immediately. Have it checked by an expert before re-using, if you do not do this you run the risk of electrocution.
16. Never try to open the casing yourself
17. Do not use the appliance if your hands are damp if the oil is wet, or if the appliance itself is damp
18. Do not touch the plug if your hands are damp or wet

Instruction Manual

19. Never use the appliance near hot surfaces.
20. Never use the appliance outside and always place it in a dry environment. Before cleaning, always unplug the appliance from the power supply.
21. Never use accessories that are not recommended by the producer. They could constitute a danger to the user and risk to damage the appliance.
22. Never move the appliance by pulling the cord. Make sure the cord cannot get caught in any way. Do not wind the cord around the appliance and do not bend it.
23. Stand the appliance on a table or flat surface.
24. Unplug the appliance when not in use.
25. It is absolutely necessary to keep this appliance clean at all times as it comes into direct contact with food.
26. Make sure the appliance is unplugged before inserting, removing or cleaning one of the accessories. It is absolutely necessary to remove the accessories before cleaning them.
27. Let cool and keep out the accessories before cleaning them
28. The appliance is not intended to be operated by means of external timer or separate remote control system.
29. Keep this manual with the appliance. If the appliance is to be used by a third party, this instruction manual must be supplied with it.
30. Never carry the appliance while still hot.
31. Only the appropriate connector must be used.
32. The connector must be removed before the appliance is cleaned.

Instruction Manual

33. Appliance inlet must be dried before the appliance is used again.
34. Regarding the instructions for cleaning surfaces in contact with food, thanks to refer to the below paragraph of the manual.
35. This appliance is intended to be used in household and similar applications such as:
- staff kitchen areas in shops, offices and other working environments
 - farm houses
 - by clients in hotels, motels and other residential type environments
 - bed and breakfast type environments

(*) **Competent qualified electrician:** after sales department of the producer or importer or any person who is qualified, approved and competent to perform this kind of repairs in order to avoid all danger. In any case you should return the appliance to this electrician.

This instruction manual is also available on our website www.livoo.fr

SPECIAL MEASURES



WARNING : CAUTION HOT SURFACE!

The temperature of accessible surfaces may be high when the appliance is operating.

DO NOT OPERATE this product near water sources or

Instruction Manual

flammable liquids.

DO NOT CLEAN OR TOUCH this product when it is still hot.


DO NOT USE SHARP OBJECTS

TECHNICAL SPECIFICATIONS

Voltage: AC 230V 50Hz

Power: 2000W

DESCRIPTION

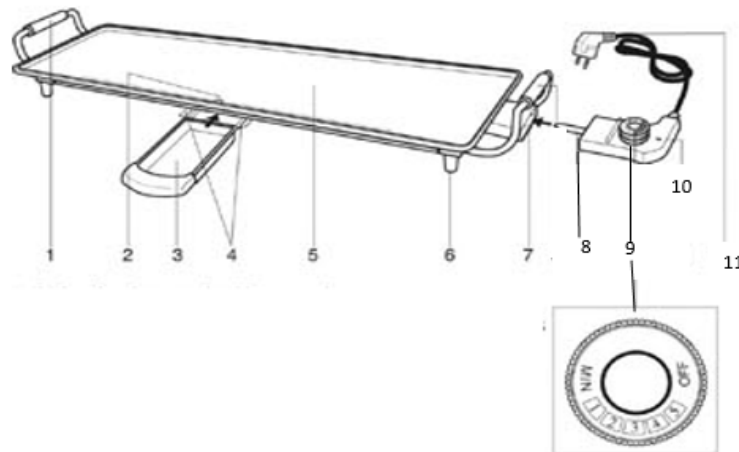

- | | |
|---------------------------------|---|
| 1. Left cool touch handle | 7. Connection plug socket |
| 2. Grease drip dam | 8. Connection plug |
| 3. Grease drip tray | 9. Temperature adjustment control OFF, MIN, 1 - 5 |
| 4. Grease drip tray sliding bar | 10. Control light |
| 5. Non-stick grilling surface | 11. Cord and feed plug |
| 6. Support | |

USING

1. Unpack the appliance
2. Before first use, clean the appliance as described in the * Cleans and maintenance * section. Pay particular attention to cleaning the non-stick grilling surface. Dry all parts carefully
3. Note it is possible that the appliance might give off a slight odour and smoke when first used. This is completely normal and does not last for long. Make sure that the surroundings are sufficiently ventilated
4. Firmly insert the connection plug {8} into the connects plug socket (7)
5. Slide the grease drip tray (3) into tie slide bar (4) under the grease drip dam (2)

Instruction Manual

6. You can spread vegetable oil on to the non-stick grilling surface (5) if you so wish
7. Remove excess oil with a kitchen towel
8. Connect the feed plug (11) on to an adapted feed source
9. Adjust the temperature to your requirements with the help of the temperature adjustment control (10) The control light will illuminate
10. The control sight (10) will stop illuminating as soon as the desired temperature is reached.
11. If the grill cools down, it reheats again automatically. The control light (10) illuminates during function phases until the appliance is at the desired temperature again
12. Cooking is optimal at a low or medium temperature. High temperatures risk causing discoloration of the non-stick grilling surface and using it prematurely. For food that needs to be cooked at a high temperature first of all reheat it at a medium temperature.
13. Switch the appliance off when you are not using it. Turn the temperature adjustment control (9) on to OFF.
14. Disconnect the feed pug (11) and let the grill cool again. Then remove the connection plug (8) from the correction plug socket (7)
15. Carry the grill only by the cool touch handles.

CLEANING AND MAINTENANCE

1. None of the parts of this appliance are washable in a dishwasher.
2. Before cleaning disconnect the feed plug (11) from the electrical feed source
3. Let the appliance cool down, and. Then disconnect the connection plug (8) from the connection plug socket (7)
4. Clean the grease drip tray (3) with hot water, using a gentle detergent. Remove tough stains with a plastic scourer sponge and a mild washing up liquid. Attention! Never immerse the grill in water, In addition, make sure that water does not enter into the appliance.
5. Use only nylon plastic and wooden utensils, so as not to score the nonstick grilling surface, do not use abrasive or too strong detergents or utensils.

Instruction Manual



**Correct disposal of the unit
(Electrical and Electronic Equipment)**

(Applicable in the European Union and the rest of Europe that have adopted separate collection systems countries)

The European Directive 2012/19/EU on Waste Electrical and Electronic Equipment (WEEE), requires that old household electrical appliances must not be disposed of in the normal household waste stream. Old appliances must be collected separately in order to optimize the recovery and recycling of the materials they contain and reduce the impact on human health and the environment.

The symbol of the crossed out dustbin is marked on all products to remind the obligations of separate collection.

Consumers should contact their local authority or retailer for information concerning the correct disposal of their product.



Pour en savoir plus :

www.quefairedemesdechets.fr

LIVOO

BP 61071

67452 Mundolsheim - FRANCE

- Photo no contractual
- Worried about the quality of his products the manufacturer reserves the right to make modifications without advance notice