

LIVOO
Feel good moments
Instruction Manual

3 in 1 party-set : wok, crepes and grill



Reference: DOM200
Version: 1.4
Language: English

Instruction Manual

You have purchased a product LIVOO brand and we thank you. We take great care in design, ergonomics and ease of use of our products. We hope that this product will give you complete satisfaction.

This instruction manual is available too on our website www.livoo.fr

General Instructions

PLEASE, TAKE TIME TO READ WELL THE INSTRUCTIONS FOR USE
PARTICULARLY BEFORE THE FIRST USE.

A misuse of the appliance can damage it or hurt the user. Assure that you use the appliance for the use for which it is designed; we refuse any responsibilities as for the damages by an incorrect use or a bad manipulation.

1. Before use check that the voltage of your wall outlet correspond to the rated voltage manner.
2. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard (*).
3. Do not let cord hang over edge of table or counter or touch hot surface.
4. To reduce the risk of electric shock, never operate this product with wet hands, spill liquid in the product or submerge it in water
5. Do not touch hot surface. Use handles or knobs only.
6. Close supervision is necessary when your appliance is being used near children or infirm persons.
7. Do not place an appliance on or near a hot gas or on a heated

Instruction Manual

oven.

8. Do not use outdoors (Household use only).
9. To avoid the risk of personal injury, this product should not be operated by children or people who are not familiar with these instructions.
10. This appliance shall not be used by children from 0 year to 8 years. This appliance can be used by children aged from 8 years and above if they are continuously supervised. This appliance can be used by people with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
11. Cleaning and user maintenance shall not be made by children.
12. Children shall not play with the appliance.
13. Keep the appliance and its cord out of reach of children less than 8 years.
14. The appliance is not intended to be operated by means of external timer or separate remote control system.
15. Save these instructions.
16. This appliance is intended to be used in household and similar applications such as:
 - staff kitchen areas in shops, offices and other working environments
 - farm houses
 - by clients in hotels, motels and other residential type environments

Instruction Manual

- bed and breakfast type environments
- 17. It is absolutely necessary to keep this appliance clean at all times as it comes into direct contact with food.
- 18. Temperature of accessible surface may be high when the appliance is operating.
- 19. Cooking appliance should be positioned in a stable situation with the handles (if any) positioned to avoid spillage of the hot liquids.
- 20. Appliance must not be immersed
- 21. Warning: avoid spillage on the connector
- 22. warning of potential injury from misuse
- 23. The heating element surface is subject to residual heat after use
- 24. Place the device on a flat, stable, heat-resistant surface
- 25. Regarding the instructions for cleaning surfaces in contact with food or oil, thanks to refer to the below paragraph "cleaning" in manual.

(*) Competent qualified electrician: after sales department of the producer or importer or any person who is qualified, approved and competent to perform this kind of repairs in order to avoid all danger. In any case you should return the appliance to this electrician

SPECIAL MEASURES

Warning :

Do not touch the surface, It's very hot when the appliance in using.

Instruction Manual



Before using it for the first time, clean the grill plate and the wok pans with a wet cloth. When it is first switched on, the wok grill may smell and emit some smoke. This is normal; the grease that may have adhered to the element during manufacture is burning off. We therefore recommend that you heat up the wok grill for about 10 minutes without any food (ventilate the room during this period).

SPECIFICATIONS

Power consumption: 1000W

Rating Voltage: 220-240V~ 50-60Hz

DESCRIPTION

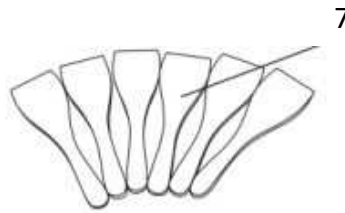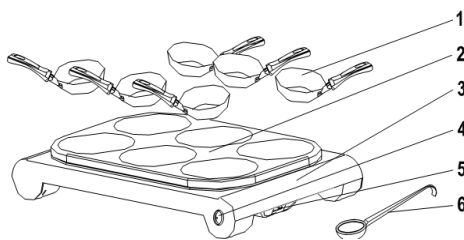

1. Small Wok
2. Plate Grill
3. Handles
4. Switch
5. Power Cord Socket
6. Spoon
7. Wood Spatulas

USING YOUR APPLIANCE

WOK

Put the wok grill in the middle of the table. Cut the meat and vegetables into small pieces so as to reduce the cooking time. Chop the crude meat and serve it on a plate or a wooden board, and the vegetables on a separate plate. Your guests can then choose as they wish and grill it in their wok pans. You can grill all food in the wok pans, cook fruit, fry eggs or potatoes and many other things. You may serve the grilled meat with different sauces, salad or French baguette.

BAKING/GRILLING

On the plate you can use the round circles also for baking an egg or pancake. Also you can grill your larger pieces of meat on this circle (of course, when not using it for wok-baking)



Instruction Manual

CLEANING AND STORAGE

Before cleaning, unplug and wait for the appliance to cool down. Wipe the inside and the edges of the appliance with a paper towel or a soft cloth. Wipe the outside with only a slightly moistened cloth ensuring that no moisture, oil or grease enters the cooling slots. Do not clean the inside or outside with any abrasive scouring pad or steel wool as this will damage the finish. Do not immerse in water or any other liquid.

Instruction Manual



Correct Disposal of this product
(Waste Electrical & Electronic Equipment)
(Applicable in the European Union and other European countries with separate collection systems)



The European Directive 2012/19/EU on Waste Facilities Electrical and Electronic (WEEE)

This marking shown on the product or its literature, indicates that it should not be disposed with other household wastes at the end of its working life.

To prevent possible harm to the environment or human health from uncontrolled waste disposal, please separate this from other types of wastes and recycle it responsibly to promote the sustainable reuse of material resources.

Household users should contact either the retailer where they purchased this product or their local authority office, for details of where and how they can take this item for environmentally safe recycling.



Pour en savoir plus :

www.quefairedemesdechets.fr

LIVOO

61071

67452 Mundolsheim-FRANCE

- Photo no contractual
- Worried about the quality of his products the manufacturer reserves the right to make modifications without advance notice