

LIVOO
Feel good moments
Instruction manual

Food Saver



Reference : DOM357
Version : 1.5
Langage : English



Instruction manual

You have purchased a product LIVOO brand and we thank you. We take great care in design, ergonomics and simplify the using of our products. We hope that this product will give you complete satisfaction.

This instruction manual is available too on our website www.livoo.fr

General Instructions

PLEASE, TAKE TIME TO READ WELL THE INSTRUCTIONS FOR USE PARTICULARLY BEFORE THE FIRST USE. A misuse of the appliance can damage it or hurt the user. Assure that you use the appliance for the use for which it is designed; we refuse any responsibilities as for the damages by an incorrect use or a bad manipulation.

1. Check that your mains voltage corresponds to that stated on the appliance.
2. The safety instructions do not by themselves eliminate any danger completely and proper accident prevention measures must always be used.
3. Please read through the information and safety advice contained in these operating instructions carefully and thoroughly before you use the stand mixer for the first time.
4. Do not attempt to repair the appliance yourself.

Instruction manual

5. Never leave the appliance unsupervised when in use.
6. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard (*).
7. Only use the appliance for domestic purposes.
8. Never immerse the appliance in water or any other liquid for any reason whatsoever. Never place it into the dishwasher.
9. Before cleaning, always unplug the appliance from the power supply.
10. Never use the appliance outside and always place it in a dry environment.
11. Never use accessories that are not recommended by the producer. They could constitute a danger to the user and risk to damage the appliance.
12. Never move the appliance by pulling the cord. Make sure the cord cannot get caught in any way. Do not wind the cord around the appliance and do not bend it.
13. Unplug the appliance when not in use.
14. This kind of appliance cannot function continuously, it is not a professional type of appliance.

Instruction manual

15. It is absolutely necessary to keep this appliance clean at all times as it comes into direct contact with food.
16. Regarding the instruction for cleaning surfaces in contact with food thanks to refer to the below paragraph “cleaning” in manual.
17. This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
18. Children shall not play with the appliance.
19. Cleaning and user maintenance shall not be made by children without supervision.
20. Keep the appliance and its cord out of reach of children less than 8 years.
21. The appliance is not intended to be operated by means of external timer or separate remote control system.
22. This appliance should not be set up in close proximity to a naked flame, easily flammable materials (curtains,

Instruction manual

textiles, etc.), a radiator, an oven or some other heat source.

23. Before use, place the appliance on a horizontal and flat surface.

24. During use, do not touch moving parts with your fingers.

25. This appliance is intended to be used in household and similar applications such as:

- staff kitchen areas in shops, offices and other working environments
- farm houses
- by clients in hotels, motels and other residential type environments
- bed and breakfast type environments

(*) Competent qualified electrician: after sales department of the producer or importer or any person who is qualified, approved and competent to perform this kind of repairs in order to avoid all danger. In any case you should return the appliance to this electrician.

Important Information

The appliance is not for commercial use.

It is recommended to use the continuously during no more than 25 seconds.

Between every operation of soldering, it is recommended to wait

Instruction manual

approximately 15sec.

 
Keep the upper lid of the appliance unlocked when not in use. Extension cords are not prohibited from being used when care is exercised in their use. The longer cord shall be arranged so that it does not drape over the counter-top or tabletop where it is capable of being tripped over, snagged, or pulled on unintentionally, especially by children.

TECHNICAL SPECIFICATIONS

Voltage: 220-240V~ 50-60Hz

Power: 110W

DESCRIPTION

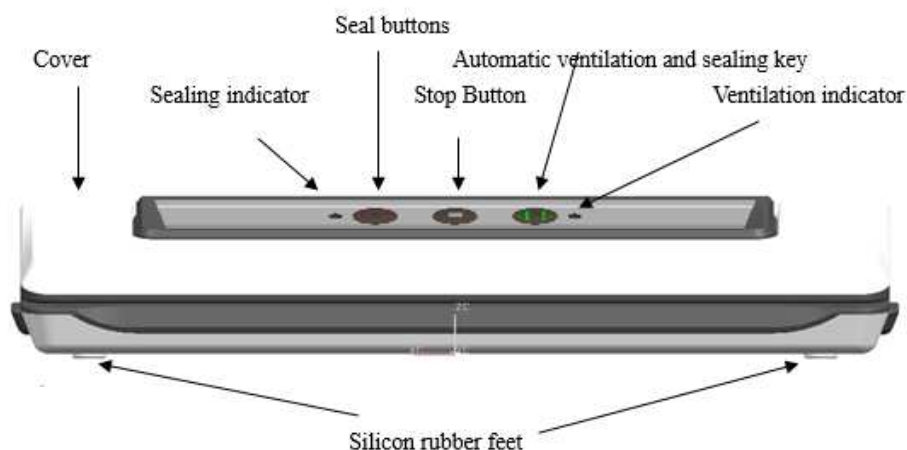


LIVOO

Feel good moments

Instruction manual

 Internal view

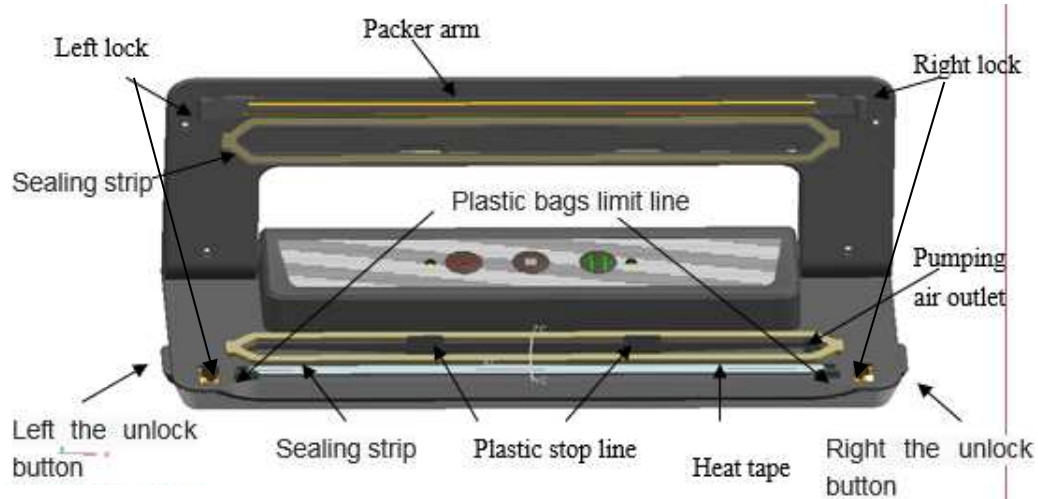

USE

Remark:

You can use supplied plastic film or plastic bag but the width shall not exceed 28cm.


The plastic film has to present points or grooves on one of the both surfaces, a totally smooth surface does not suit.

The thickness has to be between 0,17mm and 0,29mm, check too, please, the range of temperature for which the plastic film or bag is designed (the ideal is from -20°C to +110°C).

If you use plastic bag, use special plastic bags to be used for all kinds of vacuum packing (vegetable, meat, condiment, dried fish, biscuits...).

To make bags from the plastic film supplies:

1. Cut the special supplied plastic film: place it on the shelf of the blade to cut the size you want.

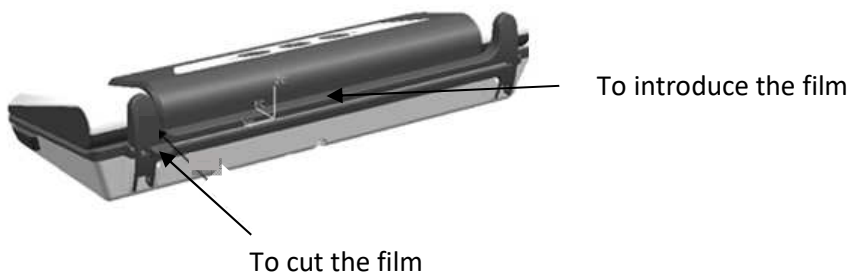

2. Plug in the appliance and open the cover.

Instruction manual

3. Place the plastic film on the hot wire.

Note: caution! Hot surface, do not touch the hot wire.

Make sure you give the appliance time to cool down. Wait at least 15 seconds between seals

4. Put down the cover, firmly press with both hands hold on both ends of the cover to lock it.
5. Press the red button seal, the red light light up, the bag is automatically sealed.
6. After the red light is off, press unlock button on both sides and remove the plastic bag.

At this moment you can begin the vacuum putting of food:

Note: if you use plastic bag, you do not have to respect the stages above

1. Put plastic bag with the food in the sealing groove (food shall not be more than three-quarters of the plastic bag).
2. Put down the cover and lock it (as above description).

Note:

- **It is recommended to use the continuous device during no more than 25 seconds.**
- For the high temperature food packaging, to prevent burns, please cool down after the packaging.
- **The part where you want to seal the bag owes remained clean and exempt from food. Also watch not to wrinkle the bag**
- If you want to put the vacuum-packed food in a microwave, must first punch a hole in the plastic bag.
- After-party vacuum packaging of food, placed in the refrigerated immediately or froze it.
- Liquid food, it must not be vacuum packed with plastic bag, only need to be sealed.

3. Press the green button (automatic ventilation and sealing function).
4. The vacuum pump is running, the air inside the bag will be discharged to the outside.

Note: if you want to stop running, please press stop button.

5. After reached the right pressure, the green light turned red, sealing function will start automatically.
6. When the red light is off, operation stops.
7. Press the sides button, open the cover and remove the vacuum-packed bags.

CLEANING AND STORAGE

1. Always unplug the unit before cleaning.
2. Do not immerse in water.
3. Do not use abrasives to clean the unit.
4. Wipe the outer surface with a soft, damp cloth and soap.
5. To clean the inside of the unit, wipe away any food or liquid with a paper towel.
6. Keep the cover of the appliance unlocked when not in use.

Instruction manual

Problems and solutions

Problems	Solutions
Products cannot run	1、 Whether the power cord plug into the socket. 2、 Power cable plug is damaged. 3、 Whether continuous use.
Cannot be sealed	1、 If the bag folded or uneven entrance, is unable to achieve the sealing effect, please check the plastic bags. 2、 If the force of his hands pressed lighter (seal), the seal cannot be reached, check whether the key lock buckle up and down in place. 3、 Please check whether the heat wire breakage.
Cannot be vacuum-packed	1、 Please check if the plastic bag entry is entered into the inner space of the sealing pad. 2、 Please check whether there is plastic bag fold, please keep the flat. 3、 Please check whether there is a sharp part of plastic bags, or plastic bags are broken. 4、 Please check whether the objects within the bag is too much (object for 3/4 of the plastic bags for moderate). 5、 Please check whether the air suction is blocked. 6、 Please check whether to use special plastic bags. 7、 Please check the two vacuum packaging running time interval of 25 s
After vacuum packaging, plastic bags gradually leak	1、 If the use of plastic bags is too thin, the air may penetrate the plastic bag inside, so please use the special bag. 2、 Plastic bags containing food (itself distributing gas), might seem vacuum disappears.

Instruction Manual



Correct Disposal of this product

(Waste Electrical & Electronic Equipment)

able in the European Union and other European countries with separate collection systems)



The European Directive 2012/19/EU on Waste Facilities Electrical and Electronic (WEEE)

This marking shown on the product or its literature, indicates that it should not be disposed with other household wastes at the end of its working life.

To prevent possible harm to the environment or human health from uncontrolled waste disposal, please separate this from other types of wastes and recycle it responsibly to promote the sustainable reuse of material resources.

Household users should contact either the retailer where they purchased this product or their local authority office, for details of where and how they can take this item for environmentally safe recycling.



LIVOO

BP 61071

67452 Mundolsheim - FRANCE

- Photo no contractual
- Worried about the quality of his products the manufacturer reserves the right to make modifications without advance notice