

LIVOO
Feel good moments
Instruction Manual

Electrical knife



Reference : DOM360
Version : 1.4
Language : English



Instruction Manual

You have purchased a product LIVOO brand and we thank you. We take great care in design, ergonomics and ease of use of our products. We hope that this product will give you complete satisfaction.

This instruction manual is available too on our website www.livoo.fr

GENERAL INSTRUCTIONS

PLEASE, TAKE TIME TO READ WELL THE INSTRUCTIONS FOR USE
PARTICULARLY BEFORE THE FIRST USE.

A misuse of the appliance can damage it or hurt the user. Assure that you use the appliance for the use for which it is designed; we refuse any responsibilities as for the damages by an incorrect use or a bad manipulation.

1. Before use check that the voltage of your wall outlet correspond to the rated voltage manner.
2. Do not operate the appliance with a damaged cord or after malfunction or has been damaged in any manner.
3. If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard. (*)
4. Do not let cord hang over edge of table or counter or touch hot surface.
5. To reduce the risk of electric shock, never operate this product with wet hands, spill liquid in the product or submerge it in water
6. Close supervision is necessary when your appliance is being used near children or infirm persons.
7. Do not place an appliance on or near a hot gas or on a heated

Instruction Manual

oven.

8. Household use only
9. The appliance shall not be used by children.
10. Keep the appliance and its cord out of reach of children.
11. Appliances can be used by persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and if they understand the hazards involved
12. Children shall not play with the appliance.
13. The appliance is not intended to be operated by means of external timer or separate remote control system
14. Always disconnect the appliance from the supply if it is left unattended and before assembling, disassembling or cleaning.
15. Save these instructions.
16. There is potential injury for misuse
17. It is absolutely necessary to keep this appliance clean at all times as it comes into direct contact with food.
18. Regarding the instructions for cleaning surfaces in contact with food or oil, thanks to refer to the below paragraph "cleaning" in manual.
19. Care is needed when handling cutting blade.
20. Switch off the appliance before changing accessories or approaching parts which move in use.
21. Accessories, other than those supplied with the appliance, shall include instructions for their safety use.
22. Regarding the instructions for the use of accessories,

Instruction Manual

operation times and speed settings, thanks to refer to the below paragraphs

23. This appliance is intended to be used in household and similar applications such as:

- staff kitchen areas in shops, offices and other working environments
- farm houses
- by clients in hotels, motels and other residential type environments
- bed and breakfast type environments

(*) **Competent qualified electrician:** after sales department of the producer or importer or any person who is qualified, approved and competent to perform this kind of repairs in order to avoid all danger. In any case you should return the appliance to this electrician.

SPECIAL MEASURES

Warning:

- Handle the blade with care: it is very sharp.
- Operating period for 1 cycle max not exceeding: 7 min
- Never hold the appliance under running water nor immerse in water.

SPECIFICATIONS


Voltage :	220-240V~ 50Hz
Power :	150W
KB :	7 min for one operating cycle



Instruction Manual



Instruction Manual

USING YOUR APPLIANCE

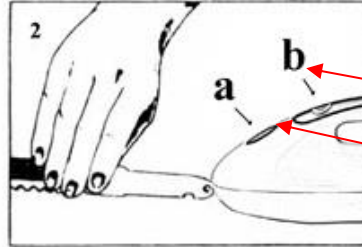

b - ON/OFF switch

  a - Ejector Button

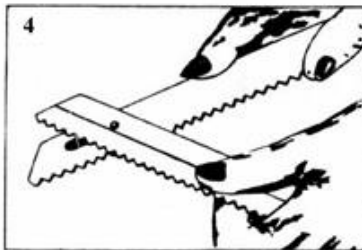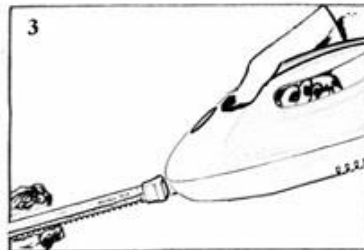

1. Insertion of the blades.

Caution: Switch off the appliance and disconnect from supply before changing accessories or approaching parts that move in use. Remove the blades from the protecting covering (Fig. 1). Hold on to the blades with the thumb and forefinger in such a way that the cutting edges face downwards; then press the back-ends of the blades into the opening provided for that purpose until they lock into place (Fig. 2).

2. Plug in your appliance and press the on/off switch. Now the appliance is ready for use. Do not use a cutting motion. Simply hold the knife gently in place, it will do the cutting automatically. Cutting takes place smoothly and without effort. With your electric knife you can cut as needed either vertically or on a slant.

Caution: Do not use your knife for cutting bones. It is not meant for this purpose.

In the case of fowl or game, cut just until reaching the bone but no further and then separate the meat from the bone by use of the outer edge of the blade.

3. Never use your electric knife more than 6 minutes at a time.
4. When you have finished using your electric knife, release the button and pull out the plug. Then press the ejector button. The blades can now be easily removed. (Fig. 3)

Instruction Manual

CLEANING AND STORAGE

Warning ! Always unplug before cleaning.

1. The blades are made of stainless steel and therefore are easily cleaned.
2. We advise you to use warm soapy water.
3. If you want to clean the individual blades, do so by pushing the blades along the groove upwards until they can be removed from the holding pin (Fig. 4).
4. To mount, reverse the process. The blades need no special maintenance.
5. Sharpening is unnecessary as the blades are self-sharpening due to the permanent friction of the blades during use.
6. After cleaning, place the blades in the protective covering and store away. In order to clean the appliance itself use a damp cloth and dry afterwards. Never hold it under running water nor immerse in water.

Instruction Manual



Correct Disposal of this product
(Waste Electrical & Electronic Equipment)
(Applicable in the European Union and other European countries with separate collection)



The European Directive 2012/19/EU on Waste Facilities Electrical and Electronic (WEEE)
This marking shown on the product or its literature, indicates that it should not be disposed with other household wastes at the end of its working life.

To prevent possible harm to the environment or human health from uncontrolled waste disposal, please separate this from other types of wastes and recycle it responsibly to promote the sustainable reuse of material resources.

Household users should contact either the retailer where they purchased this product or their local authority office, for details of where and how they can take this item for environmentally safe recycling.



Pour en savoir plus :
www.quefairedemesdechets.fr

LIVOO

61071

67452 Mundolsheim-FRANCE

- Photo no contractual
- Worried about the quality of his products the manufacturer reserves the right to make modifications without advance notice