

LIVOO
Feel good moments
Instruction Manual

Tower fan



Reference: DOM384
Version: 1.4
Language: English

WWW.LIVOO.FR



Instruction Manual

You have purchased a LIVOO brand product and we thank you for it. We give great attention to the design, ergonomics and ease of use of our products. We hope that this product will give you complete satisfaction.

SAFETY INSTRUCTIONS

PLEASE, TAKE TIME TO READ WELL THE INSTRUCTIONS FOR USE PARTICULARLY BEFORE THE FIRST USE. A misuse of the appliance can damage it or hurt the user. Assure that you use the appliance for the use for which it is designed, we refuse any responsibilities as for the damages by an incorrect use or a bad manipulation.

1. Before connecting your appliance, verify that the supply voltage indicated on the indicator plate of the appliance corresponds properly to that of your electrical installation.
2. No responsibility may be assumed in case of damages caused by non-compliance of this manual by the user or by faulty use or handling.
3. This appliance is meant for ONLY DOMESTIC USE and FOR INTERNAL USE.
4. Use this appliance only as indicated in the instruction manual.
5. Completely assemble the fan before starting it.
6. Before each use, ensure that the supply cord is in good condition.
7. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly

Instruction Manual

qualified persons (*) in order to avoid a hazard.

8. Never plunge the appliance, its supply cord or the plug in water or any other liquid.
9. Do not handle the plug on the appliance with wet hands or feet.
10. This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities, or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
11. Young children, old people or disabled people must not be directly exposed to the air from the fan for long periods.
12. When you disconnect the supply cord, always remove it from the plug. Do not pull on the cord itself.
13. Always disconnect the appliance from its plug point when the appliance is not used, before moving it or cleaning it.
14. Never insert your fingers, crayons or any other object across the ventilation grills.
15. Ensure that the fan is always placed on a flat surface, dry and stable.
16. Do not use your fan close to a window. Rain may cause

Instruction Manual

risks of electric shocks.

17. Do not place either the fan or its parts near an oven, a cooking appliance or any other source of heat.
18. Never try to disassemble or repair your appliance yourself. In case of repair by an unqualified person, the guarantee is cancelled.
19. For reducing the risk of electric shock, never use this product with wet hands, never spill a liquid on the product or submerge it in water.
20. Direct surveillance is necessary when your appliance is used near children or disabled persons.
21. Do not use outside (For internal use only). This appliance is not suitable for industrial or open air use.
22. Avoid overheating the device by preventing the blocking of entry and exit of air. Clean all the entries and exits from time to time to remove the accumulated dust.
23. Leave a safe space of 50 cm around the fan, on above and on the sides, and a safe space of 120 cm on the front.
24. The appliance is not intended to be operated by means of external timer or separate remote control system.
25. Ensure the fan is switched off from the supply mains before moving the guard.
26. This appliance is intended to be used in household and similar applications such as:
 - staff kitchen areas in shops, offices and other

Instruction Manual

working environments

- farm houses
- by clients in hotels, motels and other residential type environments
- bed and breakfast type environments.

(*) **Authorised qualified electrician:** after-sales department of the manufacturer or the importer or any other qualified person, approved and authorised for carrying out this kind of repair for avoiding any danger. In any case, you must send the appliance to this electrician.

This instruction manual is available too on our website www.livoo.fr

SPECIAL SAFETY INSTRUCTIONS

Information :

- NEVER COVER THE APPLIANCE, even temporarily, because it may overheat and generate a risk of fire.
- Do not use the fan near a shower, bathtub or a swimming pool.

TECHNICAL SPECIFICATIONS

Voltage : 220-240V~ 50-60Hz

Class II



Power : 45W

3 speeds

Description	Symbol	Value	Unit
Maximum fan flow rate	F	29,83	m3/min
Fan power input	P	40,90	W
Service value	SV	0,73	(m3/min)/W
Standby power consumption	P _{SB}	-	W

Instruction Manual


Off mode power consumption	P _{off}	0	W
Fan sound power level	L _{WA}	54,61	dB(A)
Maximum air velocity	c	2,85	meters/sec
Seasonal electricity consumption	Q	13,09	kWh/a
Measurement standard for service value	GB/T 13380: 2007		
Contact details for obtaining more information	DELTA BP61071 67452 Mundolsheim – France		

Assembly


Attention: the fan can only be used if complete with the support base (base1 and base 2).

Attention: always unplug the appliance before you assemble.

To assemble it, refer to figure: positioning first the base1 (C) then the base 2 (D) on the body, making sure to lock with 4 screws supplied (E);

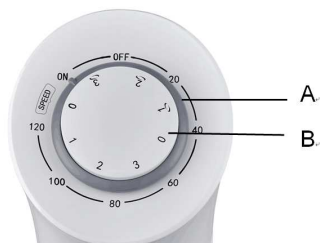

- A. Timer knob
- B. Speed switch
- C. Base 1
- D. Base 2
- E. Attachment screws

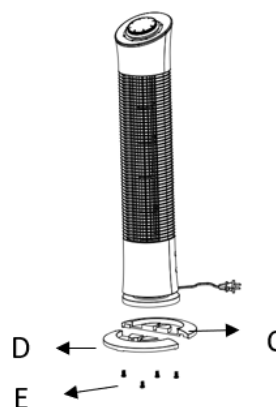

USE

Before the first usage

- Read these instructions before use and keep them safe. If you give this fan to someone, also give them the instructions.
- Remove all the packaging but retain them till you are satisfied that the fan works.
- Completely unwind the supply cord and insert the electric plug in an earthed plug point on the wall.
- The fan is now ready

1. Ensure that the local voltage corresponds to the voltage of the appliance.

Instruction Manual

2. Turn the speed knob for selecting the speed: 0 (off) and speeds 1, 2, 3 correspond to Low, Medium, High.
3. To activate oscillation (right-left) turn the corresponding figure to align to the small arrow at the middle position of "SPEED" (see a ref. picture on the side).



1 = Speed minimum with Osc. 2 = Speed medium with Osc. 3 = Speed maximum with Osc.

4. Timer: to set the time turn the timer knob (A) clockwise to the position corresponding to the desired operating time (0-120 min.); in order to operate the appliance in a continuous manner, and to therefore exclude use of the timer, turn the knob anticlockwise to the "ON" position.

To switch off the appliance, turn the "0" position aligning to the small arrow at the middle position of "SPEED" or turn the timer knob to the "OFF" position, and then remove the plug from the socket.

5. Never touch the blades with hands or an object!
6. Do not pull too much on the cord. If it is damaged after a long use, get it repaired by an electrician.

Warning: When not in use for long periods, the plug must always be removed from the socket.

CLEANING AND MAINTENANCE

1. First ensure that the fan is off and remove the electric plug from the outlet.
2. Do not clean until the appliance is completely cold.
3. Cleaning of the external body: Wipe the external body with a soft cloth.
4. Never use abrasive cleaning agents or pointy objects (for e.g. scrub brush or knife) for cleaning. Never use a corrosive liquid which would damage the paint, metal or plastic!
5. **Warning :** Do not submerge the appliance in water or other liquids. It is a danger to life due to an electric shock.
6. When the appliance is not used, store it as well as all its accessories and the instruction manual in a safe and dry place.

Instruction Manual



**Correct disposal of the unit
(Electrical and Electronic Equipment)**

(Applicable in the European Union and the rest of Europe that have adopted separate collection systems countries)

The European Directive 2012/19/EU on Waste Electrical and Electronic Equipment (WEEE), requires that old household electrical appliances must not be disposed of in the normal household waste stream.

Old appliances must be collected separately in order to optimize the recovery and recycling of the materials they contain and reduce the impact on human health and the environment.

The symbol of the crossed out dustbin is marked on all products to remind the obligations of separate collection.

Consumers should contact their local authority or retailer for information concerning the correct disposal of their product.



Pour en savoir plus :

www.quefairedemesdechets.fr

LIVOO
BP 61071
67452 Mundolsheim cedex - FRANCE

- Photo no contractual
- Worried about the quality of his products the manufacturer reserves the right to make modifications without advance