

LIVOO
Feel good moments
Instruction manual

Electrical Knife sharpener



Reference : DOM394
Version : 1.5
Language : English

WWW.LIVOO.FR



Instruction manual

You have purchased a product LIVOO brand and we thank you. We take great care in design, ergonomics and simplify the using of our products. We hope that this product will give you complete satisfaction.

GENERAL SAFETY INSTRUCTIONS

PLEASE, TAKE TIME TO READ WELL THE INSTRUCTIONS FOR USE PARTICULARLY BEFORE THE FIRST USE.

A misuse of the appliance can damage it or hurt the user. Assure that you use the appliance for the use for which it is designed, we refuse any responsibilities as for the damages by an incorrect use or a bad manipulation.

1. Check that your mains voltage corresponds to that stated on the appliance.
2. Never leave the appliance unsupervised when in use. Keep out of reach of children or incompetent persons.
3. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified* person in order to avoid a hazard.
4. Only use the appliance for domestic purposes and in the way indicated in these instructions.
5. Never immerse the base of your appliance in water or any other liquid for any reason whatsoever. Never place it into the dishwasher.
6. Never use the appliance near hot surfaces.
7. Never use the appliance outside and always place it in a dry environment.

Instruction manual

8. Never use accessories that are not recommended by the producer. They could constitute a danger to the user and risk to damage the appliance.
9. Never move the appliance by pulling the cord. Make sure the cord cannot get caught in any way. Do not wind the cord around the appliance and do not bend it.
10. Stand the appliance on a table or flat surface.
11. Unplug the appliance when not in use.
12. This appliance shall not be used by children. Keep the appliances and its cord out of reach of children. Children shall not play with the appliance.
13. Always disconnect the appliance from the supply if it is left unattended and before assembling, disassembling or cleaning.
14. Appliances can be used by persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and if they understand the hazards involved.
15. Regarding the instructions for cleaning surfaces in contact with food or oil, thanks to refer to the below paragraph "Cleaning" in manual.
16. There's a potential injury from misuse.
17. Switch off the appliance and disconnect from supply before changing accessories or approaching parts that move in use.

Instruction manual

18. Regarding the instructions for the use of accessories, operation times and speed settings, thanks to refer to the below paragraphs.
19. Accessories, other than those supplied with the appliance, shall include instructions for their safety use
20. This appliance is intended to be used in household and similar applications such as:
 - . staff kitchen areas in shops, offices and other working environments
 - . farm houses
 - . by clients in hotels, motels and other residential type environments
 - . bed and breakfast type environments

(*) **Competent qualified electrician:** after sales department of the producer or importer or any person who is qualified, approved and competent to perform this kind of repairs in order to avoid all danger. In any case you should return the appliance to this electrician.

This instruction manual is available too on our website www.livoo.fr

SPECIAL SAFETY INSTRUCTIONS

Warning:

1. Do not run fingers along edge of knife to check sharpness.
2. To avoid injury, handle knives with extreme care.
3. Never insert the tip of the knife into the blade guide first and push through.
4. This could damage the knife sharpener and your knife. The knife sharpener is designed so that very little effort is needed to draw the knife through the blade guides.

Instruction manual

5. If downward pressure is applied to the knife as it is being drawn through the blade guides, the sharpening wheels will stall.

TECHNICAL SPECIFICATIONS

Voltage: 220-240V~ 50-60Hz

Power : 60W

Maximum continuous use time: 2 min, and each sharpen time do not over 30 seconds.

DESCRIPTION

- A. Coarse sharpening "V" groove
- B. Coarse sharpening "V" groove
- C. Fine sharpening "V" groove
- D. Fine sharpening "V" groove
- E. Screwdriver sharpening hole
- F. Scissor sharpening groove
- G. Switch ON/OFF
- H. Non slip feet
- I. Base
- J. Button of cord
- K. Cord



Instruction manual

USING INSTRUCTIONS

Before using for the first time

- Unwrap the product, make sure you remove all packaging materials.
- Wipe parts clean with a damp towel.
- Familiarize yourself with each part.

Attention: Do not add water when sharpening knife, scissor, screwdriver, otherwise will cause the risk of electric shock.

How to sharpen the knife:

- ✓ Place the appliance on a stable surface.
- ✓ Pull out the cord and plug in with the outlet.
- ✓ Press the switch, motor will drive the grinding wheel running up.
- ✓ Hold the handle and put the edge to the "V" groove, pull out the knife at even speed until the edge reach the bottom of the groove, repeat sharpening 3-4 times. (Put the edge as close to the front as possible, then the whole edge can be sharpened).

- "V" groove in picture 1-2 are coarse sharpening.
- picture 3-4 are fine sharpening.
- Picture 1 and 3 for sharpening the right edge, picture 2 and 4 for sharpening the left edge.

You can choose coarse or fine sharpening according to the sharpness of the edge, can coarse-sharpen and then fine-sharpen if the edge is dull. This will shorten the time of sharpening. You only need to fine-sharpen if the edge is not very dull.

- ✓ Turn off the switch and cut off the power.
- ✓ Clean the table and the appliance, finish sharpening.

Tips and Hints

Pull out the knife at even speed to get better sharpening.

- Slightly adjust the angle of the edge in the "V" groove for close contact.
- Press the appliance when sharpening, it will be more stable.
- Motor will be hot after several cycles, must let the appliance cool off before operate again.

How to sharpen the scissor:

- ✓ Connect with power and press the switch
- ✓ Open the scissor and hold one edge.



 
1



2



3

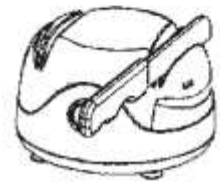


4



5

Instruction manual

 
- ✓ Put the sharper side upward and move the edge upward along the incline of the groove, pull out the scissor when it get contact with the grinding wheel, repeat 4-5times.
- ✓ Can slightly adjust the angle between the scissor and the incline according to the thickness and size.
- ✓ Sharpen the other edge in the same way.
- ✓ Turn off and cut off the power
- ✓ Clean the table and the appliance, finish sharpening

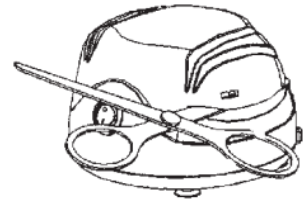


5

How to sharpen the screwdriver:

- ✓ Connect with power and press the switch
- ✓ Hold the handle of the screwdriver
- ✓ Put the head of screwdriver into "V" groove, and move downward to contact with the grinding wheel to amend two surfaces.
- ✓ Put the screwdriver into the square hole to contact with the grinding wheel for mending.
- ✓ Turn off and cut off the power
- ✓ Clean the table and the appliance when finish sharpening.

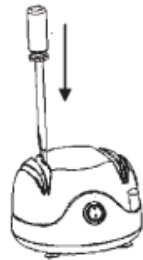

6

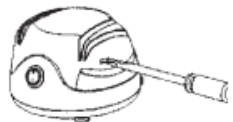


7

Attention:

- **When the knife/ scissor/ screwdriver blocks the grinding wheel and the wheel does not run, must take out the knife and do not sharpen the knife until the appliance run normally, otherwise it will be damaged easily.**
- **After 2 minutes each use, let the appliance cool down for 20 minutes.**

How to use the auto re-winded function

 - Pull out the cord to suitable length and plug it with the outlet when use.
- Unplug from the outlet first and then press the cord button after use, the cord will return back automatically; If the cord can't return, then hold the cord and press the button, the cord will rewind slowly.

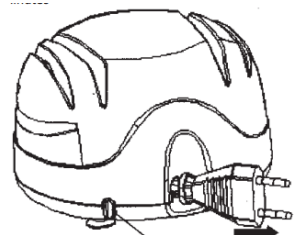

button

Attention: when the cord is pulled out completely, do not pull anymore.

Instruction manual

GENERAL CARE AND CLEANING

1. Wipe clean only the exterior of the sharpener with a non abrasive cleaner.
2. Never immerse the knife sharpener in water or any other liquid
3. Do not use any type of lubrication with the sharpener.
4. Not for use by children. Always keep out of reach of children.
5. Do not attempt any maintenance or alteration to this item yourself. This should always be done only by a trained professional.



**Correct disposal of the unit
(Electrical and Electronic Equipment)**

(Applicable in the European Union and the rest of Europe that have adopted separate collection systems countries)

The European Directive 2012/19/EU on Waste Electrical and Electronic Equipment (WEEE), requires that old household electrical appliances must not be disposed of in the normal household waste stream.

Old appliances must be collected separately in order to optimize the recovery and recycling of the materials they contain and reduce the impact on human health and the environment.

The symbol of the crossed out dustbin is marked on all products to remind the obligations of separate collection.

Consumers should contact their local authority or retailer for information concerning the correct disposal of their product.



LIVOO

BP 61071

67452 Mundolsheim - FRANCE

- Photo no contractual
- Worried about the quality of his products the manufacturer reserves the right to make modifications without advance notice