

LIVOO
Feel good moments
Instruction Manual

Electric Slicer



Reference: DOM396
Version: 1.6
Language: English

WWW.LIVOO.FR



Instruction Manual

You have purchased a product LIVOO brand and we thank you. We take great care in design, ergonomics and ease of use of our products. We hope that this product will give you complete satisfaction.

GENERAL INSTRUCTIONS

PLEASE, TAKE TIME TO READ WELL THE INSTRUCTIONS FOR USE PARTICULARLY BEFORE THE FIRST USE.

A misuse of the appliance can damage it or hurt the user. Assure that you use the appliance for the use for which it is designed; we refuse any responsibilities as for the damages by an incorrect use or a bad manipulation.

1. This device is exclusively intended for a domestic use. Any other use (professional) is excluded. Do not use outside.
2. Before use check that the voltage of your wall outlet correspond to the rated voltage manner.
3. Always connect your appliance on a wall socket connected with the earth.
4. Appliances can be used by persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
5. This appliance shall not be used by children. Keep the appliances and its cord out of reach of children.
6. Children shall not play with the appliance.
7. Do not let the appliance without supervision when he is connected.
8. Do not use the appliance:
 - if the grip or the power cable is damaged

Instruction Manual

- in case of malfunction
 - if the device was damaged in any way
 - if it fell in the water
 - if you dropped it.
9. No repair can be made by the user.
 10. If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or similarly qualified person in order to avoid a hazard (*).
 11. To reduce the risk of electric shock never submerge the appliance on water or any other liquid.
 12. Never operate this product with wet hands
 13. Do not let cord hang over edge of table or counter or touch hot surface.
 14. When you disconnect the cable, always pull him at the level of the index card, do not fire at the very cable.
 15. During the use, always unwind completely the power cable of its housing to avoid the overheating of the appliance.
 16. Do not place an appliance on or near a hot gas or on a heated oven.
 17. Do not touch the cutting blades and do not insert any kind of object (knives, forks, spoons etc.) while the product is operation. A spatula may be used only when the product is not in operation, avoiding the risk of serious injury.
 18. The appliance is not intended to be operated by means of external timer or separate remote control system.
 19. Always disconnect the appliance from the supply if it is left unattended and before assembling, disassembling or cleaning

Instruction Manual

20. It is absolutely necessary to keep this appliance clean at all times as it comes into direct contact with food.
21. Regarding the instruction for cleaning surfaces in contact with food or oil, thanks to refer to the below paragraph “cleaning” in manual.
22. Switch off the appliance and disconnect from supply before changing accessories or approaching parts that move in use.
23. Accessories, other than those supplied with the appliance, shall include instructions for their safety use.
24. There is potential injury if misuse. Care is needed when handling cutting blades.
25. Regarding the instructions for the use of accessories, operation times and speed settings, thanks to refer to the below paragraphs.
26. This appliance is intended to be used in household and similar applications such as:
 - staff kitchen areas in shops, offices and other working environments
 - farm houses
 - by clients in hotels, motels and other residential type environments
 - bed and breakfast type environments

(*) **Competent qualified electrician:** after sales department of the producer or importer or any person who is qualified, approved and competent to perform this kind of repairs in order to avoid all danger. In any case you should return the appliance to this electrician

This instruction manual is available too on our website www.livoo.fr

Instruction Manual

SPECIAL MEASURES

Warning:

- This appliance must be used with sliding feed table and the piece holder in position unless this is possible due to the size or the shape of the food.
- Never touch the blade when the slicer is operating! Danger of injury!
- Always use the Meat & Food Holder (except perhaps when slicing very large pieces of food). Press the piece of meat or food to be sliced forward using the Holder.
- Use the slicer only for slicing normal household foods and not for other purposes. Do not use the slicer for slicing deep-frozen foods, bones, foods with kernels or for slicing packaged foods.
- Never use the slicer for more than 5 minutes continuously.
- **WARNING:** The cutting blade continues to rotate after the slicer has been switched off for a few seconds.
- **For safety reasons, the slice thickness must be returned to "0" setting after each use.**

TECHNICAL SPECIFICATIONS


Voltage : 220-240V~ 50-60Hz

Power : 150W

Maximum operating time continuously: KB: 5 minutes

Instruction Manual

DESCRIPTION

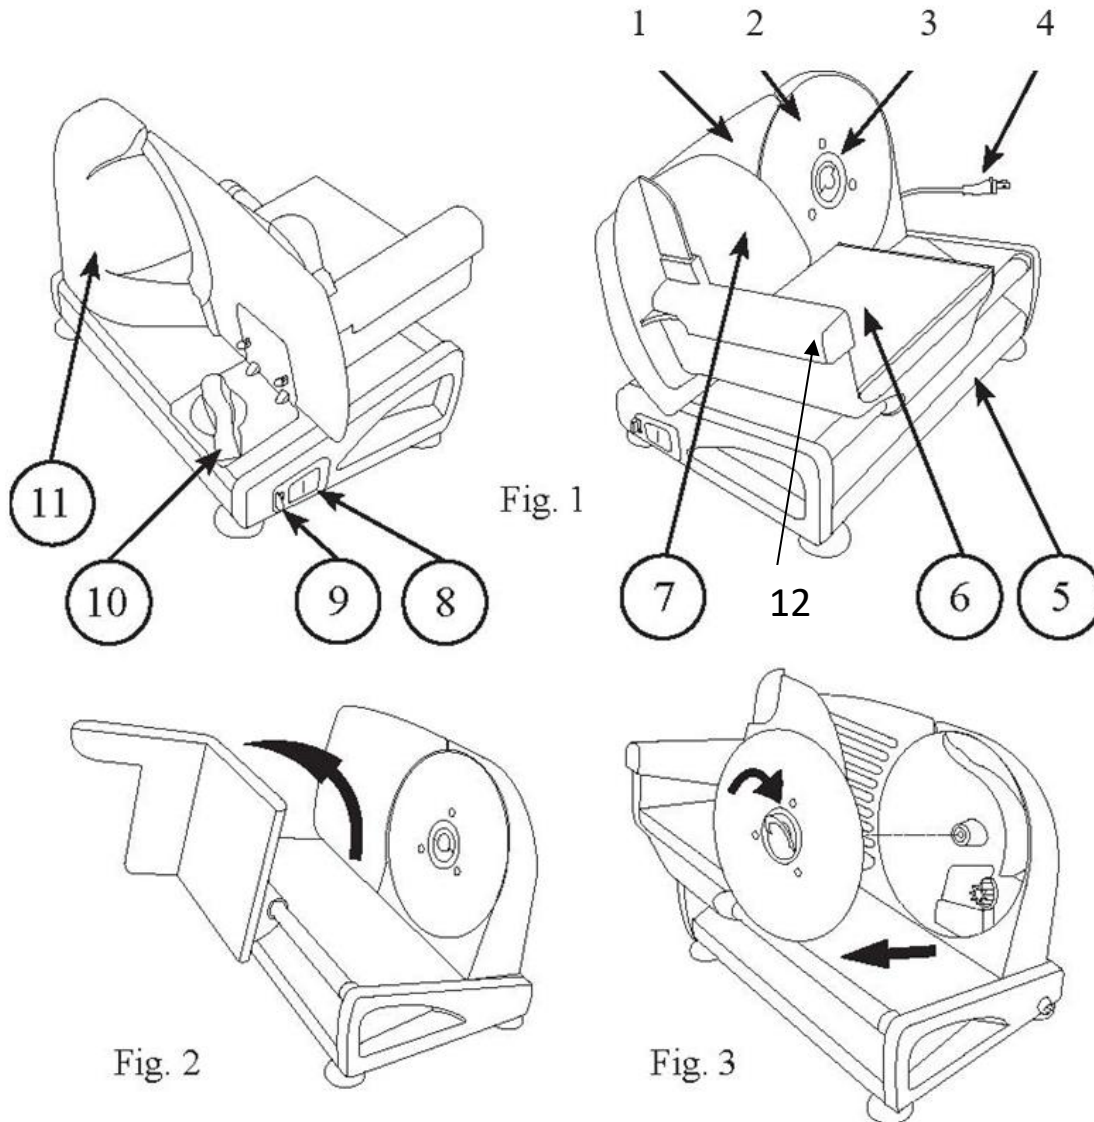

- | | |
|------------------------|---------------------------|
| 1. Support plate | 7. Slicing Guard |
| 2. Blade | 8. On/off switch |
| 3. Blade locking screw | 9. Locking switch |
| 4. Power cord | 10. Thickness adjust knob |
| 5. Base assembly | 11. Motor assembly |
| 6. Food carriage | 12. holder |

Instruction Manual

BEFORE FIRST USE

1. Packaging materials are not toys. Children should not play with the packaging materials, as they pose a risk of swallowing and suffocation!
2. Check for the presence of all parts and for transport damage. In case of damages or incomplete delivery, please contact your dealer.
3. Clean the appliance (Cleaning and care).
4. Do not place any part of this appliance in a dishwasher.
5. Danger of injury! Handle the blade (2) with care as it is very sharp!
6. Place the appliance on a dry, flat, and steady surface.
7. Apply downward pressure onto the appliance so that the suction feet get a good grip.

BEFORE PLUGGING IN THE APPLIANCE, MAKE SURE:

1. The electrical circuit is not overloaded with other appliances.
2. The blade (2) is properly engaged and tightened.
3. The on/off switch (8) is set to off position.
4. The thickness knob (10) is set to 0.
5. Do not slice:
 - Hardly frozen foods
 - Meat with bones
 - Food containing large stones or seeds
 - Food in wrappers such as aluminum foil or plastic film

USE:

1. Place the food carriage (6) to the left as far as possible.
2. Place the food to be sliced on the plate (6). Afterwards, put the holder (12) onto the food guide handle and adjust it until it holds the food in place firmly.
3. Place a tray (not provided) behind the blade (2) to catch the slices.
4. Turn the thickness knob (10) to desired slice thickness (0 - 15 mm).
5. Connect the power plug (4) to a suitable electrical outlet.
6. Set the on/off switch (8) to on position to switch on the appliance. The blade (2) starts running.
NOTE: this appliance is equipped with a safety switch (9), first bring the safety switch towards yourself then push simultaneously the on/off switch and the appliance will start. By pushing the on/off switch again the appliance will stop.
7. Grasp the food holder (12) with your right hand while keeping your thumb protected behind the slicing guard (7). Apply even pressure for best slicing results.
8. Slide the slicing guard (7) towards the blade (2). Move back and forth steadily with even pressure. Repeat for additional slices.
9. After use, set the on/off switch (8) to off position and the thickness knob (10) to 0.
10. Allow the blade (2) to stop running completely. Unplug the appliance afterwards.
Attention! Do never touch the blade, the blade is very sharp and can injure you severely.
Attention! Never use the device without the holder, you can seriously injure.
Attention! When turning off the device the blade remains turning for a while, do not touch the knife.



Instruction Manual

CLEANING AND CARE

1. Before cleaning, always switch off the appliance, let the appliance come to a complete stop and set the thickness knob (10) to 0.
2. Disconnect the appliance from the electrical outlet.
3. Clean the appliance after every use. This appliance contains no user serviceable parts and requires little maintenance. Leave any servicing or repairs to qualified personnel only.
4. Do not put any part of the appliance in the dishwasher!
5. Never use corrosive detergents, wire brushes, abrasive scourers, or metal or sharp implements to clean these parts.
6. Wipe the appliance housing with a soft, damp cloth.
7. Store the appliance in a cool, dry and clean place, out of the reach of children and pets.
8. Please keep the packaging for transporting the appliance or for storing your appliance when not in use for a longer period of time.

Instruction Manual



**Correct disposal of the unit
(Electrical and Electronic Equipment)**

(Applicable in the European Union and the rest of Europe that have adopted separate collection systems countries)

The European Directive 2012/19/EU on Waste Electrical and Electronic Equipment (WEEE), requires that old household electrical appliances must not be disposed of in the normal household waste stream. Old appliances must be collected separately in order to optimize the recovery and recycling of the materials they contain and reduce the impact on human health and the environment.

The symbol of the crossed out dustbin is marked on all products to remind the obligations of separate collection. Consumers should contact their local authority or retailer for information concerning the correct disposal of their product.

LIVOO
BP 61071
67452 Mundolsheim - FRANCE

- Photo no contractual
- Worried about the quality of his products the manufacturer reserves the right to make modifications without advance notice