

LIVOO
Feel good moments
Instruction Manual

Mist fan



Reference: DOM411
Version: 1.6
Language: English



Instruction Manual

You have purchased a LIVOO brand product and we thank you for it. We give great attention to the design, ergonomics and ease of use of our products. We hope that this product will give you complete satisfaction.

SAFETY INSTRUCTIONS

PLEASE, TAKE TIME TO READ WELL THE INSTRUCTIONS FOR USE PARTICULARLY BEFORE THE FIRST USE.

A misuse of the appliance can damage it or hurt the user. Assure that you use the appliance for the use for which it is designed, we refuse any responsibilities as for the damages by an incorrect use or a bad manipulation.

1. Before connecting your appliance, verify that the supply voltage indicated on the indicator plate of the appliance corresponds properly to that of your electrical installation.
2. No responsibility may be assumed in case of damages caused by non-compliance of this manual by the user or by faulty use or handling.
3. This appliance is meant for ONLY DOMESTIC USE and FOR INTERNAL USE.
4. Use this appliance only as indicated in the instruction manual.
5. Completely assemble the fan before starting it.
6. Before each use, ensure that the supply cord is in good condition.
7. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons (*) in order to avoid a hazard.

Instruction Manual

8. Never plunge the appliance, its supply cord or the plug in water or any other liquid.
9. Do not handle the plug on the appliance with wet hands.
10. This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities, or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
11. Young children, old people or disabled people must not be directly exposed to the air from the fan for long periods.
12. When you disconnect the supply cord, always remove it from the plug. Do not pull on the cord itself.
13. Always disconnect the appliance from its plug point when the appliance is not used, before moving it or cleaning it.
14. After assembly, do not remove the guards during use and cleaning.
15. Never insert your fingers, crayons or any other object across the ventilation grills.
16. Ensure that the fan is always placed on a flat surface, dry and stable.
17. Do not use your fan close to a window. Rain may cause

Instruction Manual

risks of electric shocks.

18. Do not use chemical products or abrasive detergents for cleaning, which may easily damage or deform your appliance.
19. Do not place either the fan or its parts near an over, a cooking appliance or any other source of heat.
20. Do not use the appliance in the presence of explosive or inflammable vapours.
21. Never try to disassemble or repair your appliance yourself. In case of repair by an unqualified person, the guarantee is cancelled.
22. For reducing the risk of electric shock, never use this product with wet hands, never spill a liquid on the product or submerge it in water.
23. Direct surveillance is necessary when your appliance is used near children or disabled persons.
24. Do not place the appliance on or near a hot gas or in a heated oven.
25. Do not use outside (For internal use only). This appliance is not suitable for industrial or open air use.
26. Never leave the appliance working without surveillance.
27. Avoid overheating the device by preventing the blocking of entry and exit of air. Clean all the entries and exits from time to time to remove the accumulated dust.
28. Leave a safe space of 50 cm around the fan, on above and on the sides, and a safe space of 120 cm on the

Instruction Manual

front.

29. This appliance is not designed to be used with an external timer or a separate remote control system.
30. Do not try to remove the parts and do not insert a metallic object inside the appliance.
31. Unplug the appliance before filling and cleaning.
32. This appliance is intended to be used in household and similar applications such as:
 - staff kitchen areas in shops, offices and other working environments
 - farm houses
 - by clients in hotels, motels and other residential type environments
 - bed and breakfast type environments
33. Be aware that high humidity levels may encourage the growth of biological organisms in the environment.
34. Do not permit the area around the humidifier to become damp or wet. If dampness occurs, turn the output of the humidifier down. If the humidifier output volume cannot be turned down, use the humidifier intermittently. Do not allow absorbent materials, such as carpeting, curtains, drapes, or tablecloths, to become damp.

Instruction Manual

35. Never leave water in the reservoir when the appliance is not in use.

36. Empty and clean the humidifier before storage.
Clean the humidifier before next use.

37. Warning: Micro-organisms that may be present in the water or in the environment where the appliance is used or stored, can grow in the water reservoir and be blown in the air causing very serious health risks when the water is not renewed and the tank is not cleaned properly every 3 days. Regarding the instructions for filling, cleaning and descaling (If applicable), thanks to refer to the below paragraph of the manual.



38. Clean the water tank every three days.



39. Filter cleaning/changing.

(*)**Authorised qualified electrician:** after-sales department of the manufacturer or the importer or any other qualified person, approved and authorised for carrying out this kind of repair for avoiding any danger. In any case, you must send the appliance to this electrician.

Instruction Manual

SPECIAL SAFETY INSTRUCTIONS


Information:

NEVER COVER THE APPLIANCE, even temporarily, because it may overheat and generate a risk of fire.

Do not use the fan near a shower, bathtub or a swimming pool.

DESCRIPTION

1. Misting Board
2. Front Grill
3. Blade Lock Nut
4. Blades
5. Back Grill
6. Grill Ring
7. Grill Lock Nut
8. Motor Cover
9. Back Shell
10. Nut
11. Control Panel
12. Control button
13. Misting Tube
14. Top Cap
15. Water Tank
16. Water Bracket
17. Knop
18. Base
19. Weight Rubber
20. Wheels
21. Screws
22. Washers
23. Support Tube

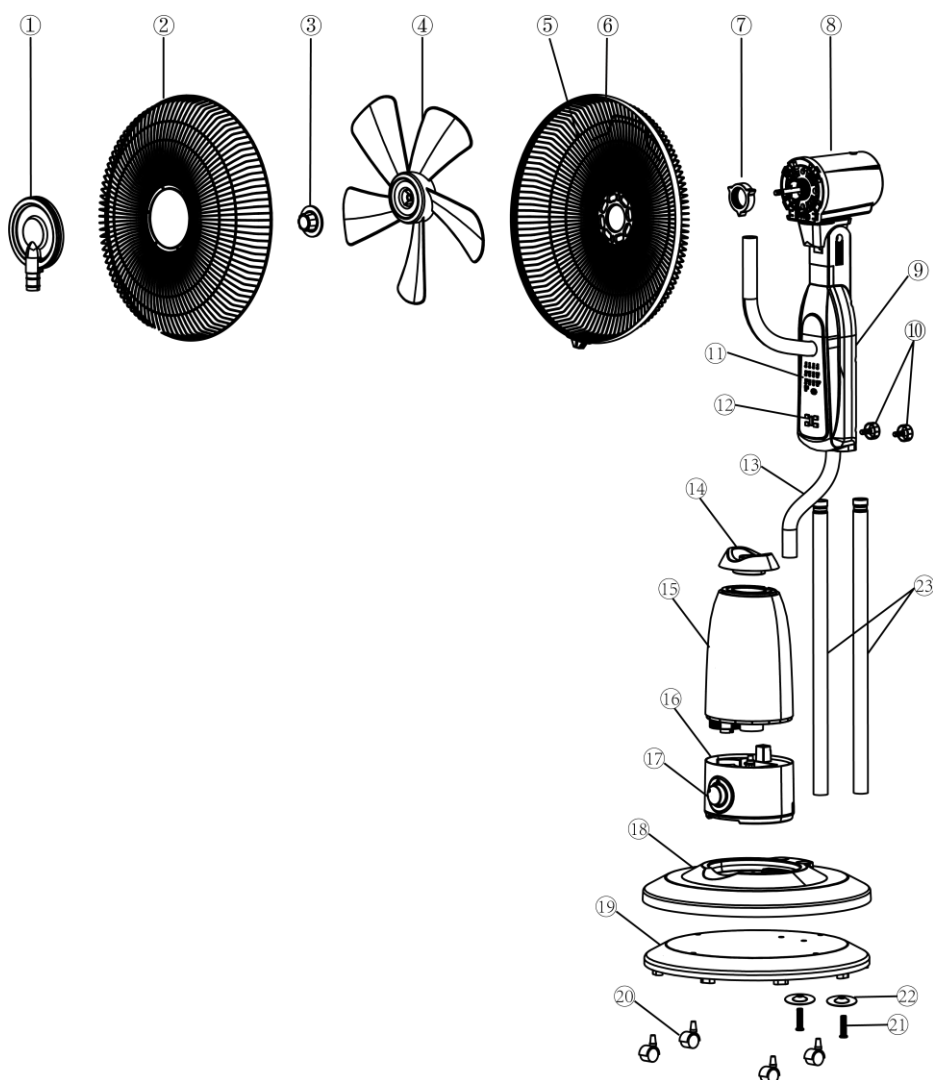

Instruction Manual

TECHNICAL SPECIFICATIONS

Voltage : 220-240V~50Hz

Puissance : 90W

3 speeds

Water tank capacity: 2,8 L

Misting: 220ml/h

Class II



Description	Symbol	Value	Unit
Maximum fan flow rate	F	44,98	m ³ /min
Fan power input	P	39,60	W
Service value	Sv	1,14	(m ³ /min)/W
Standby power consumption	P _{SB}	0,26	W
Off mode power consumption	P _{off}	0	W
Fan sound power level	L _{WA}	59,68	dB(A)
Maximum air velocity	C	3,08	meters/sec
Seasonal electricity consumption	Q	12,67	kWh/a
Measurement standard for service value	IEC 60879 : 1986 (corr.1992)		
Contact details for obtaining more information	DELTA BP61071 67452 Mundolsheim – France		

ASSEMBLING

Before first use, be sure to remove all packaging. Do not leave packaging such as plastic bags, polystyrene, cords within reach of children to avoid any risk of accidents.

Warning: the fan can be used only if completely and correctly assembled, i.e. with base, support and protective grill. If in doubt, have it checked by professionally qualified personnel or ask them to assemble it.

Note: before assembling the fan, ensure that it is not plugged into the mains. Refer to the diagrams for assembly.



Instruction Manual

1. Insert the main holder into the main body, and tight up by the nut (10).
2. Insert the 5 pieces of wheels (20) into the weight rubber (19), then tighten up by the screws (21) and the washers (22).
3. Put the back grill (5) on the motor shaft, tighten up by the grill lock up (7) to the motor cover (8). Insert the blades (4) on the motor shaft, and tighten up the blade lock nut (3).
4. Fixed the misting board (1) on the grill (2), and tight up by misting board lock screws.
5. Connect the front grill (2) and back grill (5) by grill ring (6), then tighten up by grill lock nut.

USE

Fill the water tank:


- Push the water tank upward and remove the water tank.
- Unscrew the filler cap and fill with water.
- Screw the filler cap and put the water tank back in position.

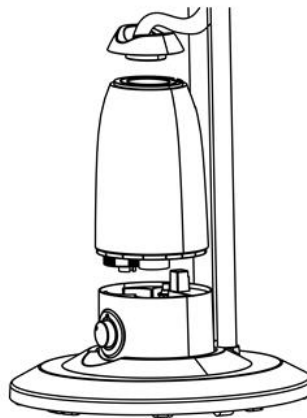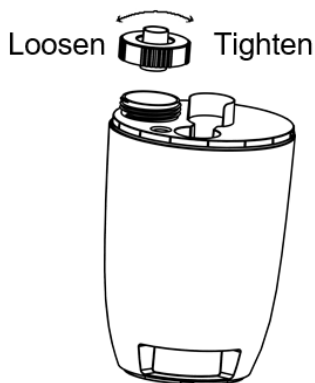


Caution:

- Make sure the product is unplugged from the mains before filling or refilling the water tank.
- Only use water in the water tank. Do not add any chemicals, oils or other additives.
- The temperature of water should not be 40°C above.

PANEL CONTROL

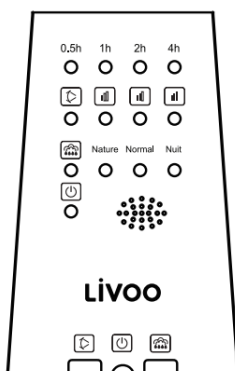

Remote Control

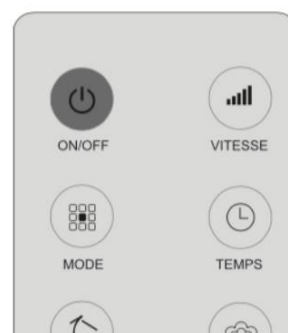

Instruction Manual

→ Mist volume
button



ON/OFF Button:

- Press ON/OFF button, the indicator light is on.
- press ON/OFF button again, all stop working, all indicator lights off.



Speed Button: Switch ON the fan and select fan speed: Low-Medium-High.



Mode Button: Choose airflow: Normal - Nature - Sleep.

Natural mode: The wind imitates the blow of natural wind based on strong and soft wind.

Sleep mode: the unit simulates a soft breeze suitable for night time use.

Normal mode: The wind blow based on Low/Med/High speed.

Note: The corresponding LEDs light to indicate the selected mode (nature, normal, sleep).



Timer Button:

Set the operating time from 30 minutes to 7h30. Each pressure represents 30 minutes. Indicators on the control panel indicate the selected run time.



Oscillation Button:

When fan is working, press the button to engage auto swing. It's out of work when fan is turned off.

Instruction Manual



Mist button:

- Mist function can be used separately, or worked together with the fan.
- Press On/off button one time to activate the fan. Press MIST button (F) to select only misting function without fan operation.
- Note: While the mist function work normally, the indicator light on the body shell is blue, while the water is lacking, the indicator light is red.

Remote Control: is supplied with one battery inside, remove the transparent sheet from the battery cover before use the remote control.

When the battery is over, it must be replaced with the same type (CR2025) following the drawing on the back of the remote control.

CLEANING AND MAINTENANCE

1. First ensure that the fan is off and remove the electric plug from the outlet.
2. Do not clean until the appliance is completely cold.
3. Remove the protection and the blades carefully. Do not let the blades fall!!
4. First use a soft cloth with a little soap for removing stains. Then wipe with a dry cloth. Never use a corrosive liquid which would damage the paint, metal or plastic!
5. Reassemble the fan after the fan parts have been dried completely. Do not connect the fan to power supply until it is fully reassembled.
6. Maintenance should be done by a qualified personnel. The motor bearings have been lubricated at the factory and should not require any additional lubrication.
7. Never use abrasive cleaning agents or pointy objects (for e.g. scrub brush or knife) for cleaning. Never use a corrosive liquid which would damage the paint, metal or plastic!
8. **Warning :** Do not submerge the appliance in water or other liquids. It is a danger to life due to an electric shock.
9. When the appliance is not used, store it as well as all its accessories and the instruction manual in a safe and dry place

Instruction Manual



**Correct disposal of the unit
(Electrical and Electronic Equipment)**

(Applicable in the European Union and the rest of Europe that have adopted separate collection systems countries)

 The European Directive 2012/19/EU on Waste Electrical and Electronic Equipment (WEEE), requires that old household electrical appliances must not be disposed of in the normal household waste stream.

Old appliances must be collected separately in order to optimize the recovery and recycling of the materials they contain and reduce the impact on human health and the environment.

The symbol of the crossed out dustbin is marked on all products to remind the obligations of separate collection.

Consumers should contact their local authority or retailer for information concerning the correct disposal of their product.





Instruction Manual

- Photo no contractual
- Worried about the quality of his products the manufacturer reserves the right to make modifications without advance