

LIVOO

Feel good moments

Instruction Manual

pop-corn machine



Reference: DOM442
Version: 1.4
Language : English

WWW.LIVOO.FR



Instruction Manual

Thank you for buying our LIVOO product. We take great care in design, ergonomics and ease of use of our products. We hope that this product will give you complete satisfaction.

General Instructions

**PLEASE, TAKE TIME TO READ WELL THE INSTRUCTIONS FOR USE
PARTICULARLY BEFORE THE FIRST USE.**

A misuse of the appliance can damage it or hurt the user. Assure that you use the appliance for the use for which it is designed; we refuse any responsibilities as for the damages by an incorrect use or a bad manipulation.

1. This appliance is not a toy. Close adult supervision is necessary when used near children.
2. Do not touch hot surfaces. Only use handles or knobs.
3. To protect against fire, electric shock and personal injury do not immerse cord, plugs or appliance in water or other liquid.
4. Unplug from mains when not in use and before cleaning.
5. Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner. Return the appliance to retailer/point of purchase for examination and repair.
6. The use of accessory attachments not recommended by the appliance manufacturer may result in fire, electric shock or personal injury.
7. Do not use outdoors.
8. Do not let cord hang over edge of table counter or touch hot surfaces.

Instruction Manual

9. Do not place on or near a hot gas or electric burner or in a heated oven.
10. Do not use the appliance for other than intended use.
11. Do not leave popcorn maker cooking while unattended.
12. The popcorn maker body may become hot during use. To avoid risk of burns, do not touch the hot surfaces. Allow popcorn maker to cool down before touching, lifting, cleaning or storage.
13. Do not immerse the cord, plug or the appliance in water.
14. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similar qualified persons in order to avoid a hazard (*).
15. The appliance is not intended to be operated by means of an outside timer or separate remote control system.
16. This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
17. Children shall not play with the appliance.
18. Cleaning and user maintenance shall not be made by children unless they are older than 8 and supervised.
19. Keep the appliance and its cord out of reach of children less than 8 years.
20. Check that your main voltage corresponds to that stated on the appliance.
21. DO NOT touch the upper cover, nor the inner parts when

Instruction Manual

machine running or hot.

22. Do not repair the appliance yourself
23. It is absolutely necessary to keep this appliance clean at all times as it comes into direct contact with food.
24. Regarding the instruction for cleaning surfaces in contact with food thanks to refer to the below paragraph “cleaning” in manual.
25. This appliance is intended to be used in household and similar applications such as:
 - Staff kitchen areas in shops, offices and others working environments
 - Farm houses
 - By clients in hotels, motels and other residential type environments
 - Bed and breakfast type environments

(*) Competent qualified electrician: after sales department of the producer or importer or any person who is qualified, approved and competent to perform this kind of repairs in order to avoid all danger. In any case you should return the appliance to this electrician

This instruction manual is available too on our website www.livoo.fr

TECHNICAL SPECIFICATION

Voltage	220-240V ~50-60Hz
Power	230W
Protection Class 	Electrical material classe I
uninterrupted operating time	Max 3 min

Instruction Manual

cooling time before use again	5 min minimum
Dimension	19X20X28.5
weight	1.82

DESCRIPTION



BEFORE USE

Wipe the appliance and accessories with soft damp cloth and be sure it is properly placed in the brackets. The popcorn machine can be turned on continuously for up to 3 minutes. Then it must cool for at least 5 minutes.

USE

1. First, find a flat stable surface
2. Plug in the kettle inside the appliance, install it on support brackets and ensure it is properly secured. Then you can fix the spin-on crank handle on the screw of kettle (on right or left side) by turning anticlockwise.
3. Plug in the appliance and switch it on position (I)
4. Allow the appliance to run 1-2 minutes to heat up kettle
5. Turn unit OFF (O). Open the door, open the tank valve.
6. Use the oil measuring spoon supplied to add $\frac{2}{3}$ tablespoon of your favorite popcorn cooking oil to the kettle. For best popping results, it is suggested to use light vegetable oil.

Instruction Manual

7. Fill the measuring cup to the brim with popcorn kernels.
Turn the unit ON and close the door (I).
Fresh, hot popcorn will begin to burst out of the flip lids on the kettle.
8. Once the kernels have stopped popping, you can stop the appliance and unplug it.

CLEANING AND STORAGE

DO NOT CLEAN WHEN THE APPLIANCE IS HOT

Do not clean with metal scouring pads. Do not use abrasive cleaners on the outside of the popcorn maker - these may scratch the surface.

- Wipe the appliance with damp cloth.
- Unplug the appliance and the kettle motor and remove kettle from support brackets.
- Take kettle out of the main unit.
- After removing it, fill $\frac{2}{3}$ of kettle with hot, soapy water, wait 15/20min and clean it, then rinse inside carefully and dry.
- Wash the collector bin with hot water and soapy water.
- Never put in dishwasher.

Note: If your appliance begins to smoke during cooking, it may be due to grease build up. In order to reduce smoking, make sure that you clean the inside of the kettle between uses.

Instruction Manual



**Correct Disposal of this product
(Waste Electrical & Electronic Equipment)
(Applicable in the European Union and other European countries with separate collection systems)**

The European Directive 2012/19/EU on Waste Facilities Electrical and Electronic (WEEE)

This marking shown on the product or its literature, indicates that it should not be disposed with other household wastes at the end of its working life.

To prevent possible harm to the environment or human health from uncontrolled waste disposal, please separate this from other types of wastes and recycle it responsibly to promote the sustainable reuse of material resources.

Household users should contact either the retailer where they purchased this product or their local authority office, for details of where and how they can take this item for environmentally safe recycling.



Pour en savoir plus :
www.quefairedemesdechets.fr

LIVOO

BP 61071

67452 Mundolsheim - FRANCE

- Photo no contractual
- Worried about the quality of his products the manufacturer reserves the right to make modifications without advance notice