

LIVOO
Feel good moments
Instruction Manual

Multifunctional food processor



Reference : DOP137
Version : 1.4
Language : English



Instruction Manual

Thank you to have purchased a product brand LIVOO. We take great care in design, ergonomics and simple use of our products. We hope that this product will give you complete satisfaction.

This instruction manual is available too on our website www.livoo.fr

General Instructions

PLEASE, TAKE TIME TO READ WELL THE INSTRUCTIONS FOR USE PARTICULARLY BEFORE THE FIRST USE.

A misuse of the appliance can damage it or hurt the user. Assure that you use the appliance for the use for which it is designed; we refuse any responsibilities as for the damages by an incorrect use or a bad manipulation.

1. Check that your mains voltage corresponds to that stated on the appliance.
2. The safety instructions do not by themselves eliminate any danger completely and proper accident prevention measures must always be used.
3. Appliances can be used by persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and if they understand the hazards involved.
4. This appliance shall not be used by children. Keep the appliance and its cord out of reach of children.
5. Children shall not play with the appliance.
6. Do not attempt to repair the appliance yourself, since you will be exposed to hazardous live components or other hazards by opening and removing the covers.

Instruction Manual

7. Do not use the appliance outdoor, place it in a dry environment, and only use the appliance for domestic purposes and in the way indicated in these instructions.
8. Never leave the appliance unsupervised when in use. Keep out of reach of children or incompetent persons.
9. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard (*).
10. Place this appliance as close as possible to the power source so that you can disconnect the plug quickly and easily.
11. Never immerse the base of your appliance in water or any other liquid for any reason whatsoever. Never place it into the dishwasher.
12. Always disconnect the appliance from the supply if it is left unattended and before assembling, disassembling or cleaning.
13. Never move the appliance by pulling the cord. Make sure the cord cannot get caught in any way. Do not wind the cord around the appliance and do not bend it.
14. Unplug the appliance when not in use.
15. It is absolutely necessary to keep this appliance clean at all times as it comes into direct contact with food.
16. Avoid contacting with moving parts. Keep hands, clothing, as well as spatulas and other utensils away from beaters during operating to reduce the risk of injury to people, and/or damage to the mixer.

Instruction Manual

17. The appliance is not intended to be operated by means of external timer or separate remote control system.
18. Keep this manual with the appliance. If the appliance is to be used by a third party, this instruction manual must be supplied with it.
19. To avoid electric shocks, do not use this device in the vicinity of water. Do not immerse the mains lead in water or other liquid.
20. Do not kink or clamp the mains lead. To avoid any risk of stumbling, do not allow the mains lead to hang over the edge of a table or a counter.
21. This appliance should not be set up in close proximity to a naked flame, easily flammable materials (curtains, textiles, etc.), a radiator, an oven or some other heat source.
22. Before use, place the appliance on a horizontal and flat surface.
23. The appliance should only be used for its intended purpose.
24. During use, do not touch moving parts with your fingers.
25. No liability is accepted for damage due to improper use or the failure to observe our operating instructions / safety notes.
26. Be sure to turn the speed selector to 0 position after each use.
27. Switch off the appliance and disconnect from supply before changing accessories or approaching parts which move in use.

Instruction Manual

28. Never pull out mixing beater/dough hook/egg whisk when the appliance is in operation.
29. Be careful if hot liquid is poured into the food processor or blender as it can be ejected out of the appliance due to a sudden steaming.
30. Regarding the instructions for cleaning surfaces in contact with food or oil, thanks to refer to the below paragraph "cleaning" in manual.
31. There is potential injury from misuse
32. Accessories, other than those supplied with the appliance, include instructions for their safe
33. Regarding the instructions for the use of accessoires, operation times and speed settings, thanks to refer to the below paragraphs
34. This appliance is intended to be used in household and similar applications such as:
 - staff kitchen areas in shops, offices and other working environments
 - farm houses
 - by clients in hotels, motels and other residential type environments
 - bed and breakfast type environments

(*) Competent qualified electrician: after sales department of the producer or importer or any person who is qualified, approved and competent to perform this kind of repairs in order to avoid all danger. In any case you should return the appliance to this electrician

Instruction Manual


TECHNICAL CHARACTERISTICS

Voltage: 230V~50-60Hz

Power: 250W

DESCRIPTION

Multifunction mixer, to realize your sweet and savory accomplishments, stainless steel bowl with a capacity of 3 L, 6 speed variations, 2 tools: metal whisk, dough hook: to knead, beat and mix your pasta pies, pancakes, pizza, egg white, pasta, light, whipped cream, bread, cake and desserts.

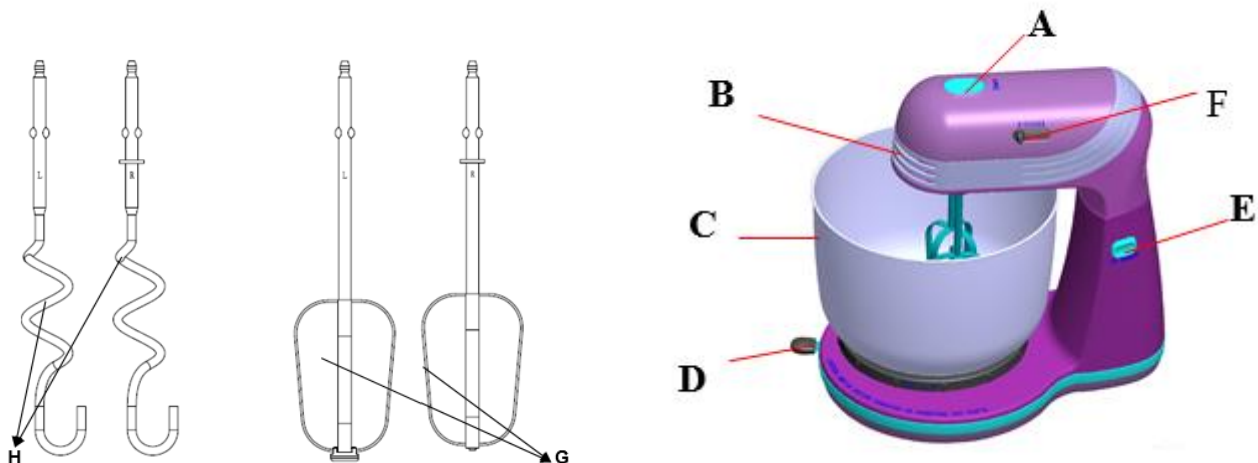

- A. Eject button: eject the sticks H and G by pressing the eject button (picture 2).
Note: To eject the sticks, release before the head with the press button "E"
- B. Mixer Head
- C. Stainless steel bowl: The capacity of the bowl is 3 L. Operate is according to picture 4.
- D. Adjusting button: Adjust the position of the stainless steel bowl as showed in picture 3: slide button to slide the bowl on the base to a uniform mixture and an easy removal,
- E. Press button "E", release the head according to picture 1 when you replace the accessories
- F. Speed button: 6 speeds can be adjusted. Speed "1", "2" ... "6". "6" is the highest speed.
- G. Round stick: It is suit for liquid food, such as egg, cream, etc...There is a letter "R" & "L" on the stick. "R" means it is for right side, "L" means it is for left side.
- H. Bend stick: It is suit for flour or other similar food. There is a letter "R" & "L" on the stick. "R" means it is for right side, "L" means it is for left side.

LIVOO

Feel good moments


Instruction Manual



Picture 3



Press on the lever while making it slide on right or left side to adjust the bowl position in order to have uniform mixture and for an easy removal from the base

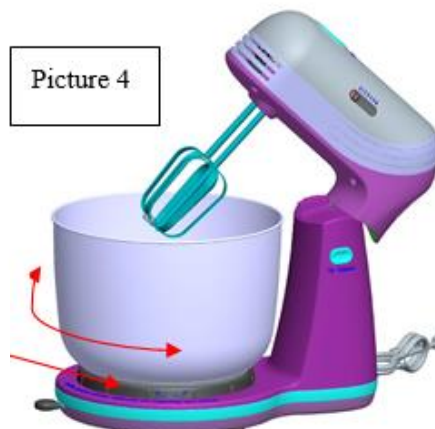

Picture 5



Use one hand to press on the turning tray to lock or unlock the bowl

LIVOO
Feel good moments
Instruction Manual

USE OF THE APPLIANCE

Caution: The stick must be used as a set. Round with round, bend with bend. Do not use the round stick and flexural stick at the same time.

It is normal at the beginning operation when there is a smell. If still have a smell after several used, check whether the food is too hard to blend or over used.

1. Clean all the detachable part.
2. Assemble the sticks and bowl as described above. Do not put the food over 2/3 of bowl.
3. Ensure the speed button is at the position "0" before plug the appliance.
4. Plug the appliance, put your food on the bowl, switch the speed button, choose the required speed (6 is the highest speed, 1 is the lowest speed.).

Caution : Do not switch the speed button to the highest speed when you use the appliance at the beginning. Adjust it step by step.

To ensure long life of your mixer, do not run it for longer than 15 minutes non-stop and wait around 30 min before use it again.

5. Once finish, remove the bowl and put the mix into an appropriate container.
6. Always switch off, unplug and dismantle before cleaning.

When the appliance cannot work: Switch off the appliance, check if the accessory is well assembled.

CLEANING AND MAINTENANCE

- Unplug the appliance before cleaning.
- Clean the accessories, sticks and bowl alone. These detachable parts are dishwasher safe
- Do not immerse the body in water. Use a dry cloth to clean the body.

Instruction Manual



Correct Disposal of this product
(Waste Electrical & Electronic Equipment)
(Applicable in the European Union and other European countries with separate collection systems)



The European Directive 2012/19/EU on Waste Facilities Electrical and Electronic (WEEE)

This marking shown on the product or its literature, indicates that it should not be disposed with other household wastes at the end of its working life.

To prevent possible harm to the environment or human health from uncontrolled waste disposal, please separate this from other types of wastes and recycle it responsibly to promote the sustainable reuse of material resources.

Household users should contact either the retailer where they purchased this product or their local authority office, for details of where and how they can take this item for environmentally safe recycling.



Pour en savoir plus :

www.quefairedemesdechets.fr

LIVOO

BP 61071

67452 Mundolsheim - FRANCE

- Photo no contractual
- Worried about the quality of his products the manufacturer reserves the right to make modifications without advance notice