

LIVOO
Feel good moments
Instruction manual

Heating cooking machine



Reference: DOP142
Version: 1.5
Language: English



Instruction manual

You have purchased a product LIVOO brand and we thank you. We take great care in design, ergonomics and ease of use of our products. We hope that this product will give you complete satisfaction.

This instruction manual is available too on our website www.livoo.fr

General Instructions

PLEASE, TAKE TIME TO READ WELL THE INSTRUCTIONS FOR USE
PARTICULARLY BEFORE THE FIRST USE.

A misuse of the appliance can damage it or hurt the user. Assure that you use the appliance for the use for which it is designed; we refuse any responsibilities as for the damages by an incorrect use or a bad manipulation.

1. Before use check that the voltage of your wall outlet correspond to the rated voltage manner.
2. Do not operate the appliance with a damaged cord or after malfunction or has been damaged in any manner.
3. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified person in order to avoid a hazard (*).
4. Do not let cord hang over edge of table or counter or touch hot surface.
5. Never immerse the appliance, the cord or plug in water or any other liquid for any reason whatsoever. Never place it into the dishwasher.
6. Do not touch hot surface. Use handles or knobs only.
7. Close supervision is necessary when your appliance is being used near children or infirm persons.
8. Do not place an appliance on or near a hot gas or on a heated

Instruction manual

oven.

9. Do not use outdoors (Household use only).
10. Do not touch the cutting blades and do not insert any kind of object (knives, forks, spoons etc.) into the bowl while the product is operation. A spatula may be used only when the product is not in operation, avoiding the risk of serious injury.
11. To avoid the risk of personal injury, this product should not be operated by children or people who are not familiar with these instructions.
12. Never operate the product when the bowl is empty and do not remove the bowl lid before the blades come to a complete stop.
13. This appliance is designed to chop small quantities of food under no circumstances should the bowl be overfilled.
14. This appliance shall not be used by children. Keep the appliance and its cord out of reach of children.
15. This appliance can be used persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
16. Children shall not play with the appliance.
17. Never leave the unit unattended when switched on.
18. The appliance is not intended to be operated by means of external timer or separate remote control system.
19. Never use this appliance :
 - If the socket or the cord is damaged

Instruction manual

- If case of disfunctionning
 - If the appliance is damaged in any manner
 - If it fell in the water
 - If you dropped it
20. Always disconnect the appliance from the supply if it is left unattended and before assembling, disassembling or cleaning
 21. Regarding the instructions for cleaning surfaces in contact with food or oil, thanks to refer to the below paragraph "cleaning" in manual
 22. Regarding the instructions for the use of accessories, operation times and speed settings, thanks to refer to the below paragraphs.
 23. It is absolutely necessary to keep this appliance clean at all times as it comes into direct contact with food.
 24. There is potential injury from misuse.
 25. Care shall be taken when handling sharp cutting blades, emptying the bowl and during cleaning.
 26. Switch off the appliance and disconnect from supply before changing accessories or approaching parts that move in use.
 27. Accessories, other than those supplied with the appliance, shall include instructions for their safety use.
 28. Be careful if hot liquid is poured into the blender as it can be ejected out of the appliance due to a sudden steaming.
 29. Heating element surface is subject to residual heat after use.
 30. Do not use the appliance if the rotating blades are damaged.
 31. Ensure that the blender is switched off before removing it from the stand.

Instruction manual

32. Warning: Avoid spillage on connector.
33. Appliance must be used only with stand provided.
34. This appliance is intended to be used in household and similar applications such as:
- staff kitchen areas in shops, offices and other working environments
 - farm houses
 - by clients in hotels, motels and other residential type environments
 - bed and breakfast type environments

(*) Competent qualified electrician: after sales department of the producer or importer or any person who is qualified, approved and competent to perform this kind of repairs in order to avoid all danger. In any case you should return the appliance to this electrician

SPECIAL MEASURES

Warning :



Caution hot surface!

DO NOT OPERATE this product near water sources or flammable liquids.

DO NOT CLEAN OR TOUCH this product when it is still hot

DO NOT USE SHARP OBJECTS

SPECIFICATION

Voltage: 220-240V~ 50-60Hz


Power: motor: 500W Element chauffant: 1000W

Maximum operating time for preparing dough: 1.30min

Instruction manual

DESCRIPTION

- A. Measuring cup
- B. Bowl lid
- C. Airproof ring 1
- D. Blades
- E. Airproof ring 2
- F. Spanner
- G. Stirring attachment
- H. Bowl lid knob
- I. LCD display
- J. Control panel
- K. Base
- L. Lid
- M. Food steamer tray
- N. Steamer
- O. Soup storage lid
- P. Inside steamer basket
- Q. Bowl
- R. Spatula
- S. Switch

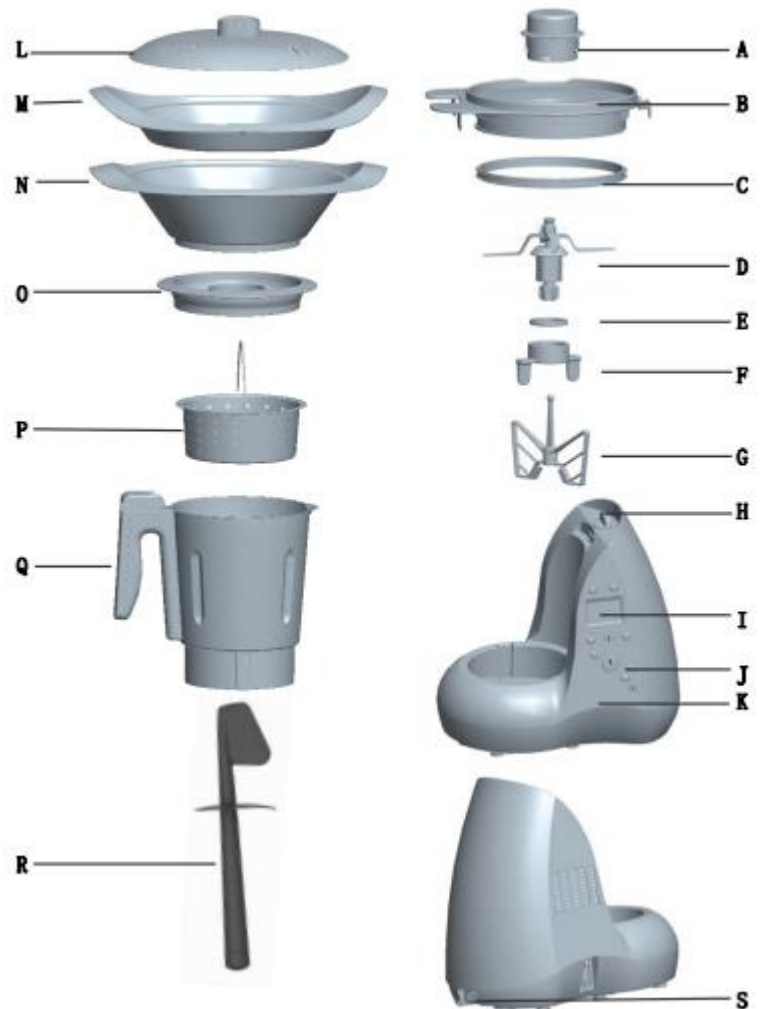


PANEL DESCRIPTION

Instruction manual

Complementary explanations

a. "Pulse" button (not working when temperature is more than 60°C)
"Pulse" working mode is per mix 2 seconds by 12 speed will mix 1 second by 1 speed.

b. "Turbo" button (not working when temperature is more than 60°C)
"Turbo" working mode is up to maximum 12 speed immediately by hand press.

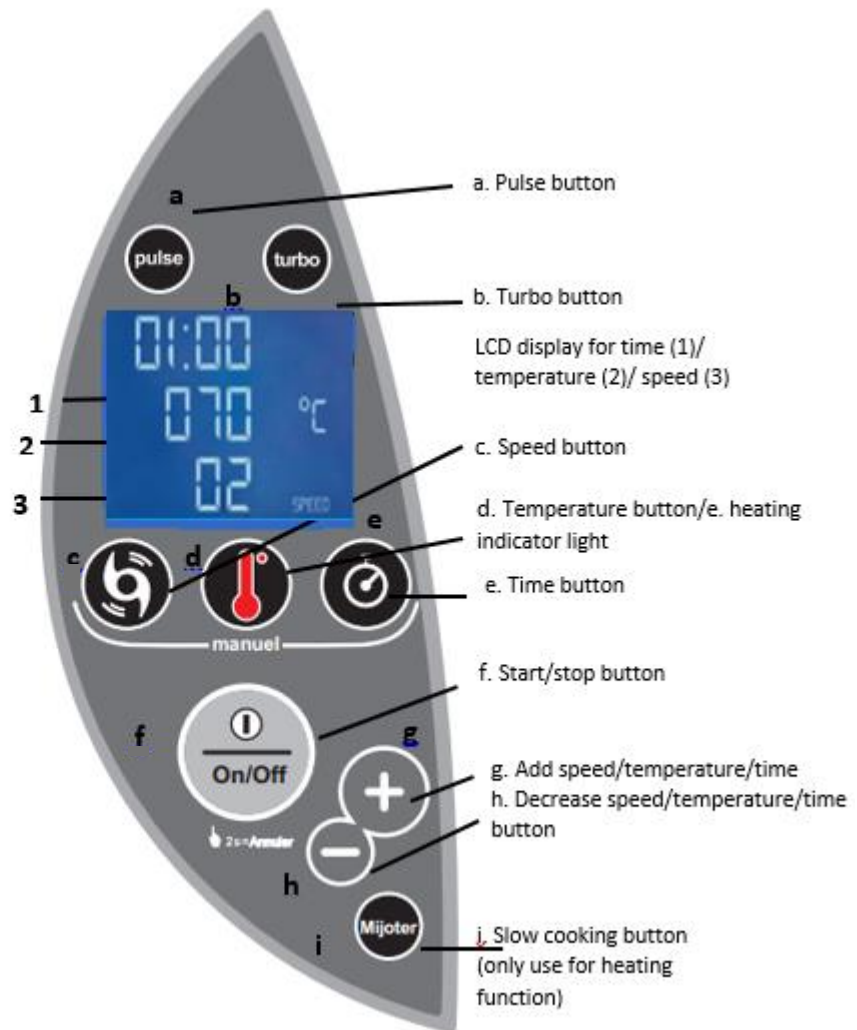

USE OF THE APPLIANCE

Before cooking:

Caution:

A logo hot surface is on the bowl to that the marked item can be hot and should not be touched without taking care!
The bowl of the appliance has maximum capacity of 3 liters, using capacity of 2 liters


Caution: Never exceed maximum capacity (2L) limit of the bowl to ensure safe usage.

How to install the blade:

In order to clean the blades and the bowl, the blade can be removed easily from the bowl. Please follow the instructions below:



Instruction manual

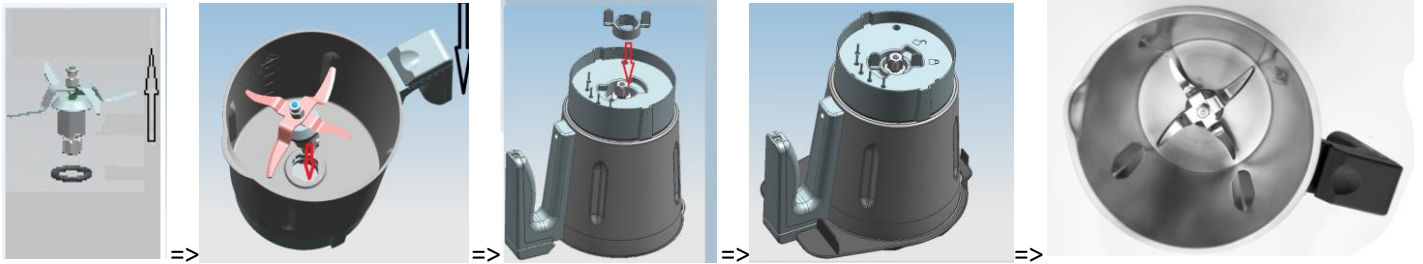

1. Put the airproof ring (E) on the blade. Push the blade through the opening in the bottom of the bowl, ensure blade lock buckle in correct position
2. Put the spanner (F) lock on blade base from the other side of bottom.
3. Rotate the spanner clockwise slightly to ensure locked.

Caution:

- The blade is very sharp. Handle it with care. Only hold the upper part of the blade!
- The airproof ring must to be fitted on the blade. If there is no airproof ring, the food to be chopped or cooked may leak out and damage the appliance.
- While remove the blade from the bowl, please hold the upper part of the blade with one hand, and release the nut by spanner with the other hand. The blade is very sharp. Please handle it with care!


Blade protection:

A blade protection is included in the product. You can easily use it when you want to heat/cook something without cutting your preparation. Add carefully the protection on the blades and turn it to lock. Then you cook easily but with a restricted speed limited to speed 5.

Caution: the blades are sharpened, be careful when you add the blades protection.


How to install and remove the bowl lid

Before the first use, please install the Airproof ring 1 (C) to the lid as below:

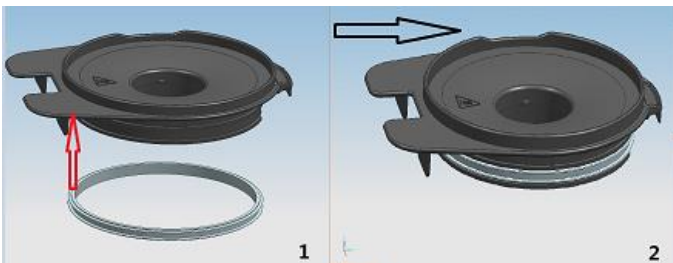

How to install the lid:


Instruction manual

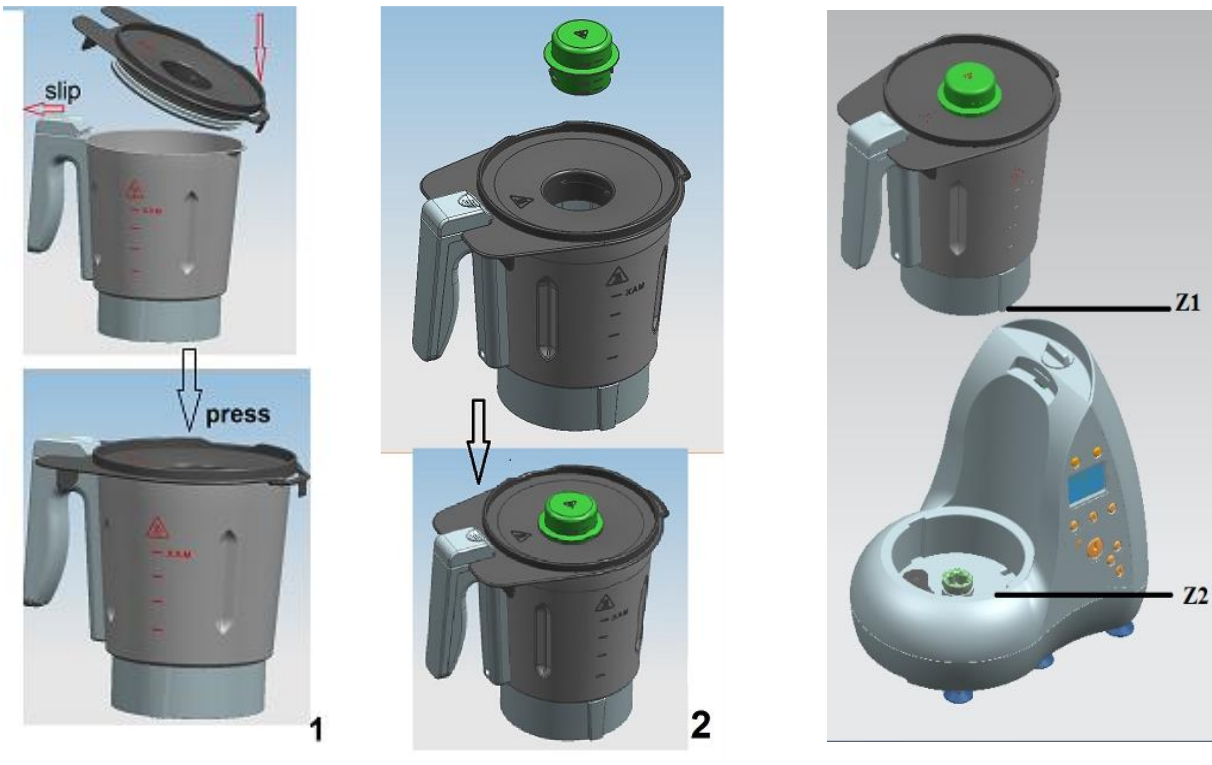

3

CAUTION: If the lid is not well installed, you will not be able to switch on the product

- 1 Always put the lid from the spout as showed on the drawing 1. Then press the bowl lid slightly to ensure the lid cover close.
- 2 Insert the measuring cup at the top of the lid and rotate the cup locked on the bowl lid
- 3 The measuring cup has 2 functions: measure and avoid projections while cooking.
Important: Leave the measuring cup on the lid every time you use the appliance.
- 4 Insert the bowl onto the bowl socket. Rotate the bowl lid knob (H) clockwise on the main appliance to lock bowl

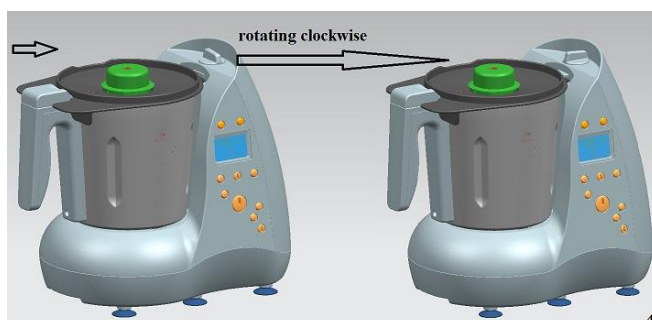

4

To remove the bowl from the main appliance, please follow the steps:

1. Rotate the bowl lid knob anti-clockwise to release bowl.
2. Draw the bowl out of the main appliance.
3. Rotate the measuring cup release it from the bowl lid
4. Slip open the bowl lock and take off the bowl lid

How to program your appliance with the control panel

Instruction manual

Switch on/ switch off

Switch on/off your appliance with the button on the right part of the base (S)

You have a display to program time, temperature and speed

The Time.

Press on the timer button to program it and adjust with “-” to “+”, buttons

(Timer range: 1 second-60minutes)

- 1-60 seconds: From “-” to “+”, the time increases by 1 second.
- 1-10minutes: From “-” to “+”, the time increases by 30 seconds.
- Above 10minutes: From “-” to “+”, the time increases by 1 minute.

Note 1: You can cancel it any time: Press lengthily on “Start/Stop” for 2 seconds

Note 2: If you do not program this function, the appliance will display the pasted time

The temperature.

Press on the temperature button to program it and adjust with “-” to “+” buttons

(Temperature range: 20°C-120°C)

- From “+”, the temperature increases by 10°C
- From “-”, The temperature decreases by 1°C

If you select a temperature, that temperature will be maintained and displayed on the LCD screen.

If no temperature is programmed, the LCD display will show the actual temperature inside the bowl.

Note 1: You can cancel it any time: Press lengthily on “Start/Stop” for 2 seconds

Note 2: You can change the temperature at any time by pressing on the temperature button and adjust with “-” to “+” buttons.

Note 3: It is recommended to not use the PULSE function to mix or to use speed to high when the food is cooking more than 60 °C

The speed

Press speed button to program it and adjust with “-” to “+”, buttons

You can adjust the speed from 1 to 12.

The speed 1 is a speed of brewing, it will not chop the food but will mix it slowly

Speed 1 to 4 allow you to use the stirring attachment (G) or to program a temperature

Sped 5 to 12 allow you to adapt the speed of the appliance with your mix.

Note 1: You can change the speed at any time by pressing on the speed button and adjust with “-” to “+” buttons.

Note 2: You can cancel it any time: Press lengthily on “Start/Stop” for 2 seconds

Pulse button:

Instruction manual

This buttons allows you to have speed 12 for 2 seconds, then speed 1 working with 1 second, then circulation for working in this two speed mode.

Note 1: be careful with projections and ensure the cap is on the bowl when you use this function especially when the food is hot

Note 2: you can use it if the temperature is less than 60°C

Turbo button:

This button allows you to use the speed 12 by the time you press on the button. It is better to use by short impulsions.

Note 1: be careful with projections and ensure the cap is on the bowl when you use this function especially when the food is hot

Note 2: you can use it if the temperature is less than 60°C

Slow cooker button (Mijoter)

This button allows you to cook in mixing very slowly your food, representing the same movement you do when you stir with a spoon.

To activate this function, Set time, speed and temperature, press start and then press on slow cooker button.

The product and its accessories

The measuring cap



It has different functions: close the lid to avoid heat loss and/or food projection. You can also use it to measure ingredients liquid (from 25 to 90ml).

The blades



Removable 4 blades knife

Instruction manual

The blades protection



Use this accessory when you want to cook food and/or use slow cooker function without cutting food. The blade protection will be added to the blade cover following the steps below:




Fig 1



Fig2



Fig3

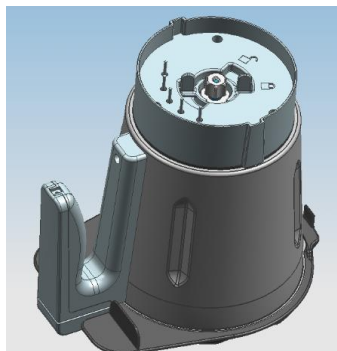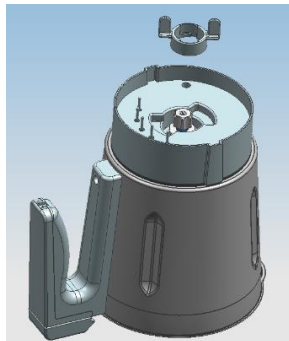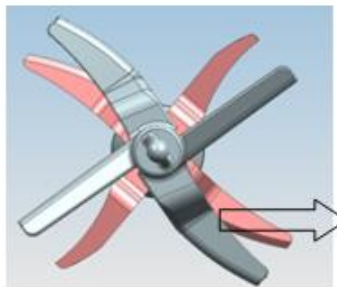

1. Hold the ball-shaped end of the blade cover (fig.1).
2. Insert the blade cover on the upper part of the blade, should be leave a little gap between cover and blade if want fix well (See fig.2).Then rotate cover to clock the cover on the blade (See fig.3).
(If you want to remove the cover blade from the blade, just hold the ball-shaped end and pull it out with rotations in clockwise directions).
3. Then insert the blade which fixed the cover on the bowl, and clock well the spanner. (Fig.6/7)

Caution:

1. The speed is limited 1 to 5 speeds when use blade cover. Otherwise the cover is easy break.
2. The temperature limited less than 100°C.

Instruction manual

The heating resistant spatula



The spatula is an element you use to stir the food during cooking in inserting it by the whole on the lid. The protection on the handle will avoid to touch the blades.

You can also use to remove the food from the bowl. The end of the spatula is made to be able to be inserted between blades and the bowl.

The spatula can also help you to remove the inside stainless steel steamer


The stirring attachment (Butterfly)




The butterfly will help you to achieve the best results while whisking cream, beating mayonnaise, egg white or slow cooking.

Install/remove the butterfly

To install

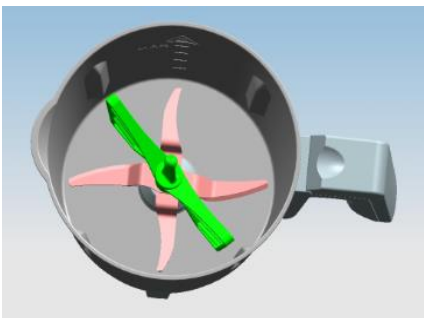

To remove

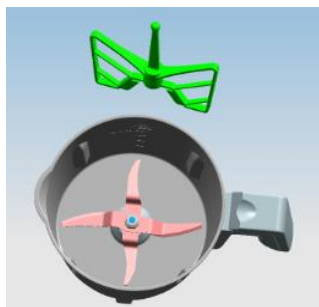

1. Hold the ball-shaped end of the butterfly.
2. Insert the butterfly on the upper part of the blade. (See the above figure)
If you want to remove the butterfly from the blade, just hold the ball-shaped end and pull it out with rotations in both directions.
3. The speed is limited 1 to 5 speeds or slow cook function when use butterfly. Otherwise the butterfly can easy break.

Instruction manual

How to use the butterfly

Please follow the steps:

1. Install the blade and butterfly, put the food in to the bowl
2. Then cover the bowl lid.
3. Install the bowl on the main appliance.
4. Rotate the bowl lid knob until it is locked in position. And put the measuring cup on the bowl lid.
5. Plug in and turn on the power switch.
6. Set the time you need, select the speed (1-10). The appliance starts to working

Note: If you skip the timer setting, the timer is counting (1.2.3.4.5...).

7. A "Beep" will be heard 5 seconds while the working time is automatic stop, LCD screen is flashing until reset manually by press any button.
8. After use, turn the main appliance off. Unlock and remove the bowl from the base
9. Remove the bowl lid.
10. Take out the processed food from the bowl.

Caution:


- Only switch on after the butterfly has been positioned into place.
- Don't add ingredients that might damage or block the butterfly when the blade is in motion and the butterfly is fitted.

The food steamer tray and steamer with cover



These accessories are perfectly suited for preparing food in a quick and healthy way such as vegetables with meat, sausages, steamed fish etc.

Instruction manual

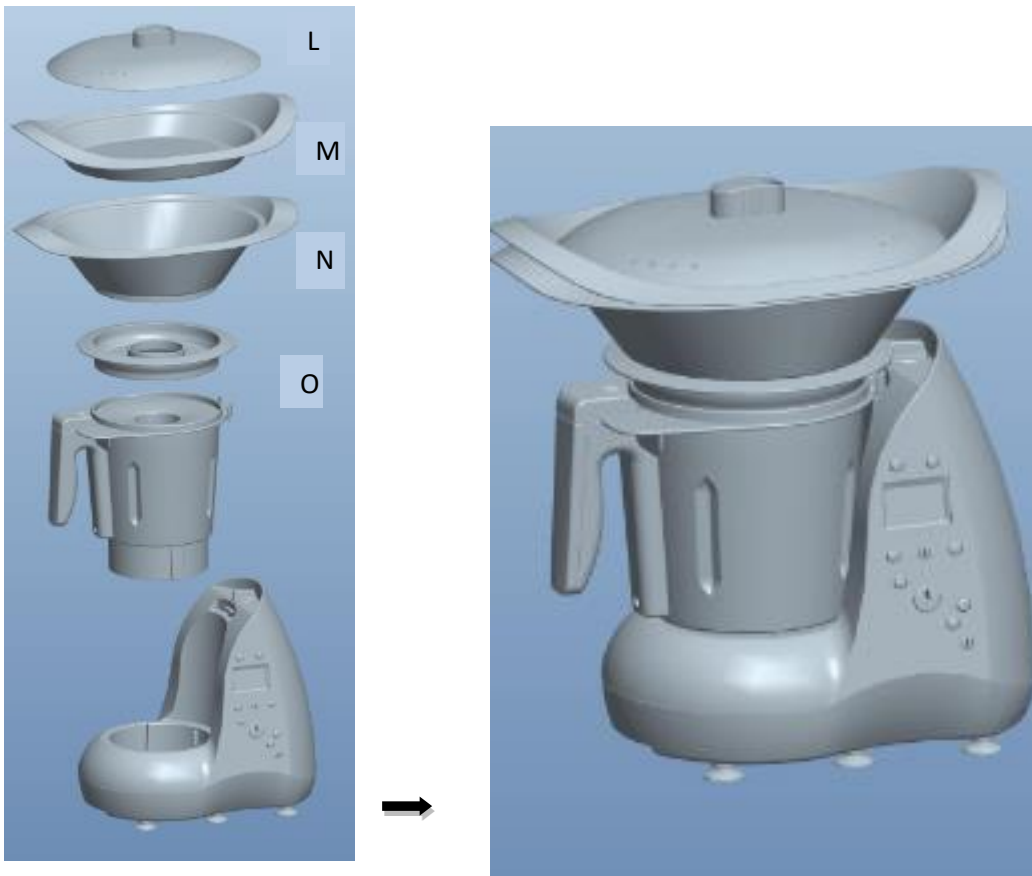

You can use the steamers in either of the following two combinations:

Combination 2 floor steamer: Storage Lid (O) + Food Steamer tray (M) + Steamer (N) + Lid (L)

Note: Use the soup storage lid (O) under the steamer tray in order to collect the excess water
You can use this combination for cooking different foods, such as vegetables with fish and/or fish

Combination 1 floor steamer: Storage Lid (O) + Steamer (N) + Lid (L)

Note: Use the soup storage lid (O) under the steamer in order to collect the excess water

You can use this combination for larger amount of the same food, vegetables, potatoes or large pieces of meat, fish or sausages.

Please follow the steps:

1. Install the blade.
2. Add the water ($0,5L \leq \text{water} \leq 2L$) in the bowl.

Caution: The water in the bowl should be more than 0,5 liter. 0,5L water can be used for steaming food for 30 minutes.

3. Cover the bowl lid.

Instruction manual

4. Install the bowl on the base
5. Rotate the bowl lid knob until it is locked in position.
6. Install the soup storage lid (O) on the bowl lid.
7. Put the steamer on the soup storage lid (If you chose combination 1 floor).
8. Put the food on the steamer, and then cover the lid.
9. Plug in and start the appliance.
10. Choose your cooking mode (use only heating mode or heating+ mixing mode optional) to steam.

The stainless steel basket (inside steamer)




It is perfect to cook delicate food which cannot be cooked directly inside the bowl or cook accompaniment as rice, pasta, potatoes...

To use it, follow the steps below:

1. Install the blade
2. Put the inside steamer into bowl
3. Add the water ($0,5L \leq \text{water} \leq 2L$) in the bowl.

Caution: The water in the bowl should be more than 0,5 liter. 0,5L water can be used for steaming food for 30 minutes

4. Then install the inside steamer into the bowl.
5. Cover the bowl lid
6. Insert the measuring cup and rotate the cup locked on the bowl lid (two sides can running and locked)
7. Choose working mode (only heating mode or heating+ mixing mode optional) to steaming.
8. When steaming finished need use the spatula take out the inside steamer, please don't take it by hand in case of scalding.

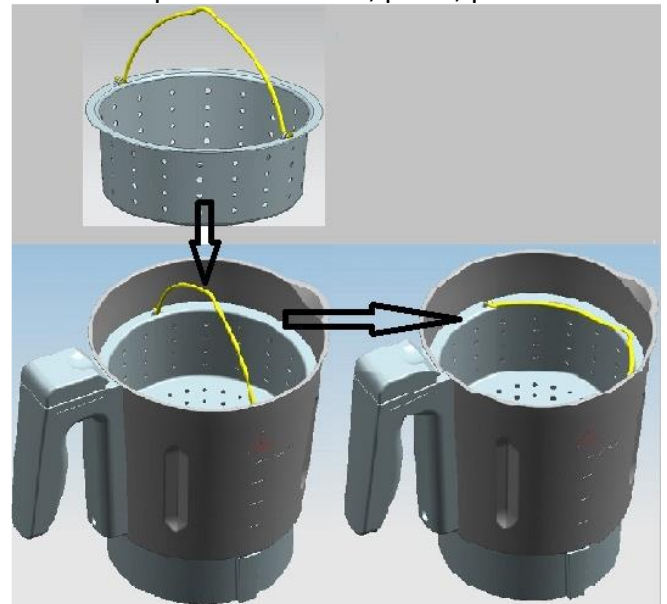


Caution:

- Danger of scalding by hot steam and hot condensed water.
- Never use the steamer without lid.
- If the lid is not fitted properly, the steam will escape and food inside steamer will not cook properly.

Instruction manual

To remove the inside steamer

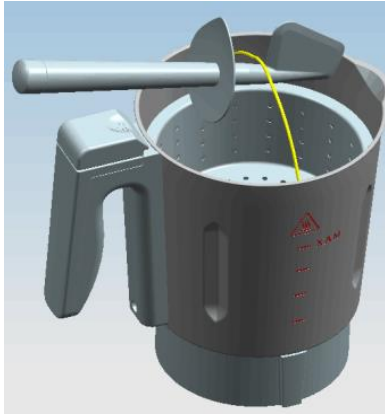

Use the spatula to take out the inside steamer.

WORKING MODE

Mode 1-To mix food:

Please follow the steps:

1. Install the blade, put the food in to the bowl
2. Then cover the bowl lid
3. Install the bowl on the base
4. Rotate the bowl lid knob until it is locked in position. And put the measuring cup on the bowl lid.
5. Plug in, then :

Note: If you skip the timer setting, the appliance is working with timer counting (1.2.3.4.5...60minutes).

- A. Press the "Time" button, and press "+" or "-" to set the time (less than 1hour) you need,
 - B. Press the "Speed" button, and press "+" or "-" select the speed (1-12).
 - C. Press "start/stop" button, the appliance starts working
6. At the end, a "Beep" will be heard 5 seconds while the working time automatic stop, LED screen is flashing until reset manually by press any button.
 7. After use, turn the main appliance off. Unlock and remove the bowl from the base.
 8. Remove the bowl lid.
 9. Take out the mixed food from the bowl.

Caution:

- The blade is very sharp. Handle it with care.
- Only hold the upper part of the blade!
- For processing the hard food such as coffee beans and almond, don't chop it longer than 40 seconds. And rest the appliance at least 10 minutes before the next operation

Instruction manual

Mode 2-To make dough

The blade is perfectly suited for such as making biscuit paste, sponge cake dough etc.

Quantity:

Flour: 500g

Water: 360g

Speed: 2

Maximum operating time for preparing dough: 1.30min

Please follow the steps:

1. Install the blade, put the food in to the bowl
2. Then cover the bowl lid (as explained on the step by step above)
3. Install the bowl on the base
4. Rotate the bowl lid knob until it is locked in position. And put the measuring cup on the bowl lid.
5. Plug in and:
 - A. Press the Time button, and press "+" or "-" set the time (less than 1.30 min)
 - B. Press the Speed button, and press "+" or "-" set speed (1-2 according to the recipes).
 - C. Press "start/stop" button, the appliance starts to work

Note: maximum allowable speed : speed 2

6. At the end, a "Beep" will be heard 5 seconds while the working time is automatic stop, the light of LCD display is flashing until reset manually by press any button.
7. After use, turn the main appliance off. Unlock and remove the bowl from the base
8. Remove the bowl lid.
9. Take out the food from the bowl.

Caution:

- The maximum of kneading dough is 0.5Kg. Don't make the dough more than 0.5Kg.
- Caution: The blade is very sharp! Don't take out the dough by hand!

Mode 3-To heat food (without mix)

The appliance is perfectly suited for preparing some food, such as cooking baby food, risotto, marmalade, etc.

Please follow the steps:

1. Install the blade and the protection, put the food in to the bowl
2. Then cover the bowl lid (as explained on the step by step above)
3. Install the bowl on the base
4. Rotate the bowl lid knob until it is locked in position. And put the measuring cup on the bowl lid.
5. Plug in and :

Instruction manual

A. Press the Time button, and press “+” or “-” set the time (less than 1 hour)

Note: If you skip the timer setting, the timer is counting (1.2.3.4.5...60 minutes)

B. Press the Speed button, and press “+” or “-” set speed (1-4) according to the recipes

C. Press “start/stop” button, the appliance starts to work

6. The machine start heating, the heating indicator light is flashing. When the user did not set up temperature, the machine will cannot heat, if the user set the temperature, the temperature will be kept warm on set.
7. At the end, a “Beep” will be heard 5 seconds while the working time automatic stop.
8. After you finish the operation, the light of LCD display is flashing until reset manually by press any button.
9. After use, turn the main appliance off. Unlock and remove the bowl from the base
10. Remove the bowl lid.
11. Take out the food from the bowl.

Note: you can use the slow cook function

Caution:

- Don't touch the metal part of the bowl while it is hot.
- Only hold the handle of the bowl to move the bowl.
- Never heat up the bowl when it is empty.
- Don't heat milk more than 500ml!
- High temperature protection: when temperature in the bowl is more than 60°C, speeds is limited in speeds 1-5.

Mode 4-To Heat and Mix

The appliance is perfectly suited for preparing some food, such as cooking mash, vegetable soup etc.

Please follow the steps:

1. Install the blade and the protection, put the food in to the bowl
2. Then cover the bowl lid (as explained on the step by step above)
3. Install the bowl on the base
4. Rotate the bowl lid knob until it is locked in position. And put the measuring cup on the bowl lid.
5. Plug in and :

A. Press the Time button, and press “+” or “-” set the time (less than 1 hour)

Note: If you skip the timer setting, the timer is counting (1.2.3.4.5...60 minutes)

B. Press the Speed button, and press “+” or “-” set speed (1-4) according to the recipes

C. Press “start/stop” button, the appliance starts to work

6. The machine starts heating and mixing, the heating indicator light is flashing. If did not set up temperature, the machine will cannot heat, if set the temperature, the temperature will be kept warm on set, the timer is counting down (...5.4.3.2.1).
7. At the end, a “Beep” will be heard 5 seconds while the working time automatic stop.
8. After you finish the operation, the light of LCD display is flashing until reset manually by press any button.
9. After use, turn the main appliance off. Unlock and remove the bowl from the base

Instruction manual

10. Remove the bowl lid.
11. Take out the food from the bowl.

Caution:

- Don't touch the metal part of the bowl while it is hot.
- Only hold the handle of the bowl to move the bowl.
- Never heat up the bowl when it is empty.
- If you want to heat the food for a few more minutes, set the speed back to "0".then press Start/Stop button. The appliance continues working.
- Don't heating milk more than 500ml!
- High temperature protection: when temperature in the cup is more than 60°C, speeds is limited in speeds 1-5.

Problems and solutions:

Code	Explanations	Solutions
E01	The bowl was installed incorrectly.	Turn off the machine, Take out the bowl and reinstall it according to the operating instruction, then restart again.
E02	The bowl lid was installed incorrectly.	Turn off the machine, Take out the bowl lid and reinstall it according to the operating instruction. then restart again
E03	The bowl lock knob is not locked	Turn off the machine, correct operation, then restart again.
E04	1. Too much ingredients in the bowl or the speed is too low to move 2.The machine motor have high temperature protect, so the machine working long time cause motor's temperature too high to moving.	1. Reduce the quantity of ingredients or set higher speed. 2. Stop working few minutes.

Instruction manual

an	Machine failures	Return to seller and repair
----	------------------	-----------------------------

Noted: if all of solutions still not working, please return to seller and repair.

CLEANING AND STORAGE

1. Before you clean the appliance, switch the appliance off and remove the plug from the socket.
2. While cleaning, don't immerse the bowl in water.
3. After the bowl cool down, Unscrew the screw ring and remove the blade from the bowl. Clean the inside and outside of the bowl. Always keep the contact pins at the bottom of the bowl clean and dry. Only wipe the contact pins with a wet cloth!
4. Don't clean the metal bowl and blade in the dishwasher!
5. Never use pointed or sharp objects for cleaning as this may damage functional parts or affect the safety of the appliance.
6. The blade is very sharp! Handle it with care!
7. Wash all parts in hot soapy water. Clean them immediately after use. Rinse them with clear hot water and dry them immediately.
8. We advise you to lubricate the blade with some vegetable oil.
9. Only wipe the main appliance with a damp soft cloth!
10. If the bowl and blade is hard to clean. You may add some hot soapy water in the bowl and run the appliance at speed 1 for few seconds.

Instruction manual



**Correct Disposal of this product
(Waste Electrical & Electronic Equipment)
(Applicable in the European Union and other European countries with separate collection systems)**




The European Directive 2012/19/EU on Waste Facilities Electrical and Electronic (WEEE)

This marking shown on the product or its literature, indicates that it should not be disposed with other household wastes at the end of its working life.

To prevent possible harm to the environment or human health from uncontrolled waste disposal, please separate this from other types of wastes and recycle it responsibly to promote the sustainable reuse of material resources.

Household users should contact either the retailer where they purchased this product or their local authority office, for details of where and how they can take this item for environmentally safe recycling.

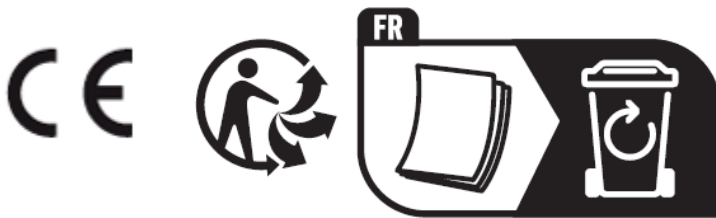

LIVOO

BP 61071

67452 Mundolsheim - FRANCE

- Photo no contractual
- Worried about the quality of his products the manufacturer reserves the right to make modifications without advance notice