

LIVOO
Feel good moments
Instruction Manual

Crepe Maker



Reference: DOp196
Version: 1.4
Language: English



Instruction Manual

You have purchased a product LIVOO brand and we thank you. We take great care in design, ergonomics and ease of use of our products. We hope that this product will give you complete satisfaction.

This instruction manual is available too on our website www.livoo.fr

General Instructions

PLEASE, TAKE TIME TO READ WELL THE INSTRUCTIONS FOR USE
PARTICULARLY BEFORE THE FIRST USE.

A misuse of the appliance can damage it or hurt the user. Assure that you use the appliance for the use for which it is designed; we refuse any responsibilities as for the damages by an incorrect use or a bad manipulation.

1. This appliance is exclusively intended for a domestic use. Any other use (professional) is excluded. Do not use outside.
2. Before use check that the voltage of your wall outlet correspond to the rated voltage manner.
3. Always connect your appliance on a wall grip connected with the earth.
4. Do not place the crepe maker near the edge of a bench or table during operation. Ensure the surface is dry, level, clean and free of liquid and other substances.
5. Do not use the crepe maker on a metal surface, for example, a sink drain board.
6. Do not touch hot surfaces. Use the spatula and spreader enclosed.
7. Do not leave unsupervised device when it works. Make

Instruction Manual

sure that the appliance is switched off by turning the switch on Off and by disconnecting the appliance if it is not used, if it is left unsupervised and before cleaning it and tidying up it.

8. This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
9. Children shall not play with the appliance.
10. Cleaning and user maintenance shall not be made by children unless they are older than 8 years and supervised.
11. Keep the appliance and its cord out of reach of children less than 8 years.
12. Do not use the device:
 - if the grip or the power cable is damaged
 - in case of malfunction
 - if the device was damaged in any way
 - if he(it) fell in the water
 - if you dropped it
13. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard (*).
14. No repair can be made by the user.
15. To reduce the risk of electric shock, never operate this product with wet hands, spill liquid in the product or

Instruction Manual

submerge it in water.

16. Do not use the appliance or the plug with wet hands
17. Do not let cord hang over edge of table or counter or touch hot surface.
18. When you disconnect the cable, always pull him at the level of the index card, do not fire at the very cable.
19. During the use, always unwind completely the power cable of its accommodation to avoid the overheating of the appliance.
20. Do not place an appliance on or near a hot gas or on a heated oven.
21. It is absolutely necessary to keep this appliance clean at all times as it comes into direct contact with food.
22. Regarding the instruction for cleaning surfaces in contact with food or oil thanks to refer to the below paragraph "cleaning" in manual.
23. Do not use outdoors (Household use only).
24. The appliance is not intended to be operated by means of external timer or separate remote control system.
25. The temperature of accessible surfaces may be high when the appliance is operating.
26. Instructions for use shall be provided with the appliance so that the appliance can be use safely.
27. This appliance is intended to be used in household and similar applications such as:
 - staff kitchen areas in shops, offices and other working environments

Instruction Manual

- by clients in hotels, motels and other residential type environments
- farm houses
- bed and breakfast type environments

(*) **Competent qualified electrician:** after sales department of the producer or importer or any person who is qualified, approved and competent to perform this kind of repairs in order to avoid all danger. In any case you should return the appliance to this electrician.

TECHNICAL INFORMATION

Voltage: **220V-240V~50-60Hz**

Power : **1000W**

DESCRIPTION



Spatula and T spreader



Instruction Manual

USE

Before first use, remove all packaging material and stickers from the unit and wipe the cooking plate with a damp cloth, then dry thoroughly.

Insert the plug into a power outlet; turn the thermostat button on the unit. The power indication light will illuminate.

Turn it until max position to preheat appliance. When the plate reaches the good temperature, the green temperature indication light will turn off.

1. Pour a small amount of batter onto the center of the cooking plate. Quickly spread the batter in circular movements using the batter spreader until desired diameter of the crepe is achieved.
2. Allow the crepe to cook until the top surface is no longer runny and the crepe can be moved slightly on the cooking plate.
3. Insert the spatula under the crepe and turn the crepe over to cook the other side.
4. Cook crepe until just golden. Remove the crepe from the cooking plate using the spatula. If the last crepe cooked was too dark, reduce the temperature before making your next crepe.
5. At the end of cooking, switch off the unit by turning thermostat button on 0 position. Remove the plug from the socket. Allow the appliance to cool then clean before storing.

CARE AND CLEANING

1. Always clean the appliance after every use.
2. Make sure the unit is switched off and unplugged. Let the unit cool completely.

Caution:

Do not use wire brush or any abrasive items or liquids to clean the appliance (baking plate, base and accessories).

3. Never immerse the appliance base in water
4. Wipe the baking plate with a damp cloth.
5. When baked-on foods cannot be removed by this method, brush with a little oil. Allow to stand for 5 min, wipe with a damp cloth and then dry thoroughly before storing.

STORING

Wrap the cord around the cord storage under the base and stand upright on the feet under the base. Do not store anything on top.

Instruction Manual



**Correct Disposal of this product
(Waste Electrical & Electronic Equipment)
able in the European Union and other European countries with separate collection systems)**

The European Directive 2012/19/EU on Waste Facilities Electrical and Electronic (WEEE)

 This marking shown on the product or its literature, indicates that it should not be disposed with other household wastes at the end of its working life.

To prevent possible harm to the environment or human health from uncontrolled waste disposal, please separate this from other types of wastes and recycle it responsibly to promote the sustainable reuse of material resources.

Household users should contact either the retailer where they purchased this product or their local authority office, for details of where and how they can take this item for environmentally safe recycling.



Pour en savoir plus :

www.quefairedemesdechets.fr

LIVOO

BP 61071

67452 Mundolsheim - FRANCE

- Photo no contractual
- Worried about the quality of his products the manufacturer reserves the right to make modifications without advance notice