

Hand blender



Reference : DOP204
Version : 1.5
Language : English

Instruction manual

You have purchased a product LIVOO brand and we thank you. We take great care in design, ergonomics and simplify the using of our products. We hope that this product will give you complete satisfaction.

This instruction manual is available too on our website www.livoo.fr

GENERAL SAFETY INSTRUCTIONS

PLEASE, TAKE TIME TO READ WELL THE INSTRUCTIONS FOR USE PARTICULARLY BEFORE THE FIRST USE.

A misuse of the appliance can damage it or hurt the user. Assure that you use the appliance for the use for which it is designed, we refuse any responsibilities as for the damages by an incorrect use or a bad manipulation.

1. Before use check that the voltage of your wall outlet correspond to the rated voltage manner.
2. Do not operate the appliance with a damaged cord or after malfunction or has been damaged in any manner.
3. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard*.
4. Do not let cord hang over edge of table or counter or touch hot surface.
5. To reduce the risk of electric shock, never operate this product with wet hands, spill liquid in the product or submerge it in water

Instruction manual

6. Unplug from outlet when not in use, before putting on or taking off parts, and before cleaning.
7. Close supervision is necessary when your appliance is being used near children or infirm persons.
8. Do not place an appliance on or near a hot gas or on a heated oven.
9. Do not use outdoors (Household use only).
10. This appliance shall not be used by children. Keep the appliance and its cord out of reach of children.
11. Appliances can be used by persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and if they understand the hazards involved.
12. Children shall not play with appliance.
13. Always disconnect the blender from the supply if it is left unattended and before assembling, disassembling or cleaning.
14. The appliance is not intended to be operated by means of external timer or separate remote control system.
15. Accessories, other than those supplied with the appliance, shall include instructions for their safety use.
16. There is potential injury from misuse.
17. Care shall be taken when handling the sharp cutting blades, emptying the bowl and during cleaning

Instruction manual

18. Switch off the appliance and disconnect from supply before changing accessories or approaching parts that move in use
19. It is absolutely necessary to keep this appliance clean at all times as it comes into direct contact with food.
20. Regarding the instructions for cleaning surfaces in contact with food or oil, thanks to refer to the below paragraph "cleaning" in manual
21. Regarding the instructions for the use of accessories, operation times and speed settings, thanks to refer to the below paragraphs.
22. Be careful if hot liquid is poured into the food processor or blender as it can be ejected out of the appliance due to a sudden steaming.
23. This appliance is intended to be used in household and similar applications such as:
 - staff kitchen areas in shops, offices and other working environments
 - farm houses
 - by clients in hotels, motels and other residential type environments
 - bed and breakfast type environments

Instruction manual

SPECIAL MEASURES

(*) **Competent qualified electrician:** after sales department of the producer or importer or any person who is qualified, approved and competent to perform this kind of repairs in order to avoid all danger. In any case you should return the appliance to this electrician.

TECHNICAL SPECIFICATIONS


Voltage: **220V-240V~50Hz-60Hz**

Power: **400W**

KB : blender mode with 600ml cup: 1 min ON 1 min OFF 5 times (240g carrot and 360g water)

PARTS IDENTIFICATION

1. top lid
2. on/off switch
3. turbo switch
4. unit
5. Stainless steel removable stick
6. Beaker 600ml

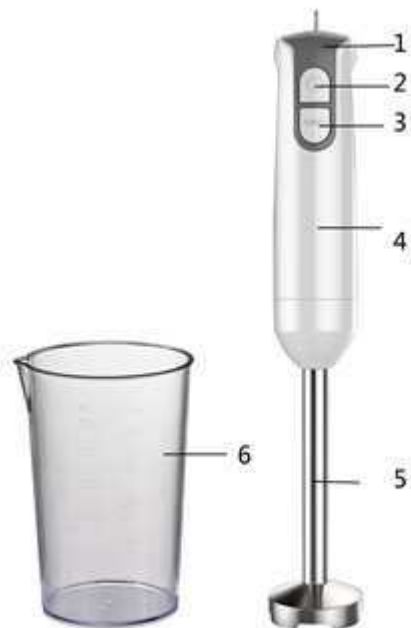

HOW TO USE

You can blend baby food, soups, sauces, milk shakes and mayonnaise.

Press any switch, the machine will work. Remove your finger from the switch key, the machine will stop.

The blender: ideal to mince or mix the food

Instruction manual

1. Put ingredients in the beaker, if they are still hot and wait until its temperature drops down to be below 70C, to avoid the housing overheated.
2. Insert the blender bar into motor unit, turn clockwise to lock it into motor unit.
3. Connect to power. To avoid spattering, put the blender into ingredients before switching on the power.
4. Maintain firmly the bowl containing the ingredients to mix
5. Press on/off button to switch on.

Note: The base of the blender must not be submerged.

6. To activate the turbo speed, press directly the pulse button 7. Move the blender downwardly and upwardly to mix the food.



7. After use, please pull out the plug and disassembly the fitting.

CLEANING AND STORAGE

NOTE: Be careful when handling the chopping blade. Do not touch the blades with your fingers. The blades are very sharp and can cause injury if touched.

1. Make sure the unit is unplugged from the wall outlet before cleaning.
2. Remove the removable part (blender stick) from the motor base. Clean it with soap water.
Note: It is much easier to clean the accessories immediately after use, wash in warm soapy water, rinse and dry thoroughly before storing.
3. The motor base can be cleaned with a damp cloth, and should be wiped with a dry cloth.
CAUTION: The motor base should never be immersed in water or held under the water.
4. Do not use detergent or abrasive material to clean the hand blender, as this may damage it.

Instruction manual



**Correct disposal of the unit
(Electrical and Electronic Equipment)**

(Applicable in the European Union and the rest of Europe that have adopted separate collection systems countries)

 The European Directive 2012/19/EU on Waste Electrical and Electronic Equipment (WEEE), requires that old household electrical appliances must not be disposed of in the normal household waste stream. Old appliances must be collected separately in order to optimize the recovery and recycling of the materials they contain and reduce the impact on human health and the environment. The symbol of the crossed out dustbin is marked on all products to remind the obligations of separate collection. Consumers should contact their local authority or retailer for information concerning the correct disposal of their product.



LIVOO
BP 61071
67452 Mundolsheim - FRANCE

- Photo no contractual
- Worried about the quality of his products the manufacturer reserves the right to make modifications without advance