

Heating blender



Reference : DOP212
Version : 1.4
Language : English

You have purchased a product LIVOO brand and we thank you. We take great care in design, ergonomics and ease of use of our products. We hope that this product will give you complete satisfaction.

This instruction manual is available too on our website www.livoo.fr

GENERAL INSTRUCTIONS

PLEASE, TAKE TIME TO READ WELL THE INSTRUCTIONS FOR USE PARTICULARLY BEFORE THE FIRST USE. A misuse of the appliance can damage it or hurt the user. Assure that you use the appliance for the use for which it is designed; we refuse any responsibilities as for the damages by an incorrect use or a bad manipulation.

1. This appliance shall not be used by children. Keep the appliance and its cord out of reach of children.
2. Appliances can be used by persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and if they understand the hazards involved.
3. Children shall not play with the appliance.
4. Check that your main voltage corresponds to that stated on the appliance. Multiple plug is misadvised.
5. Do not use the appliance if your hands are damp or with naked foot.
6. In case the appliance accidentally bad works, disconnect it immediately.

User manual

7. Never unplug the appliance by pulling the cord. Make sure the cord cannot get caught in any way.
8. Never leave the appliance unsupervised when in use.
9. Never move the appliance when in use.
10. Protect the appliance of the froze and humidity.
11. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard (*).
12. All appliances are submitted to serious quality control. Some tries are doing at random, so that may have tracks of use.
13. Keep the appliance, the cord or main unit at a distance from hot objects, wet surface and sharp angle.
14. Accessories, other than those supplied with the appliance, shall include instructions for their safety use.
15. Never immerse the base of your appliance, the cord or plug in water or any other liquid for any reason whatsoever. Never place it into the dishwasher.
16. The guarantee covers the manufacturing defects and the domestic use only. Any breakage or deterioration resulting from failure to respect the instruction of use does not enter within the framework of the guarantee.
17. Do not use wire brush or any abrasive items or liquids.
18. The water level must be between the MAX. and MIN. marks.
19. The appliance is not intended to be operated by means of external timer or separate remote control system.

User manual

20. Never disassemble the appliance yourself.
21. Always disconnect the appliance from the supply if it is left unattended and before assembling, disassembling or cleaning.
22. Switch off the appliance and disconnect from supply before changing accessories or approaching parts that move in use.
23. Warning: Potential injury from misuse.
24. Care shall be taken when handling the sharp cutting blades, emptying the bowl and during cleaning.
25. Be careful if hot liquid is poured into the food processor or blender as it can be ejected out of the appliance due to a sudden steaming.
26. Household use only.
27. Regarding the instructions for cleaning surfaces in contact with food or oil, thanks to refer to the below paragraph "cleaning" in manual.
28. Regarding the instructions for the use of accessories, operation times and speed settings, thanks to refer to the below paragraphs.
29. Warning: avoid any spillage on the connector.
30. The heating element surface is subject to residual heat after use.
31. The appliance must not be immersed in water or any other liquid.
32. This appliance is intended to be used in household and similar applications such as:

User manual

- Staff kitchen areas in shops, offices and other working environments
- Farm houses
- By clients in hotels, motels and other residential type environments
- Bed and breakfast type environments

(*) **Competent qualified electrician:** after sales department of the producer or importer or any person who is qualified, approved and competent to perform this kind of repairs in order to avoid all danger. In any case you should return the appliance to this electrician

SPECIFICATION

Voltage: 220-240V~ 50-60Hz

Motor power: 800W


Heater power: 800W

DESCRIPTION

LIVOO

Feel good moments

User manual

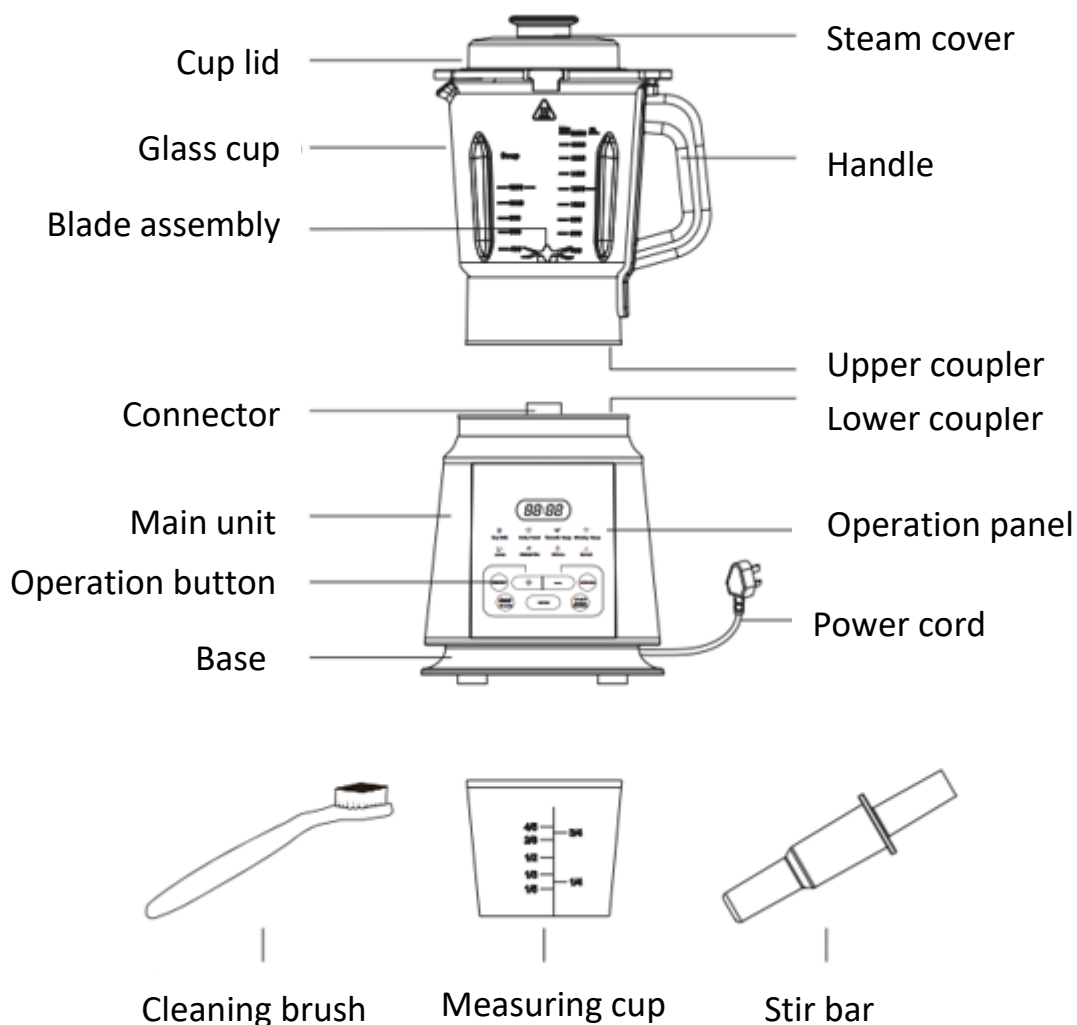

USE

Before each using, ensure you that the appliance plug into electricity. Before turning on the power, be sure to install the jar, lid and steam cap in place.

Before the first use:

Wipe the motor unit and the blade unit with damp cloth, wash the jar, the lid and the measuring cup in hot soapy water and dry them.

Please rinse the glass jug by assuring you **not to dip or to immerse** in the water the block blades.

Caution! The blade is very sharp, clean them carefully. You can use the cleaning brush supplied with the product.

The product is equipped with 3 sets of the water marks:

- Heated water line (Max. 1200ml): water control, suitable for Smooth, Chunky functions (Soupe veloutée, Soupe avec morceaux).
- Cold water line (Max. 1750ml): suitable for normal temperature water control of fruit juice or vegetable.


LIVOO

Feel good moments

User manual

- Heated (Max. 48 Oz) + cold water (Max. 56 Oz): water control suitable for Smooth, Chunky functions (Soupe veloutée, Soupe avec morceaux) and normal temperature of fruit juice or vegetable.

Plug in the appliance and press the « Start / Stop » button, then choose from below following options :

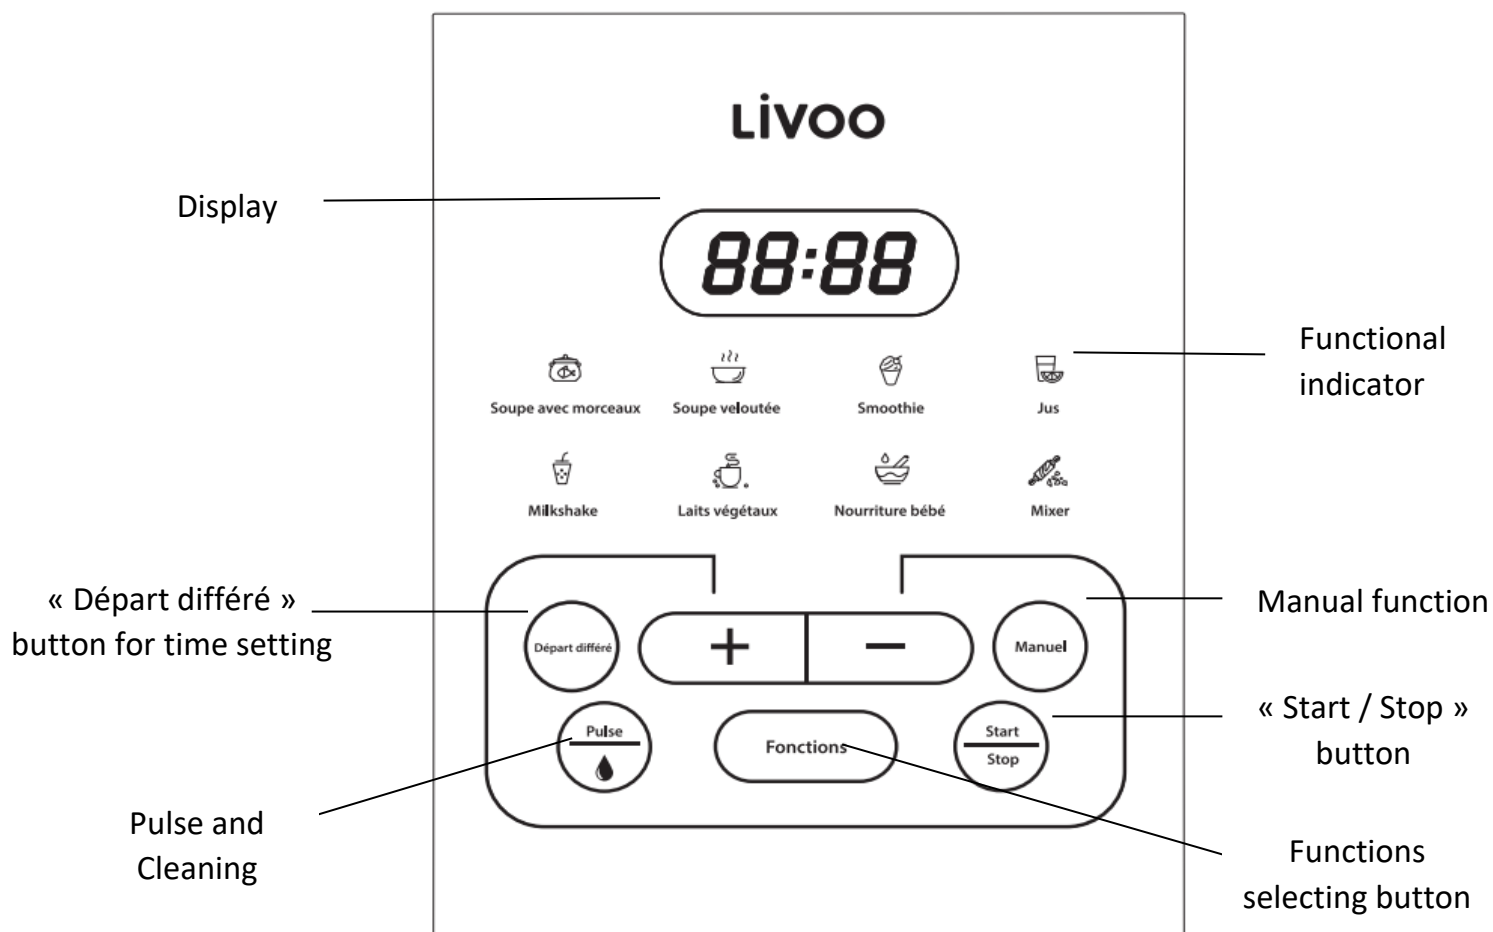

LIVOO

Feel good moments

User manual

Food guide:

Function Guide		Heat	Blend	Working hours	Food ratio description
Function instruction					
Chunky Soup (Soupe avec morceaux)	Use for making chunky soup, such as bortsch, pumpkin soup etc.	●	●	Appr. 40mins	Food and water total volume cannot exceed 1200ml.
Smooth Soup (Soupe veloutée)	Use for making smooth soup, such as zucchini soup, pumpkin soup etc.	●	●	Appr. 30mins	The ratio of food and water is 1:2. When making fish soup, the whole fish weight should be less than 300g, water volume less than 1200ml.
Smoothie (Smoothie)	Use for making all kinds of fruit and vegetable smoothie.	×	●	Appr. 2 and a half mins	Food ratio needs to refer to recipes. Adding some different fruits and vegetables is perfect (total volume cannot exceed 1750ml).
Juice (Jus)	Use for making all kinds of juice, shake etc.	×	●	Appr. 2 and a half mins	Food and water total volume cannot exceed 1750ml.
Shake (Milkshake)	Suitable for all kinds of fruit, vegetable and milk or yoghurt.	×	●	Appr. 1 min	Food ratio needs to refer to recipes. It is better to match various fruits and vegetables when blending smoothies (total volume cannot exceed 1750ml).
Soy Milk (Laits végétaux)	It is used to make soy milk based on soybeans.	●	●	Appr. 30mins	Use dry soybean to make. The ratio of food and water is 1 cup soybean, 1200ml water max.
Baby Food (Nourriture bébé)	Use for making baby food, such as pumpkin, potato mash.	●	●	Appr. 26mins	The ratio of food and water is 1:10, total volume cannot exceed 1200ml.
Grind (Mixer)	Use for grinding food to powder, such as bean and coffee bean etc.	×	●	Appr. 2 and a half mins	Maximum food volume is 500ml. If food is not mixed, use mixing bar to help.
Preset (Départ différé)	Use for scheduling a function in advance. First select the right function button. Click "Départ différé" button and select "+" or "-" to adjust the time to 6 hours for example. Then click "Start / Stop" button, the machine is well programmed (it will automatically start the entered program after 6 hours).				
Manual (Manuel)	Use for adjusting the stirring speed for a specific period of time. Click "Manuel" button and select "+" or "-" to adjust the required stirring speed, then click "Manuel" again to adjust the required mixing time by selecting "+" or "-". Click the "Start / Stop" button.				
Pulse / Cleaning (Pulse )	For quick cleaning of the inside of the jug, and hard food initial grinding, etc.	×	●	According to actual needs	It is recommended to put 1000ml of water into the jug, then press and hold for 10 seconds. Repeat twice.
Start / Stop (Start / Stop)	Used to turn on the appliance and start or stop the programs. You can press on this button at any time while the appliance is functioning to stop the current program.				
Functions (Fonctions)	Used to select the required program. Keep clicking until required function, the selected function will flash.				

Chunky soup (Soupe avec morceaux):

This function is used for making chunky soup (maximum total capacity 1200ml cold water and food). Click “Start / Stop” button to start the appliance, then click “Fonctions” button and select “Soupe avec morceaux”. Click “Start / Stop” again to start the program. After this function is completed, the machine will stop automatically.

Smooth soup (Soupe veloutée):

This function is used for making smooth soup (maximum total capacity 1200ml cold water and food). Click “Start / Stop” button to start the appliance, then click “Fonctions” button and select “Soupe veloutée”. Click “Start / Stop” again to start the program. After this function is completed, the machine will stop automatically.

Smoothie (Smoothie):

This function is used for making all kinds of fruits and vegetables smoothie (maximum total capacity 1750ml). Click “Start / Stop” button to start the appliance, then click “Fonctions” button to select “Smoothie” function. Click “Start / Stop” again to start the program. After this function is completed, the machine will stop automatically.

Juice (Jus):

This function is used for making all kinds of juice (maximum total capacity 1750ml cold water and food). Click “Start / Stop” button to start the appliance, then click “Fonctions” button to select “Jus” function. Click “Start / Stop” again to start the program. After this function is completed, the machine will stop automatically.

Shake (Milkshake):

This function is used for making all kinds of fruits and/or vegetables milkshakes with milk or yoghurt (maximum total capacity 1750ml). Click “Start / Stop” button to start the appliance, then click “Fonctions” button to select “Milkshake” function. Click “Start / Stop” again to start the program. After this function is completed, the machine will stop automatically.

Soy Milk (Laits végétaux):

This function is used for making vegetable milks (maximum total capacity 1200ml cold water and food). Click “Start/ Stop” button to start the appliance, then click “Fonctions” button to select “Laits végétaux” function. Click “Start / Stop” again to start the program. After this function is completed, the machine will stop automatically.

Baby Food (Nourriture bébé):

This function is used for making baby food (maximum total capacity 1200ml cold water and food). Click “Start / Stop” button start the appliance, then click “Fonctions” button to select “Nourriture bébé” function. Click “Start / Stop” again to start the program. After this function is completed, the machine will stop automatically.

Grind (Mixer):

This function is used for making grinding food to powder (maximum total capacity 500ml food).

LIVOO
Feel good moments
User manual

Click “Start / Stop” button to start the appliance, then click “Fonctions” button to select “Mixer” function. Click “Start / Stop” again to start the program. After this function is completed, the machine will stop automatically.

Preset (Départ différé):

This function allows to schedule the appliance in advance so that the chosen preparation launches automatically at the selected hour.

If you program for example Soy Milk 6 hours in advance, click “Start / Stop” button to start the appliance, then click “Fonctions” button to select “Laits végétaux”, then click “Départ différé” and select “+” or “-” button to adjust the time to 6 hours.

Click “Start / Stop” again to save the program, which will start automatically after the selected time.

Note: this function works only for Chunky soup (Soupe avec morceaux), Smooth soup (Soupe veloutée), Soy milk (Laits végétaux) and Baby food (Nourriture bébé) programs.

Manual (Manuel):

This function is used for setting stirring speed and mixing time.

Click “Start / Stop” button to start the appliance, click “Manuel” and press “+” or “-” button to adjust the required stirring speed. Then click “Manuel” again and adjust the mixing time by selecting “+” or “-”. Click “Start/ Stop” button to start the blending.

Pulse / Clean (Pulse /):

This function is used for manually setting food grinding or quick cleaning of the glass cup.

Click “Start / Stop” button to start the appliance, then press “Pulse” button to start the function and hold for 10 seconds max. Release the button to stop. Repeat twice max.

Recommendation : add 1000ml cold water.

Start / Stop:

After connection of the appliance, the “Start / Stop” button flashes, press onto it. Then press on “Fonctions” button to select the chosen function. The selected function flashes, press “Start / Stop” button to start the program or press “Départ différé” if desired. Or choose “Manuel” option according to your actual needs.

After use, disconnect the appliance.

Note: you can press on “Start / Stop” button at any time while the appliance is functioning to stop the current program.

Functions (Fonctions)

This function is used for selecting chosen program.

Click “Start / Stop” button to start the appliance, and press on “Fonctions” button to select the chosen function. The selected function will flash, press “Start / Stop” button to start the program.

How to prepare Smooth soup (“Soupe veloutée” function):

1. Cut the food into pieces and about 2 cm size (for meat, cut into strips to remove tendons). (Figure 1)
2. Use the measuring cup to refer to the proportion of the recipe and measure the food. (Figure 2)

LIVOO
Feel good moments
User manual

3. Pour the food into the jar (please note that there should be no other foreign material into the jug). (Figure 3)
4. Add appropriate water into the jar (the quantity of water should be 1000ml, refer to water marks). (Figure 4)
5. Put the cover lid onto the jar and press, rotate the lid clockwise and fasten the lid, then rotate the steam cap clockwise down on the lid. The machine has a cover protection device, if the lid is not set into place, the product will not work). (Figure 5)
6. Place the jar in correct position on the main unit. (Figure 6)
7. Plug in the power cord, and when the power is turned on, a beep will sound and the “Start / Stop” button indicator will flash. (Figure 7)
8. Click “Start / Stop” button, then click “Fonctions” button to switch to the required program menu, such as “Soupe veloutée” function. Click the “Fonctions” button continuously to switch to “Soupe veloutée”. The program indicator light flashes.
9. Click “Start / Stop” button and the machine starts to work (The sound could be fast and slow while functioning, which is normal). (Figure 9)
10. The machine will buzz and the display will return to standby when the work is completed. (Figure 10)
11. Unplug the power cord and remove the jar from the unit, then open the lid carefully because of the hot steam. (Figure 11)
12. Pour out the preparation and add seasoning according to your taste (Do not over-rush when pouring out to prevent liquid splash). (Figure 12)
13. Clean the inside of the jar after use and after cooling, and clean the outer casing with a damp cloth. (Figure 13)
14. After wiping the left water on the surface of the machine, separate the jar from the main unit and store it in a cool, ventilated place to prevent air odor. (Figure 14)

Note:

- “Pulse” function should not be used more than 60sec.
- “Grind” function should not be used more than 2min10sec.

LIVOO

Feel good moments

User manual

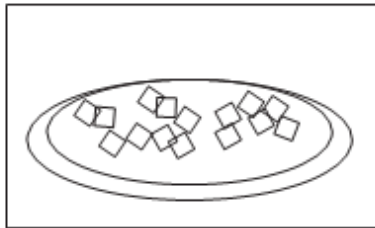 


Figure 1

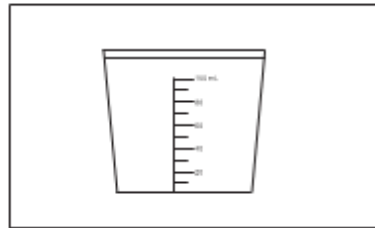 


Figure 2

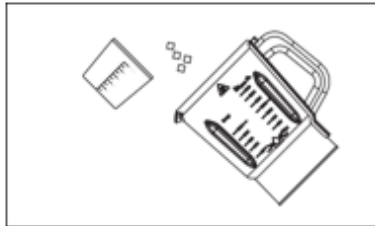 


Figure 3

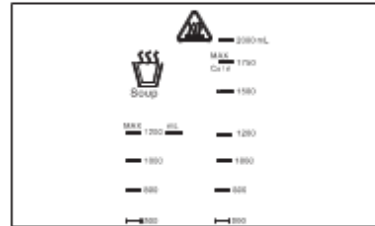 


Figure 4

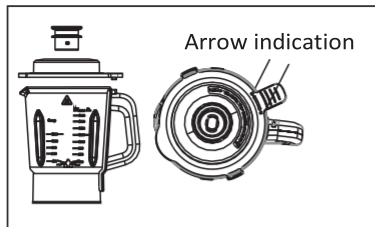 


Figure 5

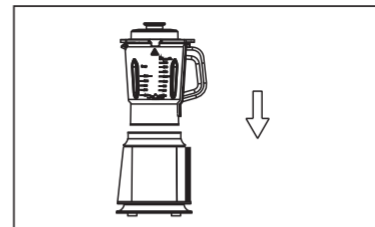 


Figure 6



Figure 7

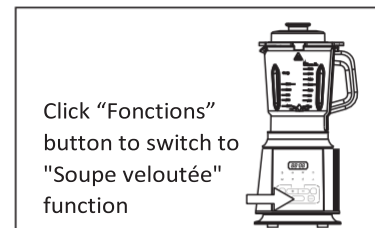 


Figure 8



Figure 9

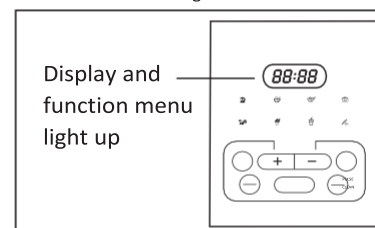 


Figure 10



Figure 11

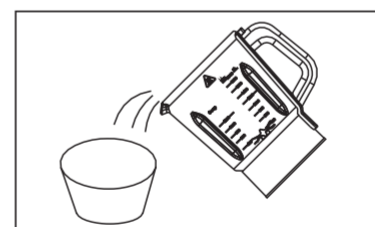 


Figure 12

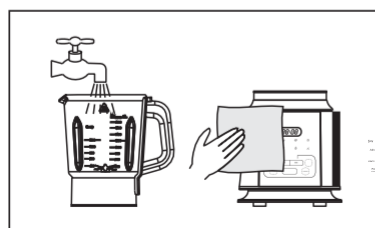 


Figure 13

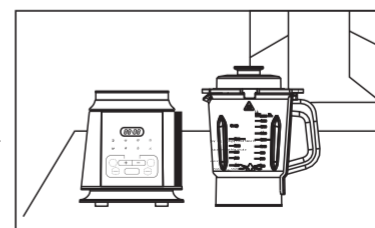 


Figure 14

LIVOO
Feel good moments
User manual

Attention:

1. Make sure to select the correct function, or it may cause a liquid overflow, bad taste of the preparation or bottom overcooking.
2. If there is a malfunction of "Soy milk" or "Smooth soup" functions, you need to switch functions, please click "Start / Stop" button to cancel the current function. You can directly update the desired function before entering the countdown. Then click "Start / Stop" button to start. If you have entered the countdown, select the required function to start the program.
3. The amount of food in the recipe is equipped according to the standard water level. When using the product, please adjust the total amount of the food according to the amount of water and the type of food. The heating function should not exceed 1200 ml, and the function of cold drink should not exceed 1750 ml.
4. When making fruit and vegetable drinks, please pit the stone foods before placing them in the jug and add proper amount of drinking water or milk.
5. Do not use this product to directly heat thick liquids such as milk, soy milk, cold smooth soup, etc., otherwise it will cause overcooking on the bottom, then produce peculiar smell.
6. During the working process, please note that the liquid in the mixing jug is boiling. Be extremely careful, the spout sprays water vapor and hot water. Do not open the lid during work.
7. Do not add seasonings (such as sugar, brown sugar, etc.) to the preparation while blending to prevent from sticking to the bottom of the jar when heated.
8. Before turning on the power, be sure to set the jar, lid and steam cap properly into place.
9. During use, it is strictly forbidden to put your hand or sharp hard objects into the jug to avoid injuries or damage to the appliance.
10. The functions "Smooth soup" and "Chunky soup" are intended for the realization of soups and not to warm soups beforehand prepared.
11. Any ingredients to be added during the cooking process can be added through the hole in the center of the lid. Do not unlock or remove the lid as this will stop the program and you may get burned with steam. All liquids added to the appliance must not be above the maximum or below the minimum levels as indicated on the jug.



WARNING: Ingredients that contain high levels of starch or sugar can easily stick to the heating plate and burn.
Heat/steam will be emitted from the lid. Care must be taken when removing the lid and food chute.



Caution: It is not recommended to use raw meats with the blender. Any meat or fish must be pre-cooked.

CARE AND MAINTENANCE

Always remove the plug from the socket before cleaning the appliance and ensure that it has completely cooled down.

After each use, it is recommended to rinse the glass jug **after cooling** to facilitate the cleaning.

Dishwasher is forbidden for the appliance and the accessories.

Do not immerse the appliance motor unit, the glass jug and blade unit in the water or any other liquids to avoid a risk of electric shock.

Do not use wire brush or any abrasive items or liquids such as chemicals or alcohol, otherwise it will damage the appliance.

Be careful! The blades are very sharp. Use and clean them with caution.

To clean glass jar, overturn approximately 1000ml of water with a little wash liquid. Close the lid then press on the pulse function the time required. Disconnect the device after the cleaning and rinse again the inside of jar with some water. Wipe jar and blades unit carefully with a soft and dry cloth and ensure you that it is perfectly dry.

LIVOO
Feel good moments
User manual

TROUBLE INSPECTION AND SHOOTING

Phenomenon	Cause	Shooting
Indicating light is defected	Power cord is not well inserted into the Socket.	Inspect the power cord and insert it well.
Indicating light is lighting but product is not working	After selection of the function, the “Start / Stop” button was not clicked.	After selection of the function, press “Start / stop” button.
Alarming during working	Food got stuck. No water in the jar.	Clean the jar inside before using. Put water to the correct water level.
Heating can’t be stopped	Machine is defective.	Disconnect the appliance and call after sales service center for assistance.
No respond after button pressing	The time of power off is too short for the productsystem to recover. Product is on working process.	It is a normal phenomenon, leave the appliance 3mins power cut off before using.
Ingredients can’t be crushed	Water is too much or too less. Voltage is too low. Ingredients quantity is too much or too low. Machine is defective.	Add water to the right volume level. Use house-used voltage regulator. Operate according to the recipe ratio. Send product to the after- sales service.
Heating plate got stuck	Jar inside is not fully cleaned. Ingredient quantity is too much. Pressed the wrong functional button.	Clean the jar inside before using. Operate according to the recipe ratio. Select the right functional button.
Abnormal noise	Run-in period.	Occasionally noise is normal. If noise becomes regular, call after sales service center for assistance.
Display indicates E1	No lid onto the jar. Machine is defective (Sensor is off).	Put the lid onto the jar. Send machine to after- sales service.
Display indicates E2	Dry burning. Machine is defective (Sensor is short circuit).	Set the recipe ratio according to the recipe requirement. Send machine to the after-sales service.

LIVOO
Feel good moments
User manual



**Correct Disposal of this product
(Waste Electrical & Electronic Equipment)
(Applicable in the European Union and other European countries with separate collection systems)**

The European Directive 2012/19/EU on Waste Facilities Electrical and Electronic (WEEE)
This marking shown on the product or its literature, indicates that it should not be disposed with other household wastes at the end of its working life.

To prevent possible harm to the environment or human health from uncontrolled waste disposal, please separate this from other types of wastes and recycle it responsibly to promote the sustainable reuse of material resources.

Household users should contact either the retailer where they purchased this product or their local authority office, for details of where and how they can take this item for environmentally safe recycling.



Pour en savoir plus :
www.quefairedemesdechets.fr

LIVOO
61071
67452 Mundolsheim-FRANCE

- Photo no contractual.
- Worried about the quality of his products the manufacturer reserves the right to make modifications without advance notice.