

LIVOO
Feel good moments
Instruction Manual

Cordless electrical chopper



Reference : DOP222
Version : 1.4
Language : English



Instruction Manual

You have purchased a product LIVOO brand and we thank you. We take great care in design, ergonomics and ease of use of our products. We hope that this product will give you complete satisfaction.

This instruction manual is available too on our website www.livoo.fr

General Instructions

PLEASE, TAKE TIME TO READ WELL THE INSTRUCTIONS FOR USE
PARTICULARLY BEFORE THE FIRST USE.

A misuse of the appliance can damage it or hurt the user. Assure that you use the appliance for the use for which it is designed; we refuse any responsibilities as for the damages by an incorrect use or a bad manipulation.

Do not operate the appliance with a damaged cord or after malfunction or has been damaged in any manner.

Do not let cord hang over edge of table or counter or touch hot surface.

- 1.To reduce the risk of electric shock, never operate this product with wet hands, spill liquid in the product or submerge it in water
- 2.Close supervision is necessary when your appliance is being used near children or infirm persons.
- 3.Do not place an appliance on or near a hot gas or on a heated oven.
- 4.Household use only.
- 5.Do not touch the cutting blades and do not insert any kind of object (knives, forks, spoons etc.) into the bowl while the product is operating. A spatula may be used only when the

Instruction Manual

product is not in operation, avoiding the risk of serious injury.

6. Never operate the product when the bowl is empty and do not remove the bowl lid before the blades come to a complete stop.
7. This appliance is designed to chop small quantities of food, under no circumstances should the bowl be overfilled.
8. The appliance shall not be used by children.
9. Keep the appliance and its cord out of reach of children.
10. Appliances can be used by persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and if they understand the hazards involved.
11. Children shall not play with the appliance.
12. Switch off the appliance and disconnect from supply before changing accessories or approaching parts that move in use.
13. There is potential injury for misuse.
14. This appliance must only be supplied at safety extra low voltage corresponding to the marking on the appliance.
15. Accessories, other than those supplied with the appliance, include instructions for their safe use.
16. Care shall be taken when handling the sharp cutting blades, emptying the bowl and during cleaning.
17. Be careful if hot liquid is poured into the food processor or blender as it can be ejected out of the appliance due to a



Instruction Manual

sudden steaming.

18. Regarding the instructions for cleaning surfaces in contact with food or oil, thanks to refer to the below paragraph "cleaning" in manual.
19. It is absolutely necessary to keep this appliance clean at all times as it comes into direct contact with food.
20. Regarding the instructions for use, operation times and speed settings, thanks to refer to the below paragraphs.
21. This appliance is intended to be used in household and similar applications such as:
 - staff kitchen areas in shops, offices and other working environments
 - farm houses
 - by clients in hotels, motels and other residential type environments
 - bed and breakfast type environment

SPECIFICATIONS

Rated Voltage: 11.1V ===

Rated Power: 200W


KB : 30 seconds ON, 2min OFF, 3 cycles max. For 350g of beef, 65 seconds max ON / 2 min OFF for 3 cycles max.



Feel good moments

Instruction Manual

DESCRIPTION

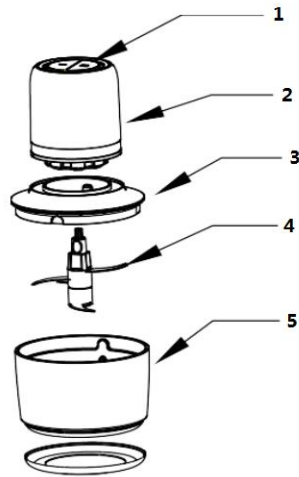

1. Speed button
2. Power base
3. Bowl cover
4. Chopping blade
5. Bowl

CHARGING MODE

1. Please use the provide USB cable to charge.
2. While charging, do not use the machine. The led light will flash.
3. The led light is divided into 4 sections to establish charging status. First section will be constant on when finish 25% charge, other sections will flash, when 50% charge, the second section will constant on.
4. When full charge, the led light will all constant on, that means the machine charge is finished.

USING

1. Please press the speed button, the machine will start in 0.5 seconds.
2. When you release the button, the machine will stop.
3. The led light will show the battery remain power.
4. When the led light flash when using, that means the machine need to be charged.
5. When the machine is over loaded, the machine will stop and led light flashing, in this situation, please adjust the food.

OPERATING TIME:

- The machine has program setting, when using continuously after 65 seconds, the machine will stop automatic, then you need to cool down the machine for 2 minutes, then you can use again.
- After continuously use more than 3 times, the machine need to rest for 30 minutes.

LIVOO

Feel good moments


Instruction Manual

HOW TO USE:

1. Please full charge the machine and clean all parts before use.
2. Place the machine on an stable, even and dry place.
3. Please make sure the chopping blade was placed in the middle of the glass bowl onto the axle.
4. Please reference to the food guide, and place suitable quantity food into the bowl, and check if the blade is balance or not.
5. After place food and check the blade position, cover it and place the machine on the cover and check if all are in right position.
6. Hold the main body and press the speed button, the machine will start to work, release the button machine will stop, please refer to operating time for maximum chopping time and adjust accordingly to your personal taste.
7. Please don't take away the main body after releasing the button, before open the bowl cover, please wait after the blade has stopped.
8. Make sure the blade has stopped, open the cover and take out the blade first, then take out the food.

CHOPPIN GUIDE:

To get a better performance and extend the machine usage life, please reference below table for operation.

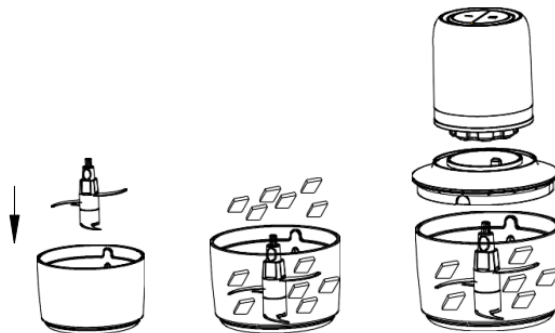

Food	Maximum	Time	Notice
Meat			
Pork	200g-350g (cut into 30x30x30mm)	30 Seconds	Without bone and skin and tendon, use high speed pulse chop
Vegetable			
Garlic	100g-400g (Peel skin)	20 Seconds	Low speed, pulse chop
Celery	20g-200g (cut into 50mm length)	15 Seconds	High speed, pulse chop
Carrot	100g-400g (cut into 20x20x20mm)	10-15 Seconds	High speed, pulse chop



Instruction Manual

Onion	50g-250g (cut into 30x30x30mm)	15 Seconds	High speed, pulse chop
Potato	250g (peel skin, cut into 30x30x30mm)	25 Seconds	Low speed 5second,high speed 20second
Tomato	250g	5-10 Seconds	High speed, pulse chop
Mushroom	50g-110g	15 Seconds	High speed, pulse chop
Nut			
Almond	250g	30 Seconds	High speed, pulse chop

CLEANING AND STORAGE

1. Always unplug the appliance before cleaning.
2. To clean, wipe the surface of the appliance with a damp cloth, if necessary add a little dishwashing liquid, then dry thoroughly. Never immerse it into water and do not use any proprietary cleaner.
3. The automatic dishwasher should not be used for cleaning.
4. Blade can be washed under warm running water, bowl and plate with warm water and dishwashing liquid.
5. The appliance should be frequently used. If not used for a long-term time, it should be stored in a dry and ventilated place to prevent the motor from dampness.

LIVOO

Feel good moments

Instruction Manual



Correct Disposal of this product
(Waste Electrical & Electronic Equipment)
(Applicable in the European Union and other European countries with separate collection systems)

The European Directive 2012/19/EU on Waste Facilities Electrical and Electronic (WEEE)

This marking shown on the product or its literature, indicates that it should not be disposed with other household wastes at the end of its working life.

To prevent possible harm to the environment or human health from uncontrolled waste disposal, please separate this from other types of wastes and recycle it responsibly to promote the sustainable reuse of material resources.

Household users should contact either the retailer where they purchased this product or their local authority office, for details of where and how they can take this item for environmentally safe recycling.



Pour en savoir plus :
www.quefairedemesdechets.fr

LIVOO
BP 61071
67452 Mundolsheim - FRANCE

- Photo no contractual.
- Worried about the quality of his products the manufacturer reserves the right to make modifications without advance notice.