

LIVOO
Feel good moments
Instruction Manual

Mini cordless electrical chopper



Reference : DOP226
Version : 1.4
Language : English



Instruction Manual

You have purchased a product LIVOO brand and we thank you. We take great care in design, ergonomics and ease of use of our products. We hope that this product will give you complete satisfaction.

This instruction manual is available too on our website www.livoo.fr

General Instructions

PLEASE, TAKE TIME TO READ WELL THE INSTRUCTIONS FOR USE
PARTICULARLY BEFORE THE FIRST USE.

A misuse of the appliance can damage it or hurt the user. Assure that you use the appliance for the use for which it is designed; we refuse any responsibilities as for the damages by an incorrect use or a bad manipulation.

Do not operate the appliance with a damaged cord or after malfunction or has been damaged in any manner.

Do not let cord hang over edge of table or counter or touch hot surface.

- 1.To reduce the risk of electric shock, never operate this product with wet hands, spill liquid in the product or submerge it in water.
- 2.Close supervision is necessary when your appliance is being used near children or infirm persons.
- 3.Do not place an appliance on or near a hot gas or on a heated oven.
- 4.Household use only.
- 5.Do not touch the cutting blades and do not insert any kind of object (knives, forks, spoons etc.) into the bowl while the product is operating. A spatula may be used only when the

Instruction Manual

product is not in operation, avoiding the risk of serious injury.

6. Never operate the product when the bowl is empty and do not remove the bowl lid before the blades come to a complete stop.
7. This appliance is designed to chop small quantities of food, under no circumstances should the bowl be overfilled.
8. The appliance shall not be used by children.
9. Keep the appliance and its cord out of reach of children.
10. Appliances can be used by persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and if they understand the hazards involved.
11. Children shall not play with the appliance.
12. Switch off the appliance and disconnect from supply before changing accessories or approaching parts that move in use.
13. There is potential injury for misuse.
14. This appliance must only be supplied at safety extra low voltage corresponding to the marking on the appliance.
15. Accessories, other than those supplied with the appliance, include instructions for their safe use.
16. Care shall be taken when handling the sharp cutting blades, emptying the bowl and during cleaning.
17. Be careful if hot liquid is poured into the food processor or blender as it can be ejected out of the appliance due to a

Instruction Manual

sudden steaming.

18. Regarding the instructions for cleaning surfaces in contact with food or oil, thanks to refer to the below paragraph "cleaning" in manual.
19. It is absolutely necessary to keep this appliance clean at all times as it comes into direct contact with food.
20. Regarding the instructions for use, operation times and speed settings, thanks to refer to the below paragraphs.
21. This appliance is intended to be used in household and similar applications such as:
 - staff kitchen areas in shops, offices and other working environments
 - farm houses
 - by clients in hotels, motels and other residential type environments
 - bed and breakfast type environment

SPECIFICATIONS

USB Input : 5.0 V $\overline{\text{---}}$ 1.0 A

Battery voltage : 3.7 V $\overline{\text{---}}$ 2.0 A

Capacity : 250 ml

 
KB : 30 seconds ON, 30 seconds OFF, 4 cycles max. After 4 cycles, appliance should rest for 30 minutes.

DESCRIPTION

LIVOO


Feel good moments

Instruction Manual

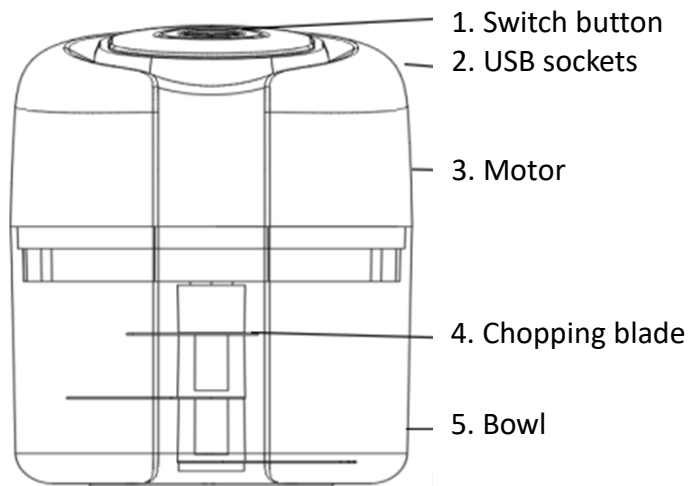

CHARGING MODE

 1. Please use the provide USB cable to charge.
2. While charging, The appliance cannot be used.
3. The led light will be red and constant on.
4. When the appliance is fully charged, the led light will be blue color and constant on.


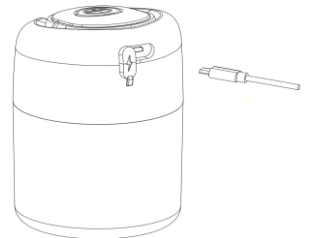


USING

Before first use, please fully charge the appliance and clean the main supply, blades and bowl.


CHOPPIN GUIDE

1. Set blade on the knife shaft of the bowl first, and then add the washed food into the cup by respecting the upper limit of food. This product can chop lean meat, ginger, garlic, onions, etc.

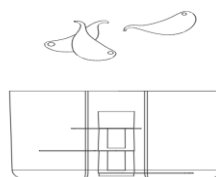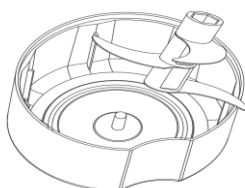


Instruction Manual

- After the food is loaded into the cup, install the motor into the cup along the card slot of the cup. When the motor is loaded, the blue light flashes 3 times, you can press and hold the jog switch to chop the food. When the bowl is full of food, the blade may be stuck and not rotating when starting. Please take out some food properly and continue to press the switch continuously. If you feel that the food is not ideal and delicate, press switch again for chopping.

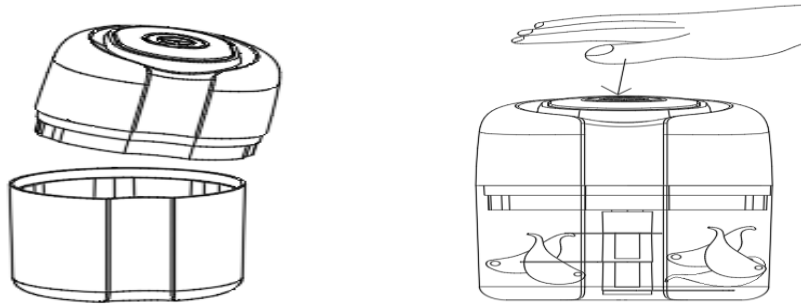

- After finishing, lift up the motor, pour out the food in a cup, and then clean the appliance with warm water.

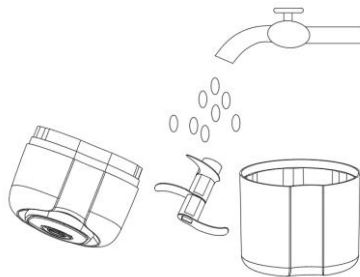

OPERATING TIME : 30 seconds ON, 30 seconds OFF, 4 cycles max. After 4 cycles, appliance should rest for 30 minutes.

TROUBLESHOOTING

Problem	Indicator light	Possible cause	Solution
Press the switch, but machine do not work	Red and blue flashing alternately	The motor and cup are not installed in right way	Install them again
	Red light is always on	Battery shortage	Charge the motor
	Blue light is always on	The motor is damaged or stuck	Twist the motor shaft, it still does not start, please send it to the nearest maintenance point for inspection
Charge the motor	Light is not on	Check whether the charging cable is loose	Replace with a new charging cable

Instruction Manual

When using the product for the first few times, the motor emits an unpleasant smell		When using for the first time, odor can be emitted, it is normal	If a smell still exists after repeated use, please check with saler
The blade does not rotate		The blade is entangled or stuck in the food	Take out the ingredients and cut them into small pieces or put less ingredients

CLEANING AND STORAGE

1. Always unplug the appliance before cleaning.
2. Please clean the main supply, blades and cup immediately after using the product.
3. To clean, wipe the surface of the appliance with a damp cloth, if necessary add a little dishwashing liquid, then dry thoroughly.
4. Never immerse it into water and do not use abrasive or corrosive cleaners for cleaning.
5. The automatic dishwasher should not be used for cleaning.
6. Blade can be washed under warm running water, bowl with warm water and dishwashing liquid.
7. It is strictly forbidden to carry out high temperature disinfection of all parts of this product.
8. After cleaning the product, please wipe or dry the parts of the product, and then reassemble and store it.
9. The appliance should be frequently used. If not used for a long-term time, please charge and use the appliance once every three months.

LIVOO

Feel good moments

Instruction Manual



Correct Disposal of this product
(Waste Electrical & Electronic Equipment)
(Applicable in the European Union and other European countries with separate collection systems)

The European Directive 2012/19/EU on Waste Facilities Electrical and Electronic (WEEE)

This marking shown on the product or its literature, indicates that it should not be disposed with other household wastes at the end of its working life.

To prevent possible harm to the environment or human health from uncontrolled waste disposal, please separate this from other types of wastes and recycle it responsibly to promote the sustainable reuse of material resources.

Household users should contact either the retailer where they purchased this product or their local authority office, for details of where and how they can take this item for environmentally safe recycling.



Pour en savoir plus :
www.quefairedemesdechets.fr

LIVOO
BP 61071
67452 Mundolsheim - FRANCE

- Photo no contractual.
- Worried about the quality of his products the manufacturer reserves the right to make modifications without advance notice.