

**LIVOO**  
Feel good moments  
Instruction manual

# Electrical hand mixer



Reference : DOP228  
Version : 1.4  
Language : English

[WWW.LIVOO.FR](http://WWW.LIVOO.FR)



## Instruction manual

You have purchased a product LIVOO brand and we thank you. We take great care in design, ergonomics and ease of use of our products. We hope that this product will give you complete satisfaction.

This instruction manual is available too on our website [www.livoo.fr](http://www.livoo.fr)

### GENERAL INSTRUCTIONS

PLEASE, TAKE TIME TO READ WELL THE INSTRUCTIONS FOR USE  
PARTICULARLY BEFORE THE FIRST USE.

A misuse of the appliance can damage it or hurt the user. Assure that you use the appliance for the use for which it is designed; we refuse any responsibilities as for the damages by an incorrect use or a bad manipulation.

1. Before use check that the voltage of your wall outlet correspond to the rated voltage manner.
2. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard(\*)
3. Do not let cord hang over edge of table or counter or touch hot surface.
4. To reduce the risk of electric shock, never operate this product with wet hands, spill liquid in the product or submerge it in water
5. Unplug from outlet when not in use, before putting on or taking off parts, and before cleaning.
6. Close supervision is necessary when your appliance is being used near children or infirm persons.
7. Do not place an appliance on or near a hot gas or on a heated oven.

## Instruction manual

8. Do not use outdoors (Household use only).
9. Do not insert any kind of object (knives, forks, spoons etc.) into the bowl while the product is operation. A spatula may be used only when the product is not in operation, avoiding the risk of serious injury.
10. To avoid the risk of personal injury, this product should not be operated by children or people who are not familiar with these instructions.
11. This appliance shall not be used by children. Keep the appliance and its cord out of reach of children.
12. Appliances can be used by persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and if they understand the hazards involved.
13. Children shall not play with appliance.
14. Always disconnect the blender from the supply if it is left unattended and before assembling, disassembling or cleaning.
15. The appliance is not intended to be operated by means of external timer or separate remote control system.
16. Accessories, other than those supplied with the appliance, shall include instructions for their safety use.
17. There is potential injury from misuse.
18. Switch off the appliance and disconnect from supply before changing accessories or approaching parts that move in use.
19. It is absolutely necessary to keep this appliance clean at all times as it comes into direct contact with food

## Instruction manual

20. Regarding the instructions for cleaning surfaces in contact with food or oil, thanks to refer to the below paragraph "cleaning" in manual.
21. Regarding the instructions for the use of accessories, operation times and speed settings, thanks to refer to the below paragraphs.
22. This appliance is intended to be used in household and similar applications such as:
  - staff kitchen areas in shops, offices and other working environments
  - farm houses
  - by clients in hotels, motels and other residential type environments
  - bed and breakfast type environments

(\*) Competent qualified electrician: after sales department of the producer or importer or any person who is qualified, approved and competent to perform this kind of repairs in order to avoid all danger. In any case you should return the appliance to this electrician.

## SPECIAL MEASURES

### **Warning:**

- Keep fingers, hair clothing and utensils away out of containers while blending to reduce the risk of severe injury to persons or damage to the blender.
- Never MIX hot oil or fat.
- Never immerse the appliance base in water
- **Mixer operating period: for 1 cycle max not exceeding: 5 min**

## Instruction manual

### SPECIFICATIONS


Voltage: 220-240V~ 50-60Hz

Power: 300W

Operating times:

| Food          | Quantity                | Time of operation on/off                      | Number of operation | Accessory  |
|---------------|-------------------------|-----------------------------------------------|---------------------|------------|
| Flour + water | 1kg flour + 0.6kg water | On : 30 seconds + 60 seconds / Off 90 seconds | 1 cycle             | Dough hook |

### DESCRIPTION

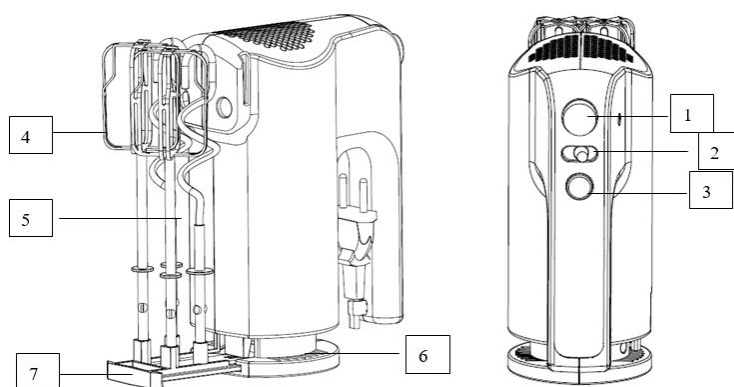

1. Ejection button
2. Switch
3. Turbo switch
4. Beater
5. Dough hook
6. Cable storage
7. Beater/hook storage plate

#### **Before use:**

Ensure you the plug is removed from main supply before attaching and removing accessories.

## Instruction manual

### USE


#### **The dough hooks/beater: ideal for preparation of heavy yeast, dough or cake batter**

**Max operation period per time cannot exceed 5 minutes, one cycle.**

1. Ensure the speed setting is on "0" position and the appliance unplugged. Choose the accessory you want to use : beater or dough hook.

**Note:** beaters are ideal to whisk egg white / dough hooks are ideal to knead.

2. Fix them on hand held mixer by pressing and turning until there are locked in the right position.

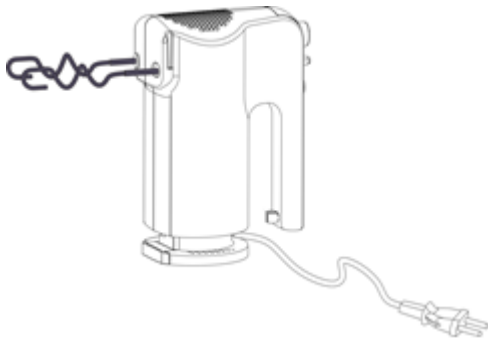

**Note:**

- The amount of heavy yeast shall not exceed 500g
  - 72g of water being added for each 100g of flour
3. Turn the variable speed button to select the desired speed setting (1 to 5). You can use Turbo switch.
  4. Stop the hand mixer by turning the button on "0" and unplug.
  5. Press the eject button down to release the dough hook or the egg beater.

**Storage**

After cleaning the appliance, wipe it with dry cloth and store in a dry place. For easier storage, you can wind the cord and put the plug inside plug storage.

Also you can use the storage plate for the beater and hooks to be set and ready to use.

## CLEANING AND MAINTENANCE

1. Unplug the appliance and remove the used accessories.  
**Do not use abrasive cleaner or detergents.**
2. Wash the detachable beaters and dough hooks in warm soapy water.
3. Wipe the base with a damp cloth. Never immerse it in water for cleaning as an electric shock may occur.

## Instruction manual

4. Dry thoroughly.



**Correct Disposal of this product  
(Waste Electrical & Electronic Equipment)  
(Applicable in the European Union and other European countries with separate collection systems)**

 The European Directive 2012/19/EU on Waste Facilities Electrical and Electronic (WEEE)  
This marking shown on the product or its literature, indicates that it should not be disposed with other household wastes at the end of its working life.  
To prevent possible harm to the environment or human health from uncontrolled waste disposal, please separate this from other types of wastes and recycle it responsibly to promote the sustainable reuse of material resources.  
Household users should contact either the retailer where they purchased this product or their local authority office, for details of where and how they can take this item for environmentally safe recycling.



*Pour en savoir plus :*  
[www.quefairedemesdechets.fr](http://www.quefairedemesdechets.fr)

**LIVOO**  
BP 61071  
67452 Mundolsheim - FRANCE

- Photo no contractual
- Worried about the quality of his products the manufacturer reserves the right to make modifications without advance notice