

Stand mixer



Reference: DOP234
Version: 1.4
Language: English

Instruction manual

You have purchased a product LIVOO brand and we thank you. We take great care in design, ergonomics and ease of use of our products. We hope that this product will give you complete satisfaction.

This instruction manual is available too on our website www.livoo.fr

General Instructions

PLEASE, TAKE TIME TO READ WELL THE INSTRUCTIONS FOR USE
PARTICULARLY BEFORE THE FIRST USE.

A misuse of the appliance can damage it or hurt the user. Assure that you use the appliance for the use for which it is designed; we refuse any responsibilities as for the damages by an incorrect use or a bad manipulation.

1. Check that your mains voltage corresponds to that stated on the appliance.
2. The safety instructions do not by themselves eliminate any danger completely and proper accident prevention measures must always be used.
3. This appliance shall not be used by children. Keep the appliance and its cord out of reach of children.
4. Appliances can be used by persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and if they understand the hazards involved.
5. Children shall not play with the appliance.
6. Do not attempt to repair the appliance yourself, since you will be exposed to hazardous live components or other hazards by opening and removing the covers.

Instruction manual

7. Do not use the appliance outdoor, place it in a dry environment, and only use the appliance for domestic purposes and in the way indicated in these instructions.
8. Never leave the appliance unsupervised when in use.
9. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard (*).
10. Place this appliance as close as possible to the power source so that you can disconnect the plug quickly and easily.
11. Never immerse the base of your appliance in water or any other liquid for any reason whatsoever. Never place it into the dishwasher.
12. Always disconnect the appliance from the supply if it is left unattended and before assembling, disassembling or cleaning.
13. Do not allow children to use the blender unsupervised
14. Never move the appliance by pulling the cord. Make sure the cord cannot get caught in any way. Do not wind the cord around the appliance and do not bend it.
15. Unplug the appliance when not in use.
16. Avoid contacting with moving parts. Keep hands, clothing, as well as spatulas and other utensils away from beaters during operating to reduce the risk of injury to people, and/or damage to the mixer.
17. The appliance is not intended to be operated by means of external timer or separate remote control system.

Instruction manual

18. Keep this manual with the appliance. If the appliance is to be used by a third party, this instruction manual must be supplied with it.
19. To avoid electric shocks, do not use this device in the vicinity of water. Do not immerse the mains lead in water or other liquid.
20. Do not kink or clamp the mains lead. To avoid any risk of stumbling, do not allow the mains lead to hang over the edge of a table or a counter.
21. This appliance should not be set up in close proximity to a naked flame, easily flammable materials (curtains, textiles, etc.), a radiator, an oven or some other heat source.
22. Before use, place the appliance on a horizontal and flat surface.
23. The appliance should only be used for its intended purpose.
24. During use, do not touch moving parts with your fingers.
25. No liability is accepted for damage due to improper use or the failure to observe our operating instructions / safety notes.
26. Be sure to turn the speed selector to 0 position after each use.
27. Switch off the appliance and disconnect from supply before changing accessories or approaching parts which move in use.
28. Never pull out mixing beater/dough hook/egg whisk when the appliance is in operation.

Instruction manual

29. Be careful if hot liquid is poured into the food processor or blender as it can be ejected out of the appliance due to a sudden steaming.
30. Regarding the instruction for cleaning surfaces in contact with food or oil thanks to refer to the below paragraph “cleaning” in manual.
31. It is absolutely necessary to keep this appliance clean at all times as it comes into direct contact with food.
32. Regarding the instructions for the use of accessories, operation times and speed settings, thanks to refer to the below paragraphs
33. There is potential injury from misuse
34. Accessories, other than those supplied with the appliance, shall include instructions for their safe use.
35. Care shall be taken when handling the sharp cutting blades, emptying the bowl and during cleaning
36. This appliance is intended to be used in household and similar applications such as:
 - staff kitchen areas in shops, offices and other working environments
 - farm houses
 - by clients in hotels, motels and other residential type environments
 - bed and breakfast type environments

(*) **Competent qualified electrician:** after sales department of the producer or importer or any person who is qualified, approved and competent to perform this kind of repairs in order to avoid all danger. In any case you should return the appliance to this electrician.

Instruction manual

SPECIFICATIONS

Voltage: **220-240V~ 50-60Hz**

Power: **1200W**

KB :

Ingredients	Quantity	Time of operation	Number of cycles	Remark
Flour	2300g	ON : 1 min OFF : 1 min	1 cycle	With beater accessory
Water	1300g			
Butter	100g			
Sugar	100g			

DESCRIPTION

1. Stainless steel decor
2. Head
3. Speed rotary knob
4. Decor
5. Transparent bowl cover
6. Egg beater
7. Lever knob
8. Body
9. Bowl
10. Kneading hook
11. Mixing blade



ACCESSORIES	Speed	Load	Recommended Time	Remarks

Instruction manual

Kneading hook	1-3	200-1000g	5 minutes	Heavy ingredients, dense preparation
Flat beater	3-4	200-1000g	5 minutes	Medium dense preparation (ie mashed potato)
Egg whisk	5-6	200-800ml	5 minutes	Light preparation (ie eggs)

USE

Before first use:

Before assembling or disassembling the appliance, be sure it is unplugged and speed selector on "0" position and put it on stable surface. Clean all accessories, lids, bowl with soapy water, rinse and dry thoroughly, wipe the main unit and base with damp soft cloth.

Setting up and assembling of the bowl and accessories:

Before assembling bowl and accessories, make sure the power cord is disconnected.

1. At the same time, thanks to your hand, press down the upper part of the appliance and press the locking button to lift the head of appliance.
2. Assemble the mixing bowl filled with ingredients, then lock it clockwise.
3. Insert the transparent bowl cover and lock it clockwise
4. Insert the kneading hook or the egg whisk or the mixing blade into the drive shaft and lock it clockwise.
5. At the same time, thanks to your hand, press down the upper part of the appliance and press the locking button to lift the head of appliance.



Instruction manual

USING YOUR APPLIANCE

After you placed the desired accessory and set back the head of the appliance, you can use your appliance.

Use of kneading function

1. To mix or knead dough:

Our suggestion of quantity to knead: flour 750g and water 250g.

- You can use the kneading dough or the flat beater.
- Adjust speed, press ON/OFF ⏸
- Adjust times, press ON/OFF ⏸

Suggestion : Adjust speed 1 and time to 1 minute. Stop after 10 seconds. Then adjust speed 2 and time to 1 minute. Stop after 10 seconds. Adjust speed 1 and time to 1 minute. Adjust speed 3 and time to 3 minutes.

Use the tool no longer than 10 minutes continuously at a time and keep it 30 minutes to cool down

Max flour amount on mixing bowl: 1kg

2. Whipping egg whites or cream

- The egg whisk should be used.
- Adjust speed 4 and time to 2 minutes. press ON/OFF ⏸
- Adjust speed 6 and time to 4minutes. press ON/OFF ⏸

Suggestion : whipped cream

- Adjust speed 4 and time to 2 minutes. press ON/OFF ⏸
- Adjust speed 6 and time to 3 minutes. press ON/OFF ⏸

Use egg whisk no more than 15 minutes continuously at a time and let it cool down for 15 minutes

CLEANING AND STORAGE

- Before cleaning place the speed control knob at the position of “0” and disconnect the appliance from mains power supply.
- After use keep the appliance to cool down before you start to clean it.
- Do not immerse the appliance into water.
- Do not use a wire brush or other abrasive utensils for cleaning and do not use aggressive or abrasive cleaning agents.

Instruction manual

- Cleaning of motor housing only with a damp cloth and a squirt of washing-up liquid. Dry with a cloth
- Cleaning of accessories: kneading hook, mixing blade, eggs whisk can be cleaned with warm water, they are not suitable for dishwasher.



**Correct disposal of the unit
(Electrical and Electronic Equipment)**

(Applicable in the European Union and the rest of Europe that have adopted separate collection systems countries)



The European Directive 2012/19/EU on Waste Electrical and Electronic Equipment (WEEE), requires that old household electrical appliances must not be disposed of in the normal household waste stream.

Old appliances must be collected separately in order to optimize the recovery and recycling of the materials they contain and reduce the impact on human health and the environment.

The symbol of the crossed out dustbin is marked on all products to remind the obligations of separate collection.

Consumers should contact their local authority or retailer for information concerning the correct disposal of their product.



LIVOO
BP 61071
67452 Mundolsheim-FRANCE

- Photo no contractual
- Worried about the quality of his products the manufacturer reserves the right to make modifications without advance notice