

LIVOO
Feel good moments
Instruction Manual

Multifunction chopper



Reference : DOP237
Version : 1.4
Language : English



Instruction Manual

You have purchased a product LIVOO brand and we thank you. We take great care in design, ergonomics and ease of use of our products. We hope that this product will give you complete satisfaction.

This instruction manual is available too on our website www.livoo.fr

General Instructions

PLEASE, TAKE TIME TO READ WELL THE INSTRUCTIONS FOR USE
PARTICULARLY BEFORE THE FIRST USE.

A misuse of the appliance can damage it or hurt the user. Assure that you use the appliance for the use for which it is designed; we refuse any responsibilities as for the damages by an incorrect use or a bad manipulation.

1. The safety instructions do not completely eliminate the specified hazards and do not dispense with the usual preventive measures.
2. Place the appliance on a flat, dry and stable surface.
3. Before plugging in your appliance, make sure that the voltage in your home corresponds to the voltage indicated on the appliance's rating plate. Always connect your appliance to an earthed wall socket.
4. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard. (*)
5. Do not pull on the power cord or the appliance itself to unplug.
6. Do not let the cord hang over the table or counter or touch a hot surface.

Instruction Manual

7. The plug should always remain accessible when the appliance is plugged in.
8. Do not place an appliance on or near a hot gas or on a heated oven.
9. The appliance shall not be used by children. Keep the appliance and its cord out of reach of children.
10. Appliances can be used by persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and if they understand the hazards involved.
11. Children shall not play with the appliance.
12. Do not leave the appliance unattended when it is plugged in or in operation.
13. Always unplug the appliance when it malfunctions, after use or before cleaning.
14. Never immerse your device, cord or base in water or any other liquid. Do not allow water to enter the base of the unit.
15. Never use this product with wet hands or feet.
16. Never use this product if it is not working properly or if you have dropped it. Take it to a service center for inspection and repair.
17. Never try to disassemble the appliance yourself.
18. The appliance is not intended to be operated by means of external timer or separate remote control system.
19. Always disconnect the appliance from the supply if it is left unattended and before assembling, disassembling or

LIVOO
Feel good moments
Instruction Manual

cleaning.

20. Switch off the appliance and disconnect from supply before changing accessories or approaching parts that move in use.
21. Care shall be taken when handling the sharp cutting blades, emptying the bowl and during cleaning.
22. There is potential injury for misuse.
23. Accessories, other than those supplied with the appliance, must be accompanied by instructions for safe use.
24. Never use the appliance outdoors.
25. It is absolutely necessary to keep this appliance clean at all times as it comes into direct contact with food.
26. Regarding the instructions for cleaning surfaces in contact with food or oil, thanks to refer to the below paragraph "cleaning" in manual.
27. Regarding the instructions for the use of accessories, operation times and speed settings, thanks to refer to the below paragraphs.
28. This appliance is intended to be used in household and similar applications such as:
 - staff kitchen areas in shops, offices and other working environments
 - farm houses
 - by clients in hotels, motels and other residential type environments
 - bed and breakfast type environments

LIVOO

Feel good moments

Instruction Manual

(*) **Competent qualified electrician:** after sales department of the producer or importer or any person who is qualified, approved and competent to perform this kind of repairs in order to avoid all danger. In any case you should return the appliance to this electrician.

SPECIAL MEASURES

- **Warning:**
- Care is needed when handling cutting blades, especially when emptying the bowls or during cleaning.
- The plastic mini chopper cannot be used in a microwave.
- The plastic mini chopper cannot be heated directly or through hot water. This mini chopper is designed for chopping small amounts of food, under no circumstances should the mini chopper be full filled.
- Handle the blade with care: it is very sharp.
- This type of device is not designed for continuous operation, it is not a professional device, it is necessary to stop it temporarily.
- Be careful if hot liquid is poured into the food processor or blender as it may be ejected from the appliance due to sudden boiling.

SPECIFICATIONS

Rated Voltage: 220V-240V ~ 50Hz-60Hz

Rated Power: 500W

Maximum continuous operating time:

For coffee bean 50g: 30s ON and break of 1 min between each cycle. 3 cycles maximum.

 
For beef 300g: 30s ON and break of 2 min between each cycle. 3 cycles maximum.

LIVOO

Feel good moments

Instruction Manual

DESCRIPTION

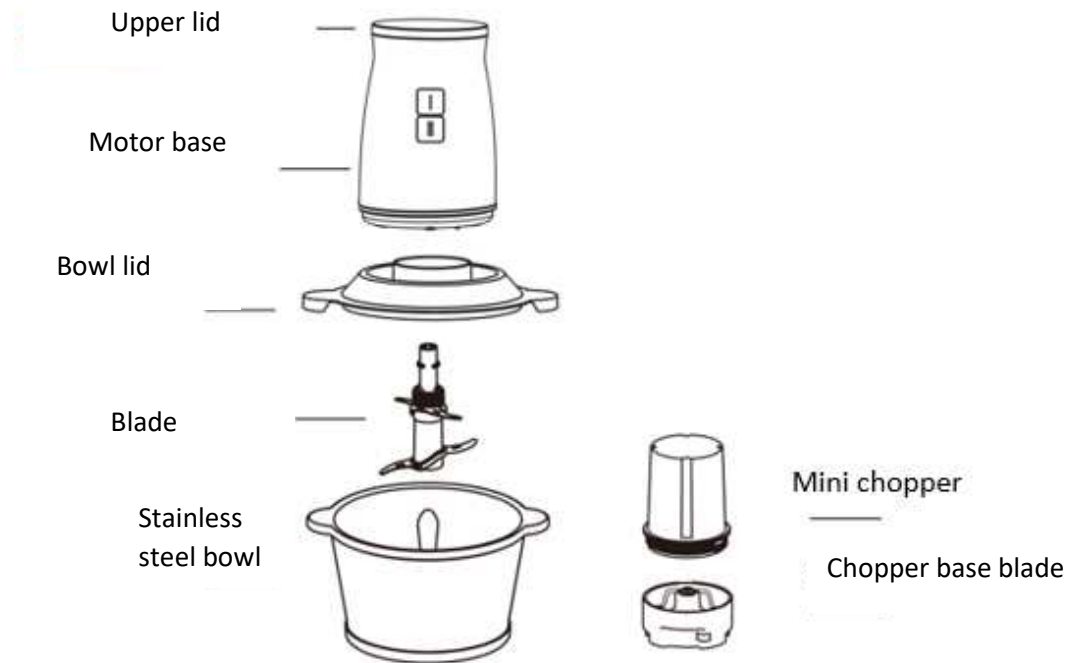

USING YOUR APPLIANCE

Bowl using

Meat chopping


Place the stainless-steel bowl on a flat table, align the blade at the center shaft of the bowl.

Prepare the meat by removing bones and skins of the meat and cut it into slices. The maximum amount shall not be over the upper line of the bowl and the maximum capacity is 300g.

Set the bowl lid on the stainless-steel bowl.

Then set the motor base on the transparent bowl lid : make it perfectly match with the bowl lid.

Turn the power on, press on the speed button 1 or 2, then it shall start working. The continuous working time for one time may not be over 30 seconds.

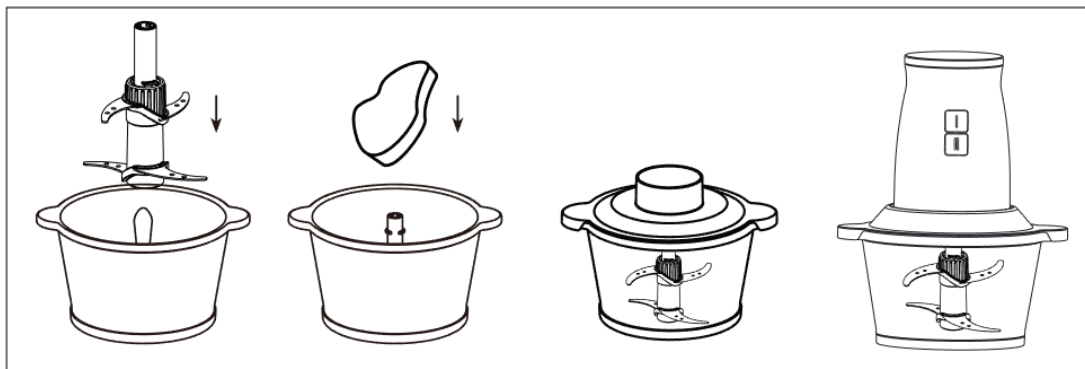

LIVOO

Feel good moments

Instruction Manual

Vegetable chopping

Cut the food materials into strips and slices. The slices should not be wider than 1-2cm nor longer than 5-10cm. The processing quantity may not be over limit quantity indicated on the bowl. The operational steps are the same as above for meat chopping.

Chopper use


For herbs and nuts processing you can use the mini chopper.

Put your herbs and nuts in the mini chopper. Fit the mini chopper blade with the mini chopper.

Open the upper lid of the chopper motor base: unscrew the lid (counterclockwise).

Set the mini chopper on the motor base by turning clockwise. It should match perfectly.

Turn the power on, press on the speed button 1 or 2, then it shall start working. The continuous working time for one time may not be over 30 seconds.

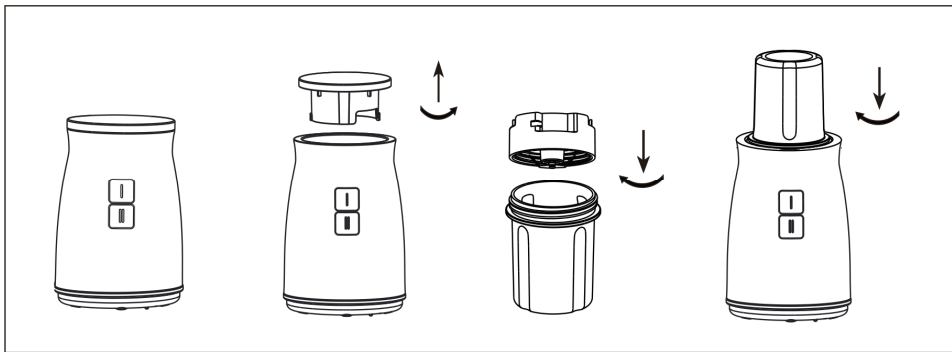

Recommended quantities

Ingredients	Ingredients Maximum quantity
Beans	Beans 40g
Grains	Grains 40g
Meat	Meat 40g
Pepper	Pepper Do not exceed half
Other	Other Do not exceed half

CLEANING AND STORAGE

- Always unplug the appliance before cleaning.
- To clean, wipe the surface of the appliance with a damp cloth, if necessary add a little dishwashing liquid, then dry thoroughly. Never immerse it into water and do not use any proprietary cleaner.
- Dishwasher should not be used for cleaning.
- Blade, transparent lid, bowl and mini chopper can be washed under warm water and dishwashing liquid.
- The appliance should be frequently used. If not used for a long-term time, it should be stored in a dry and ventilated place to prevent the motor from dampness.

LIVOO

Feel good moments

Instruction Manual

Problems	reasons	solutions
chopper does not work after being powered	Bowl and motor base are not screwed tight	Screw the bowl tight on the motor base
There is odour for the first several times of application	Normal situation for the first application of the chopper	Should there still be odour after multiple times of applications, send the chopper to the nearest maintenance point for inspection
Abrupt pause of work in application	The motor is overheated and the temperature control protection stops working	Cool for 20-30 minutes before application
Abnormal vibration or too much noise	Confirm whether bowl and blade holder are not screwed tight enough Confirm whether the food is too much	Turn off the power and take out the surplus food
Blade/motor is stuck	Blade is stuck by the food	Turn off the power, take out the food and cut it into smaller slices

LIVOO

Feel good moments

Instruction Manual



Correct Disposal of this product
(Waste Electrical & Electronic Equipment)
(Applicable in the European Union and other European countries with separate collection systems)

The European Directive 2012/19/EU on Waste Facilities Electrical and Electronic (WEEE)

This marking shown on the product or its literature, indicates that it should not be disposed with other household wastes at the end of its working life.

To prevent possible harm to the environment or human health from uncontrolled waste disposal, please separate this from other types of wastes and recycle it responsibly to promote the sustainable reuse of material resources.

Household users should contact either the retailer where they purchased this product or their local authority office, for details of where and how they can take this item for environmentally safe recycling.



LIVOO
BP 61071
67452 Mundolsheim - FRANCE

- Photo no contractual.
- Worried about the quality of his products the manufacturer reserves the right to make modifications without advance notice.