

LIVOO
Feel good moments
Instruction Manual

Compact slow juicer



Reference : DOP238
Version : 1.4
Language : English

WWW.LIVOO.FR

Instruction Manual

You have purchased a product LIVOO brand and we thank you. We take great care in design, ergonomics and simplify the using of our products. We hope that this product will give you complete satisfaction.

This instruction manual is available too on our website www.livoo.fr

General Safety Instructions

PLEASE, TAKE TIME TO READ WELL THE INSTRUCTIONS FOR USE
PARTICULARLY BEFORE THE FIRST USE.

A misuse of the appliance can damage it or hurt the user. Assure that you use the appliance for the use for which it is designed; we refuse any responsibilities as for the damages by an incorrect use or a bad manipulation.

1. Check that your mains voltage corresponds to that stated on the appliance.
2. The safety instructions do not by themselves eliminate any danger completely and proper accident prevention measures must always be used.
3. Never leave the appliance unsupervised when in use.
4. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard(*).
5. Only use the appliance for domestic purposes and in the way indicated in these instructions.
6. Never immerse the base of your appliance in water or any other liquid for any reason whatsoever. Never place it into the dishwasher.
7. Never use the appliance near hot surfaces.

Instruction Manual

8. Before cleaning, always unplug the appliance from the power supply.
9. Never use the appliance outside and always place it in a dry environment.
10. Never use accessories that are not recommended by the producer. They could constitute a danger to the user and risk to damage the appliance.
11. Never move the appliance by pulling the cord. Make sure the cord cannot get caught in any way. Do not wind the cord around the appliance and do not bend it.
12. Stand the appliance on a table or flat surface.
13. Unplug the appliance when not in use.
14. This kind of appliance cannot function continuously, it is not a professional type of appliance. It is necessary to make temporary stops.
15. Do not use the appliance if the rotating sieve is damaged.
16. It is absolutely necessary to keep this appliance clean at all times as it comes into direct contact with food.
17. Always disconnect the appliance from the supply if it is left unattended and before, assembling, disassembling or cleaning.
18. Never touch the movable part with your hands in order not to get hurt. Do not force the mechanism by squeezing the fruits you are pressing too much.
19. The appliance is not intended to be operated by means of external timer or separate remote control system.

Instruction Manual

20. Keep this manual with the appliance. If the appliance is to be used by a third party, this instruction manual must be supplied with it.
21. This appliance shall not be used by children. Keep the appliance and its cord out of reach of children.
22. Appliances can be used by persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and if they understand the hazards involved.
23. Children shall not play with the appliance.
24. There is potential injury from misuse
25. This appliance is intended to be used in household and similar applications such as:
 - staff kitchen areas in shops, offices and other working environments
 - farm houses
 - by clients in hotels, motels and other residential type environments
 - bed and breakfast type environments
26. This unit is equipped with a safety device, which prevents the extractor from running if the release button is not put in the right position.
27. Regarding the instructions for cleaning surfaces in contact with food or oil thanks to refer to the below paragraph "cleaning" in manual.

Instruction Manual

28. Regarding the instructions for the use of accessories, operation times and speed settings, thanks to refer to the below paragraphs.
29. Switch off the appliance and disconnect from supply before changing accessories or approaching parts that move in use.
30. Accessories, others than those supplied with the appliance, include instructions for their safety use.
31. Care shall be taken when handling the sharp cutting blades, emptying the bowl and during cleaning

(*) **Competent qualified electrician:** after sales department of the producer or importer or any person who is qualified, approved and competent to perform this kind of repairs in order to avoid all danger. In any case you should return the appliance to this electrician.


TECHNICAL SPECIFICATIONS

Voltage	: 220-240V~50-60Hz
Power	: 200W
Juicing cup capacity	: 800ml
Pulp container capacity	: 600ml
Unit size	: 179*147*442mm
Bare weight	: 2.4kg

DESCRIPTION

Instruction Manual

1	Chute & Strainer Assembly	5	Juice Container
2	Squeezing Auger	6	Pulp Container
3	Juicing Bowl	7	Pusher
4	Power base	8	Cleaning Brush

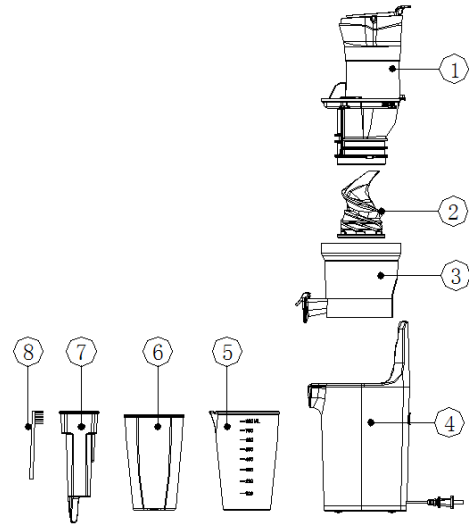

Before first use:

1. Remove all packaging materials, plastic bags and labels.
2. Clean the Food Tray / Chute & Strainer Assembly / Squeezing Auger / Juicing Bowl / Pusher with Soapy water. Then rinse and dry thoroughly.

NOTE : DO NOT IMMERSE THE POWER BASE UNIT IN WATER.

3. Assemble the parts per the instruction in the assembling method section.

ASSEMBLING METHOD

1. Please make sure the unit is not plugged and the switch is turned to “O” setting prior to assembling the machine.
2. Position the squeezing bowl on the Power base aligning the position of the spouts and the axle. (Fig 1)
3. Push the squeezing auger firmly into the center of the bowl, making sure that it touches down the bottom, or else the cover cannot be closed. (Fig 2)
4. Position the chute on the bowl to align the ▲ to the “🔒” and twist it clockwise until it clicks the safety lock.

Please make sure that the arrow ▲ on “🔒” the cover aligns with the Lock graphic on the Bowl. (Fig 3)

5. Place the juice container and the pulp container under the relevant spouts. (Fig 4)

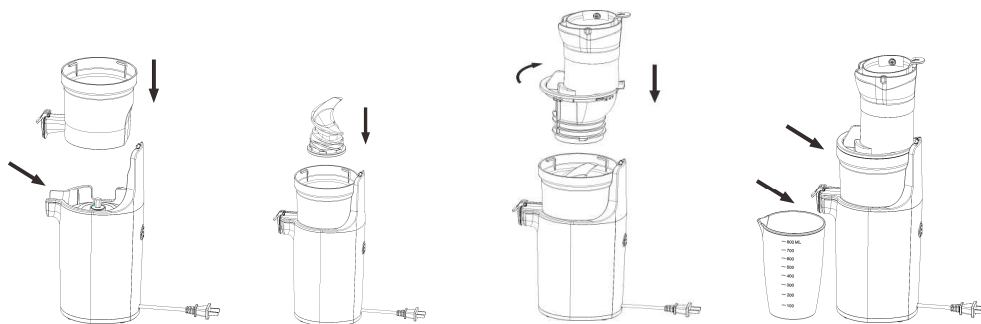


Fig 1

Fig 2

Fig 3

Fig 4

Instruction Manual

OPERATION INSTRUCTION

1. Connect the unit with Power.
2. Check and make sure all parts are well assembled in correct position.
3. Make sure the machine is at off "O" position.
4. Make sure the juice and pulp containers are in position.
5. Make sure the juice spout cover is closed.
6. Prepare the fruits or vegetables and cut them into pieces max 5cm x 2cm strips or 3cm x 3cm cubes.
7. Put fruit strips/cubes into the chute.
8. Press the switch to Setting " - " to start the juicing operation.
9. Push the food down with the pusher only.
10. In case of food stuck inside the Bowl, please switch to "R" reverse function instantly.

Please do not use the juicer continuously longer than 20 minutes.

If the juicer gets overheated, it will turn off automatically to protect the machine. In this case, please turn the juicer off "O" . Wait 10 minutes to let the juicer cool down and then turn it on again.

Open & Close of Juice Spout Cover

During the juicing process, you could keep the Drip-stop Cover closed before the juice is full in the juicing bowl. (Fig 5)

Juicer spout is opened

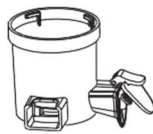


Fig 5

Juicer spout is closed



TIPS FOR JUICING

- If juicing fruit with stones or hard seeds, pit the fruit.
- Remove any hard inedible skins, i.e. skin of melons, pineapples and mangoes prior to juicing.
- If citrus fruits are being used, remove the skin prior to juicing.
- If using fibrous vegetables such as celery, cut into smaller pieces.
- When you use fruits/vegetables with firm flesh or hard (carrots, apples, etc), cut them in small pieces.
- If pieces of fruit or vegetables are very large, chop them to a size that will fit down the juicer's feeding chute.
- Do not insert ice or frozen fruit Put food into feeding tube.
- Insert food at a regular speed, allowing all the pulp to extract. For maximum efficiency, do not rush.
- Juice nuts only with other foods such as soaked soybeans.
- The juice from fresh fruit and vegetables is high in nutritional content.

Instruction Manual


- When selecting fruit and vegetables for juicing, always select fresh and well ripened specimens. They carry more flavor and juice
- Juice is best consumed when freshly made as this is when its vitamin and mineral content is highest.
- Bananas can be difficult to juice, if using banana add it as the first or second ingredient, the nectar of the banana will flow through into the juice created from the other fruits.

DISASSEMBLING METHOD

To disassemble the unit after use and before cleaning. Please turn the juicer to “O” position and disconnect the juicer from power source.

Then, please follow the steps below :

1. Remove the Juice and Pulp containers. (Fig 6)
2. Remove the Chute. Turn the chute anti-clockwise until the ▲ aligns with the “ ” sign. (Fig 7)
3. Remove the Squeezing Auger by pulling it out upward. If it is very hard, swing gently and pull. (Fig 8)
4. Remove the Squeezing Bowl by lifting it upward vertically. (Fig 9)

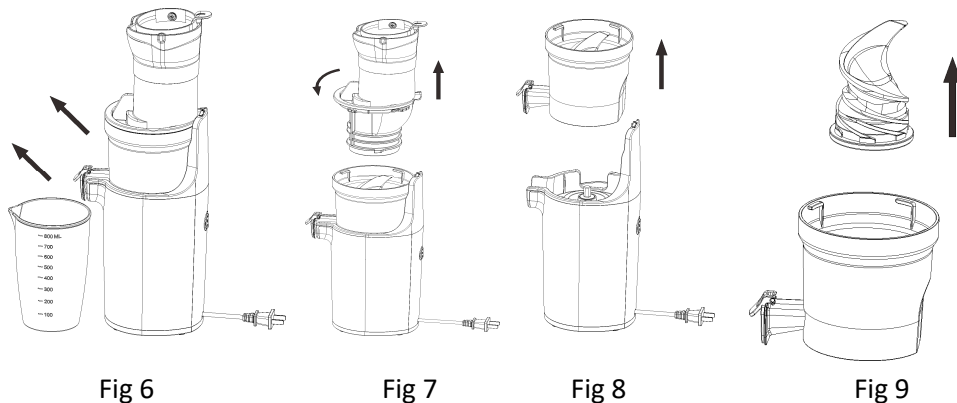

CLEANING AND MAINTENANCE

1. Please wash the juicing parts every time immediately after each used, otherwise the pulp might stick tightly in Juicing Bowl & Squeezing Auger which will then affect the disassembly, cleaning and juicing performance.
2. Switch off and unplug the juicer.
3. Wash the disassembled parts (Fig 10) with water. If the meshes are clogged with pulp, please use the provided cleaning brush to remove the dregs.

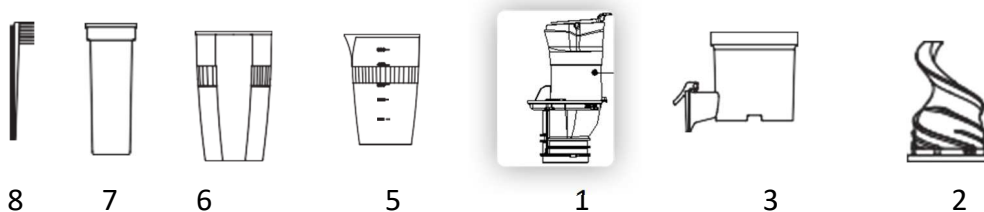


Fig 10

Instruction Manual

Attention:

Do not use iron wire brush, abrasive or sharp object tool to clean the unit.

Pusher and containers are dishwasher safe.

4. In case there is any residues remained in the mouth of the pulp spout, please pull out the silicone valve as shown in (Fig 11) below and clean under running water

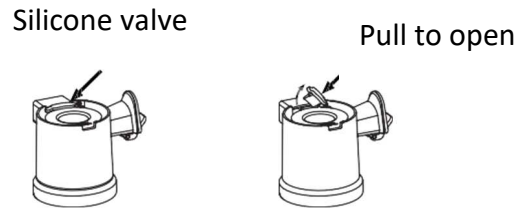


Fig 11

Press the silicone valve to close it properly and tightly after cleaning.

5. To clean the seal ring in the center of the squeezing bowl, please follow the steps as below :
 - a. Turn the Squeezing Bowl upside down for easier handling, Push the seal ring out with your thumb (Fig 12a) and clean it with water.
 - b. After Cleaning, please put it back to the center hole. The small ribbed surface should be should face upward (Fig.12b) Make sure the groove of the seal ring well fit in the squeezing bowl.
 - c. The big flat size of the seal ring will be inside while the small and ribbed side is outside the Squeezing Bowl. (Fig 12c)



Fig 12a



Fig 12b



Fig 12c

6. Do not put the Power Base into water for cleaning. Wipe it with damp cloth only.
7. After cleaning, please dry the parts thoroughly and store them in a dry, cool place.

STORAGE

1. Follow cleaning instructions to well maintain the unit before storage.
2. Tidy up the power cord set.
3. Keep the unit away from children's easy access.
4. Store the unit and the accessories at a dry, cool place.
5. Please make sure the unit and parts are dry before storing it.

Instruction Manual

USEFUL TIPS

Item	Warning	Reason
1	Not for Ice cube.	The ice cube is too hard. It may damage the squeezing parts.
2	The ingredient with long fiber needs to be cut down to 5-10 cm thin strips or 3 x 3 cm cubes.	Long fiber food is easy to wind and block the spout.
3	The peel and pits/seeds must be removed from oranges, lemons, grapefruit and melons before use.	The hard pit or seeds may damage the squeezing parts. The peel may block the spout of pulp.
4	Do not use other accessory as a pusher.	It may damage the juicer and cause injury.
5	Each juicing cycle not longer than 20 minutes.	Working over time may cause damage to the motor.
6	Never put the spoon, chopsticks into the opening of the Chute, the juice and pulp spouts.	It may damage the juicer.

TROUBLE SHOOTING

Trouble	Cause	Solutions
The juicer stops running suddenly.	Too many ingredients put into the juicer.	Switch to "R" position instantly to make the ingredients return upwards. If the machine still stops running, please clean the machine before use.
	Hard fruits or vegetables have not been cut in small pieces.	Hard fruits and vegetables (such as carrot) shall be cut into thin strips or small cubes before putting into chute.
The juice yield is low or juice flows out of the main housing.	The Bowl and the silicone valve are not installed properly.	Please re-install the Bowl silicone valve by referring to the installation method.
Abnormal noise.	Parts cause extrusion sound during squeezing.	The sound is caused by extrusion of fruits and vegetables, which is normal phenomenon.
The Chute & Strainer Assembly cannot be	There is too much pulps inside the bowl.	Press switch to "R" setting to eject the pulps backward.

Instruction Manual

opened.	There is hard foods stuck inside.	Press switch to “R” to eject the object backward.
	The pulp mess is stuck.	Pour water into the Chute to soften the stuck pulp mess overnight.
The container & accessories are dyed after use.	Dyed parts are due to natural color of specific fruits/veggies.	This is natural color and unavoidable.



**Correct Disposal of this product
(Waste Electrical & Electronic Equipment)
(Applicable in the European Union and other European countries with separate collection systems)**



The European Directive 2012/19/EU on Waste Facilities Electrical and Electronic (WEEE)

This marking shown on the product or its literature, indicates that it should not be disposed with other household wastes at the end of its working life.

To prevent possible harm to the environment or human health from uncontrolled waste disposal, please separate this from other types of wastes and recycle it responsibly to promote the sustainable reuse of material resources.

Household users should contact either the retailer where they purchased this product or their local authority office, for details of where and how they can take this item for environmentally safe recycling.



LIVOO
BP 61071
67452 Mundolsheim - FRANCE

- Photo noncontractual
- Worried about the quality of his products the manufacturer reserves the right to make modifications without advance notice