

Rechargeable multifunction hair clipper



Reference : DOS164
Version : 1.4
Language : English

You have purchased a product LIVOO brand and we thank you. We take great care in design, ergonomics and ease of use of our products. We hope that this product will give you complete satisfaction.

This instruction manual is available too on our website www.livoo.fr

General Instructions

PLEASE, TAKE TIME TO READ WELL THE INSTRUCTIONS FOR USE
PARTICULARLY BEFORE THE FIRST USE.

A misuse of the appliance can damage it or hurt the user. Assure that you use the appliance for the use for which it is designed; we refuse any responsibilities as for the damages by an incorrect use or a bad manipulation.

DANGER

To reduce the risk of electric shock:

1. Do not place or store this appliance where it can fall or be pulled into a tub or sink.
2. Except when charging, always unplug this appliance from the electrical outlet immediately after using.
3. Unplug appliance before cleaning.

WARNING

To reduce the risk of burns, fire, electric shock or injury to persons:

4. This appliance is for household use only.
5. An appliance should never be left unattended when it's plugged in, except when charging a rechargeable appliance.
6. Close supervision is necessary when this appliance is used by, on, or near children or invalids.

User manual

7. Use this appliance only for its intended use as described in this manual.
8. Keep the cord away from heated surfaces.
9. Never drop or insert any object into any of the appliance's openings.
10. Do not use outdoors or operate where aerosol (spray) products are being used, or where oxygen is being administered.
11. Please do not expose the device to temperatures less than -10°C or greater than +40°C, to direct sunlight, or to dust.
12. Always store this appliance and cord in a moisture-free area.
13. Make sure the cord is disconnected from the groomer (or its stand) when storing.
14. Always attach plug to appliance, then adapter to outlet. To disconnect, turn all controls to OFF, then remove adapter from outlet, then detach power cord from the clipper for storage.
15. Do not use an extension cord or a voltage converter with this appliance.
16. Do not wrap the cord around the appliance.
17. Animal clipper, hair clipper, and appliances for manicure and pedicure can be used by children aged from 3 years under supervision.
18. Shaver, wet shaver, animal clipper, hair clipper, and appliances for manicure and pedicure can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given

supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.

19. Children shall not play with the appliance
20. Cleaning and user maintenance shall not be made by children without supervision.
21. The appliance is intended to be use with the power supply unit provide. The parts that have to be fixed must be installed so they cannot fall into water.
22. This appliance must only be supplied at safety extra low voltage corresponding to the marking on the appliance.
23. This appliance is intended to be used in household and similar applications such as:
 - staff kitchen areas in shops, offices and other working environments
 - farm houses
 - by clients in hotels, motels and other residential type environments
 - bed and breakfast type environments

WARNING:

Detach the hand-held part from the supply cord before cleaning it in water

TECHNICAL INFORMATION

Deluxe Personal groomer (hair trimmer)

Rechargeable batteries: 2*1.2V Ni-MH 600mAh each

Mains adaptor

Input Voltage: 100-240V~ 50-60Hz

Output Voltage: 3.0V D.C, 0.8A

Ambient conditions: For indoor use only

Warning: do not use non-rechargeable batteries

This appliance can be washable and used near bathtubs and showers



CLEANING AND MAINTENANCE

Clean Your Groomer Regularly

Clean your groomer regularly to ensure your unit's operating life is not prematurely shortened.

Cleaning attachments and unit with water

- Remove attachments.
 - Rinse attachments under warm running water.
 - You can use a hair dryer on a cool or medium heat setting to help dry off the attachments, if desired.
- ! Do not use harsh or corrosive cleaners on the unit or its cutters.
! Do not apply pressure or hard objects to cutters.

Oiling the blades

If you rinse the attachments, you will need to lubricate the cutter blades once a month with blade oil. Simply spread 1-2 drops of oil lightly over the cutters with your finger-tip. Wipe away any excess oil from the cutters or the groomer.

Oiling cautions

- Use only the light-grade oil like sewing machine oil—these oils will not evaporate and will not slow down the blades.
- Do not use hair oil, grease, or any oil mixed with kerosene or solvent will evaporate and leave the thick oil, slowing the blades.

Cleaning with brush

Thoroughly brush and blow out hair clippings from cutter, bottom of attachments, and top of power handle.

LIVOO
Feel good moments
User manual

DESCRIPTION

Deluxe Personal Groomer/Hair Trimmer

It contains all the attachments you need to maintain a well-groomed look on your beard, mustache, sideburns, neckline, nose, ears, and eyebrows.

Groomer Parts

- (A) Groomer/Trimmer
- (B) ON/OFF switch
- (C) Head releasing button
- (D) U trimmer blades
- (E) T trimmer blades
- (F) Detail trimmer blades
- (G) Nose and ear trimmer head
- (H) Mini shaver head
- (I) Facial and body trimmer head
- (J) Adjustable hair length comb
Attachment to fit U trimmer blades
- (K) Adjustable hair length comb
Attachment to fit T trimmer blades
- (L) Attached comb for facial trimmer
- (M) Stand base
- (N) Adapter cord & plug



Charging

Before using the DOS164 first time, it must charge for 10~12 hours.

1. Make sure the groomer is turned off.
2. Connect the cord to the appliance, then into an electrical outlet (A red light will come on, indicating the unit is charging).
3. If the groomer/ trimmer with a charging stand, set the groomer into its spot in the charging stand. A red light will come on, indicating the unit is charging.

NOTE: Charge adapter may be plugged directly into the bottom of the groomer or attached underneath the stand.

Charging Cautions

- Use only the charging adapter supplied with the groomer/trimmer.
- Charging should be done at temperatures between 10°C and 40°C, or it could decrease the battery's life.
- In order to preserve the life of the batteries, they should be fully discharged every six months and then fully charged for 12 hours.
- If the unit is not going to be used for an extended period of time (2-3 weeks) unplug it and fully recharge when you want to use it again.

LIVOO
Feel good moments
User manual

Attached combs

■ To attach:

1. For U blade attached comb (J): Just slide the comb along the groove at the neck of the both sides of U blade, from the top to the end of the U blade.
2. For the T blade attached comb (K): Set the combs upper end fits into the upper end of the T blade, press the lower end of the comb into the blade with a “pa” sound to get it matched.
3. For the facial trimmer attached comb (L): Just slide the comb along the groove at the both sides of facial trimmer, from the top to the end of the trimmer head.

■ To remove:

1. For U blade attached comb (J): Just slide away to get it removed.
2. For the T blade attached comb (K): Pull from the end of the comb to get it removed.
3. For the facial trimmer attached comb (L): Just slide away to get it removed.

■ Adjustable hair length comb

- 1- Close
- 2- Short
- 3- Medium short
- 4- Medium

Replacement the interchangeable heads

■ To attach: Fit the lower end of the heads into the unit first, then press the Releasing button and another side fits into the unit as well.

■ To remove: Press the releasing button, then pull out the heads.

USE

Grooming

- Hairs should be dry and free of lotions when using your groomer/trimmer.
- Comb hairs outward so they are at their maximum height and facing in the same direction.
- Make sure the groomer does not have damaged or broken cutter units, which could cause injury if used.

Beard

What to use: T trimmer blades + comb attachment

- Attach the desired hair length comb to the groomer head as described on the previous page.
- Set the comb to the desired trim length. It's usually a good idea to use a longer setting until you are familiar with the groomer, to avoid trimming too much hair.
- Turn the groomer on.
- Start under your chin and, following your jaw line, trim toward your ear and upper beard line using an upward motion. Allow the comb attachment to follow the contours of your face.

Thinning and tapering

What to use: T trimmer blades

- Turn the groomer on.
- Use a small comb to hold the beard hairs in place while trimming.

LIVOO
Feel good moments

User manual

- Holding the groomer with the cutting unit facing away from you, move the groomer along the length of the comb.

Beard line

What to use: T trimmer blades or U trimmer blades

- Turn the groomer on.
- Hold the groomer with the trimmer cutting blades facing you.
- Lightly touch the cutting blades to your face and draw the groomer toward your beard line. For your neck, draw the groomer away from desired beard line.

Around the beard

What to use: detail trimmer blades

- Turn the groomer on.
- Use the detail trimmer blades to cut the detail areas around the beard.
- Hold the groomer so the trimmer gently touches your skin. This allows the unit to give you the closest cut.

Get beard clean & clear

What to use: mini shaver head

- Turn the groomer on.
- Use the mini shaver to cut the short hair from its root.
- Hold the groomer so the trimmer gently touches your skin. This allows the unit to give you the closest cut.

Ear & Ear canal

What to use: nose/ear trimmer head

- Turn the groomer on.
- Gently insert groomer's cutting unit into the outer ear canal. For safe trimming, avoid inserting the groomer more than 1/4 inch into the ear canal.
- Rotate the groomer in a circular motion, gently moving it in and out as you rotate.

Outer ear

What to use: nose/ear trimmer head

- Turn the groomer on.
- Carefully guide the groomer around surfaces of the ear where there are unwanted hairs.

Eyebrows

What to use: detail trimmer blades

- Turn the groomer on.
- Carefully guide the cutting edges to the stray hairs along the eyebrow line or protruding from the eyebrow itself.
- For best results don't use the groomer to define the entire eyebrow.

Mustache

What to use: T trimmer blades or U trimmer blades

- Use a small comb to straighten hairs for trimming.
- Turn the groomer on.
- Lightly touch the cutting blades to the mustache. Too much pressure may trim more hair than desired.
- Since all hairs do not grow in the same direction, you may want to try trimming upwards, downwards, or across.
- Practice will produce optimum results.

LIVOO
Feel good moments
User manual

Nape of Neck

What to use: T trimmer blades, U trimmer blades or facial blade

- Use a hand mirror if you are trimming the nape of your neck yourself. A mirror is unnecessary if someone else is trimming it for you.
- Lift the hair up off the neck, and use your index finger to cover the roots of any hair you DON'T want to trim. This will serve as a bumper to prevent accidentally trimming too much hair.
- Turn the groomer on and hold it base-side up.
- Touch the cutting edges to your neck, and move the groomer slowly up your neck until it touches the finger that's covering the roots of your hair.

Nose

What to use: nose/ear trimmer head

- Turn the groomer on.
- Insert groomer's cutting unit gently into the nostril. For safe trimming, avoid inserting the groomer more than 1/4 inch into your nostril.
- Rotate the groomer in a circular motion around the opening of the nostril, gently moving it in and out as you rotate.

Body

What to use: facial trimmer head

The following procedure should be followed for battery removal:

- the appliance must be disconnected from the supply mains when removing the battery so you don't risk an electric shock.
- Pull or gently pry the clipper halves apart, exposing the batteries.
- the battery must be removed from the appliance before it is scrapped
- Twist batteries to break wires or the wires may also be cut

CAUTION: THESE Ni-Mh BATTERIES MUST BE RECYCLED OR DISPOSED OF IN ACCORDANCE WITH STATE AND LOCAL REGULATIONS.

Do not burn or mutilate, as they may burst or release toxic materials. Do not short-circuit, as this may cause burns.

The list of the marking symbols

V	Volt	Hz	Hertz
W	Watt		To indicate on the rating plate that the equipment is suitable for alternating current only; to identify relevant terminals.
A	Ampere		To indicate on the rating plate that the equipment is suitable for direct current only; to identify relevant terminals
	European Community	IPX6	Can use this appliance near bathtubs, showers, basins or other vessels containing water.
	Class II appliance symbol		

LIVOO
Feel good moments
User manual



**Correct Disposal of this product
(Waste Electrical & Electronic Equipment)
able in the European Union and other European countries with separate collection systems)**

 The European Directive 2012/19/EU on Waste Facilities Electrical and Electronic (WEEE)
This marking shown on the product or its literature, indicates that it should not be disposed with other household wastes
at the end of its working life.

To prevent possible harm to the environment or human health from uncontrolled waste disposal, please separate this from other types
of wastes and recycle it responsibly to promote the sustainable reuse of material resources.

Household users should contact either the retailer where they purchased this product or their local authority office, for details of where
and how they can take this item for environmentally safe recycling.



Pour en savoir plus :
www.quefairedemesdechets.fr

LIVOO
BP 61071
67452 Mundolsheim - FRANCE

- Photo no contractual
- Worried about the quality of his products the manufacturer reserves the right to make modifications without advance notice