

Hair dryer and straightener gift set



Reference : DOS170
Version : 1.4
Language : English

User Manual

Thank you to have purchased a product brand LIVOO. We take great care in design, ergonomics and simple use of our products. We hope that this product will give you complete satisfaction.

This instruction manual is available too on our website www.livoo.fr

GENERAL INSTRUCTIONS

PLEASE, TAKE TIME TO READ WELL THE INSTRUCTIONS FOR USE PARTICULARLY BEFORE THE FIRST USE. A misuse of the appliance can damage it or hurt the user. Assure that you use the appliance for the use for which it is designed; we refuse any responsibilities as for the damages by an incorrect use or a bad manipulation.

1. Before use, check that the voltage of your wall outlet corresponds to the rated voltage manner.
2. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard (*).
3. Note when unpacking the appliance:
DANGER for children. Danger to life through suffocation!
Keep the packaging material away from children.
4. To prevent a life-threatening electrical shock:



Do not use this appliance nearby water!

WARNING: Do not use this appliance near bathtubs, showers, basins or other vessels containing water.

5. When the appliance is used in a bathroom, unplug it after use since the proximity of water presents a hazard even when the appliance is switched off.
6. Never immerse the appliance in water or in any other liquids.
7. Do not use the appliance while taking a bath.

User Manual

8. Water and other liquids represent a danger. If the appliance falls into water, pull out the main plug immediately.
9. Pull the mains plug from the socket:
 - When a disturbance occurs.
 - Before you clean the appliance.
 - If you will not be using the appliance for a longer period.
 - After each use.
10. For additional protection, the installation of a residual current device (RCD) having a rated residual operating current not exceeding 30 mA is advisable in the electrical circuit supplying the bathroom. Ask your installer for advice.
11. This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
12. Children shall not play with the appliance.
13. Cleaning and user maintenance shall not be made by children without supervision.
14. Make sure that the cable is not pinched in cupboard doors or pulled over hot surfaces. Otherwise the cable insulation may become damaged.
15. The cable must not be twisted, pulled, kinked or wound around appliance. If the cable is twisted, untwist it before use.
16. Before use check the cable for damages.
17. Regularly check the appliance and above all the cable for defective and porous locations.
18. To avoid breaks never wind the cable around the appliance.

User Manual

19. Watch out that the plug never contacts hot parts of the appliance.
20. Only use the appliance when the appliance, cable and plug show no sign of damage. Never use a defective appliance.
21. Never try to repair a defective appliance yourself.
22. Do not leave unsupervised device when you do not use it.
23. Insert no object into the device.
24. This appliance is reserved for a domestic use.
25. Danger of fire due to high temperatures. Do not use on artificial hair.
26. Danger of death due to electrical shock! Never touch appliance with wet hands when connecting it to the electrical mains or during mains operation!
27. Withdraw the mains plug from the socket before cleaning the appliance.
28. Overheat protection!
If the appliance overheats, switch off entirely and let it cool for about 6 to 15 minutes. Once cooled down, the appliance can be used again.
29. This appliance is intended to be used in household and similar applications such as:
 - Staff kitchen areas in shops, offices and other working environments
 - Farm houses
 - By clients in hotels, motels and other residential type environments
 - Bed and breakfast type environments

User Manual

(*) Competent qualified electrician: after sales department of the producer or importer or any person who is qualified, approved and competent to perform this kind of repairs in order to avoid all danger. In any case you should return the appliance to this electrician.

WARNING

The following should be noted to ensure trouble-free operation:

- Only operate the appliances according to the details on the nameplate.
- Do not subject the appliances to temperatures below 10°C and above 35°C.
- Thoroughly clean the appliances after each use.
- Allow the appliances to run for approx. 3-5 minutes before first use. During this time, a slight odor may arise due to manufacturing process. This is harmless and only occurs when first used.

Hair dryer:

- Never cover the fan or air inlet. Ensure that the air inlet remains free from fluff and hair. **Danger of fire!**
- Keep jewelry chains away from the air inlet so that they are not drawn into the appliance.
- **Danger of burning!** The air outlet or attachments can become very hot. Do not touch them during operation. Allow them to first cool before changing them.

Hair straightener:

- **Danger of burning!** Plates/hair clamps warm very fast, do not touch them. Hold them distant from your skin. Let them cool after use.

User Manual

TECHNICAL DATA

Hair dryer:

Voltage: AC 220-240V 50-60Hz

Power: 1700-2000W

Hair straightener:

AC 110-240V 50-60Hz

35W

CLEANING AND STORAGE

Never use any abrasive cleanser or solvent.

Never immerse appliances in water.

Remove the mains plug from the mains socket after use and let the appliance cool down well before cleaning and storing.

Hair dryer:

1. Clean the different parts of the appliance with a damp cloth.
2. It is important to keep the Air inlet free from hair and lint.
3. Use the power cord loop to hang the appliance.

Hair straightener:

Clean the different parts of the appliance with a damp cloth.
Now you can store these appliances on the supplied Nylon carrying case.

Before use of these two appliances, ensure you they are clean of dust or dirt.

Before use of your hair straightener, your hair must be clean, dry, tangle free and free of any chemical haircare.

HAIR DRYER USE

- Always ensure the switch is set to OFF position before plugging.
- Use high setting for drying hair, and use low setting for styling.
- If the hair dryer stops for any reason, unplug it from the mains socket and let it cool down.

Temperature switch: Low warm / Middle hot / High hot temperature

Speed switch: 0= OFF position / 1= LOW: low speed / 2= HIGH: high speed

Cool shot: Press cool shot switch to have comfortable cool wind.

- Use the concentrator to focus on a small area or when you want to relax curly hair.
- Switch off when finished using, then remove the plug from the socket.

Note: To avoid overheating, do not concentrate heat on one section for too long.

User Manual

HAIR STRAIGHTENER USE

1. Plug the unit and push the lock switch downward, then press on/off switch upward (ON), the indicator will light on. After 30 seconds, the appliance will be ready for use, reaching a temperature of 230°C.
2. You can start styling: run the hair straightener through the total length of the hair section you choose without stopping.
During use, the appliance becomes very hot, keep it away from your skin and your hair roots (3/5cm) to avoid any burn.
3. After use, push on/off switch button downward (OFF), the light will turn off. Then let the appliance cool down and lock the hair straightener by pushing lock switch upward before storing.



**Correct disposal of the unit
(Electrical and Electronic Equipment)**

(Applicable in the European Union and the rest of Europe that have adopted separate collection systems countries)

The European Directive 2012/19/UE on Waste Electrical and Electronic Equipment (WEEE), requires that old household electrical appliances must not be disposed of in the normal household waste stream.

Old appliances must be collected separately in order to optimize the recovery and recycling of the materials they contain and reduce the impact on human health and the environment.

The symbol of the crossed out dustbin is marked on all products to remind the obligations of separate collection.

Consumers should contact their local authority or retailer for information concerning the correct disposal of their product.



Pour en savoir plus :

www.quefairedemesdechets.fr

LIVOO
BP 61071
67452 Mundolsheim - FRANCE

- Photo no contractual
- Worried about the quality of his products the manufacturer reserves the right to make modifications without advance notice