

Hair brush styler



Reference : DOS171
Version : 1.6
Language : English

User Manual

Thank you to have purchased a product brand LIVOO. We take great care in design, ergonomics and simple use of our products. We hope that this product will give you complete satisfaction.

This instruction manual is available too on our website www.livoo.fr

General Instructions

PLEASE, TAKE TIME TO READ WELL THE INSTRUCTIONS FOR USE PARTICULARLY BEFORE THE FIRST USE. A misuse of the appliance can damage it or hurt the user. Assure that you use the appliance for the use for which it is designed; we refuse any responsibilities as for the damages by an incorrect use or a bad manipulation.

1. Before use check that the voltage of your wall outlet correspond to the rated voltage manner.
2. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard (*).
3. Note when unpacking the appliance: DANGER for children. Danger to life through suffocation!
Keep the packaging material away from children.

4. To prevent a life-threatening electrical shock:



Do not use this appliance nearby water!

WARNING: Do not use this appliance near bathtubs, showers, basins or other vessels containing water.

5. When the hairdryer is used in a bathroom, unplug it after use since the proximity of water presents a hazard even when the appliance is switched off.
6. Never immerse the appliance in water or in any other liquids.

User Manual

7. Do not use the appliance while taking a bath.
8. Water and other liquids represent a danger. If the appliance falls into water, pull out the main plug immediately.
9. Pull the mains plug from the socket:
 - When a disturbance occurs.
 - Before you clean the appliance.
 - If you will not be using the appliance for a longer period.
 - After each use.
10. To insure an additional protection, the installation, in the electric circuit feeding the room of bath, of an electrical system with residual differential current (DDR) of differential current of assigned functioning not exceeding 30 mA, is advised. Ask advice from your installer.
11. This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
12. Children shall not play with the appliance.
13. Cleaning and user maintenance shall not be made by children without supervision.
14. The cable must not be twisted, pulled, kinked or wound around the dryer.
15. Before use check the cable for damages. It should not be porous.
16. Watch out that the plug never contacts hot parts of the appliance.

User Manual

17. Do not use the appliance if it is defective, never try to repair it yourself.
18. Do not leave unsupervised device when you do not use it.
19. Insert no object into the device.
20. This appliance is reserved for a domestic use.
21. Danger of fire due to high temperatures. Do not use on artificial hair.
22. Danger of death due to electrical shock!
Never touch appliance with wet hands when connecting it to the electrical mains or during mains operation!
Withdraw the mains plug from the socket before you clean the appliance.
23. Overheat protection!
If the appliance overheat, switch off entirely and let it cool for about 6 to 15 minutes. Once cooled down, the appliance can be used again.
24. This appliance is intended to be used in household and similar applications such as:
 - Staff kitchen areas in shops, offices and other working environments
 - Farm houses
 - By clients in hotels, motels and other residential type environments
 - Bed and breakfast type environments

(*) Competent qualified electrician: after sales department of the producer or importer or any person who is qualified, approved and competent to perform this kind of repairs in order to avoid all danger. In any case you should return the appliance to this electrician.

User Manual

WARNING

The following should be noted to ensure trouble-free operation:

- Only operate the appliance according to the details on the nameplate.
- Do not subject the appliance to temperatures below 10°C and above 35°C.
- Thoroughly clean the appliance after each use.
- Allow the appliance to run for approx. 3-5 minutes before first use. During this time a slight odor may arise due to the manufacturing process. This is harmless and only occurs when first used.
- **Danger of burning!** The air outlet or attachments can become very hot. Do not touch them during operation. Allow them to first cool before changing them.

TECHNICAL DATA

Voltage: 220V–240V~ 50–60Hz

Power: 800W–1000W

CLEANING AND STORAGE

Never use any abrasive agents or solvent.

Never immerse appliances in water.

Remove the mains plug from the mains socket after use and let the appliances cool down well before cleaning and storing.

User Manual

Clean the different parts of the appliance with a damp cloth.
It is important to keep the air inlet free from hair and lint.
Use the power cord loop to hang the appliance on a hook.
Remove hair and clean the various interchangeable tips of the device with a damp cloth.

It is important to keep the air inlet at the bottom of the handle clean.

USE

Before use of the appliance, ensure you that it is clean of dust or dirt.

This appliance is supplied with 3 interchangeable styling attachments

You can connect them by simply snapping it onto the appliance and disconnect by pressing release button.

- Always ensure the speed button is set to O position (OFF) before plugging the unit into the power outlet.
- Depending on the desired hairstyle, use the appropriate brush tips:
 - Large brush: 50mm, allows you to add volume to your hair (ideal for long hair).
 - Medium brush: 35mm, allows you to create medium and soft curls or to straighten hair.
 - Small brush: 20mm, mixed bristles, allows you to structure your hair by creating smaller curls. You can also straighten your hair. This brush is best suited for short hair. You can start styling your hair.

During use, the appliance becomes very hot, keep it away from your skin and your hair roots (3/5cm) to avoid any burn.

- You can choose between three temperature levels: hot/ warm/cold (from bottom to top)



- You can use the fastest speed to dry hair and the lowest speed to style your hair

0= OFF Position
1= Low: low speed
2= HIGH: high speed



- After use, push speed button downward (OFF). Then let the appliance cool down.

User Manual



**Correct disposal of the unit
(Electrical and Electronic Equipment)**

(Applicable in the European Union and the rest of Europe that have adopted separate collection systems countries)

The European Directive 2012/19/UE on Waste Electrical and Electronic Equipment (WEEE), requires that old household electrical appliances must not be disposed of in the normal household waste stream.

Old appliances must be collected separately in order to optimize the recovery and recycling of the materials they contain and reduce the impact on human health and the environment.

The symbol of the crossed out dustbin is marked on all products to remind the obligations of separate collection.

Consumers should contact their local authority or retailer for information concerning the correct disposal of their product.



LIVOO

BP 61071

67452 Mundolsheim - FRANCE

- Photo no contractual
- Worried about the quality of his products the manufacturer reserves the right to make modifications without advance notice