

Multifunction trimmer



Reference : DOS172
Version : 1.6
Language : English

You have purchased a product LIVOO brand and we thank you. We take great care in design, ergonomics and ease of use of our products. We hope that this product will give you complete satisfaction.

This instruction manual is available too on our website www.livoo.fr

General Instructions

PLEASE, TAKE TIME TO READ WELL THE INSTRUCTIONS FOR USE PARTICULARLY BEFORE THE FIRST USE. A misuse of the appliance can damage it or hurt the user. Assure that you use the appliance for the use for which it is designed; we refuse any responsibilities as for the damages by an incorrect use or a bad manipulation.

WARNING

To reduce the risk of electric shock:



1. **Do not use this appliance nearby water!**

WARNING: Do not use this appliance near bathtubs, showers, basins or other vessels containing water.

2. Except when charging, always unplug this appliance from the electrical outlet immediately after using.
3. **WARNING:** Ensure that the appliance is disconnected from the power supply before cleaning to avoid the risk of electric shock.
4. This appliance is for household use only.
5. An appliance should never be left unattended when it's plugged in, except when charging a rechargeable appliance.
6. Close supervision is necessary when this appliance is used by, on, or near children or invalids.

7. Use this appliance only for its intended use as described in this manual.
8. Keep the cord away from heated surfaces.
9. Never drop or insert any object into any of the appliance's openings.
10. Do not use outdoors or operate where aerosol products are being used, or where oxygen is being administered.
11. Please do not expose the device to temperatures less than -10°C or greater than +40°C, to direct sunlight, or to dust.
12. Make sure the cord is disconnected from the groomer when storing.
13. Always attach plug to appliance, then adapter to outlet. To disconnect, turn all controls to OFF, then remove adapter from outlet, then detach power cord from the clipper for storage.
14. Do not use an extension cord or a voltage converter with this appliance.

WARNING

15. Keep the appliance dry.



16. Not suitable for cleaning under an open water tap.
17. Do not wrap the cord around the appliance.
18. Hair clipper can be used by children aged from 3 years under supervision.
19. This device can be used by children aged from 8 years and by persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they are properly supervised or if they have been given instructions

relating to the safe use of the appliance and the risks involved have been understood.

20. Children shall not play with the appliance.
21. Cleaning and user maintenance shall not be made by children without supervision.
22. The appliance is only to be used with the unit provided.
23. **WARNING:** For the purposes of recharging the battery, only use the detachable supply unit provided with this appliance <HX-S6LV0500800>.
24. This appliance contains batteries that are non-replaceable.
25. The battery must be removed from the appliance before it is scrapped.
26. The appliance must be disconnected from the supply mains when removing the battery.
27. The battery is to be disposed of safely.
28. If the adaptor supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard (*).
29. This appliance is intended to be used in household and similar applications such as:
 - Staff kitchen areas in shops, offices and other working environments
 - Farm houses
 - By clients in hotels, motels and other residential type environments
 - Bed and breakfast type environments

(*) Competent qualified electrician: after sales department of the producer or importer or any person who is qualified, approved and competent to perform this kind of repairs in order to avoid all danger. In any case you should return the appliance to this electrician.

TECHNICAL INFORMATION

Trimmer: 1.2 V $\overline{\text{---}}$, 600 mAh. Input: 5 V $\overline{\text{---}}$, 800 mA

Adaptor (HX-S6LV0500800):

Input: 100-240 V $\sim$, 50-60 Hz, 0.2 A / Output: 5.0 V $\overline{\text{---}}$, 0.8 A, 4.0 W

Information published	Value and precision	Unit
DELTA BP61071 67452 Mundolsheim – France	-	-
Model identifier	DOS172	-
Input voltage	100-240	V
Input AC frequency	50-60	Hz
Output voltage	5.0	V
Output current	0.8	A
Output power	4.0	W
Average active efficiency	72.8	%
Efficiency at low load (10 %)	N/A	N/A
No-load power consumption	0.03	W

CLEANING AND MAINTENANCE

Clean your trimmer regularly.

A regular care of your hair clipper and its accessories will extend the life of your equipment.

AFTER EACH USE:

Ensure that the trimmer is switched off and disconnected from the mains.

Brush the blade to remove the accumulated hair.

Do not submerge the trimmer in the water.

For cleaning the equipment, wipe it with a damp cloth and dry it immediately.

To remove the trimmer blade, place your thumb against the blades and then push it away from the main body:



Washing of comb guide:

- Remove the comb.
- Rinse it under clean running water.
- Allow it to dry completely.

Warning: Do not use abrasive cleansers on the equipment or its blade.

Brush cleaning:

Brush allows to remove the accumulated hair on the blade or accessories.

Brush off carefully and blow if necessary in order to remove the remaining hair on the blade.

Do not use wire or abrasive brush so as not to damage the hair trimmer.

DESCRIPTION



USE

How to charge the equipment:

Before using the equipment for the first time, it must be fully charged continuously for at least 16 hours.

- Set the On/off button at “OFF” position.
- Connect the mains voltage adapter cable to the hair trimmer.
- Plug the adaptor into a wall socket.
- The indicator light turns on.

Cordless use only : fully charged, the trimmer can be used approximately 35 minutes.

Precautions to be taken while charging

Do not use any charging adaptor other than the one supplied with the hair trimmer.

The room temperature should be between 5°C and 35°C, or you may shorten the life of the battery.

Battery must be fully discharged every six months, and then fully charged for 8 hours so as to extend the battery life.

If the equipment is not used for a long period (2-3 weeks), unplug it and recharge it when you want to use it again.

Beyond 3 months, please charge it for at least 16 hours.

Note: The hair trimmer may become warm during charging operation. That has not effect on the performance of trimmer.

LIVOO

Feel good moments

User manual

It is recommended to wait until the battery is fully discharged before recharging it. This ensures longer battery life.

Important: Always attach the comb BEFORE switching on the hair trimmer and ensure that the hair trimmer is switched off when changing the comb attachment.


Comb attachment

Hold the comb between your fingers with the teeth pointing upwards.

Place the comb above the blade, and slide it into the rear slot provided for this purpose, until the front of the comb is secured against the blade and you hear an audible “click” sound.

Use the setting wheel according to the desired cutting length to adjust the comb position by rotating the wheel.

Push the switch to "ON" to turn on the hair trimmer.

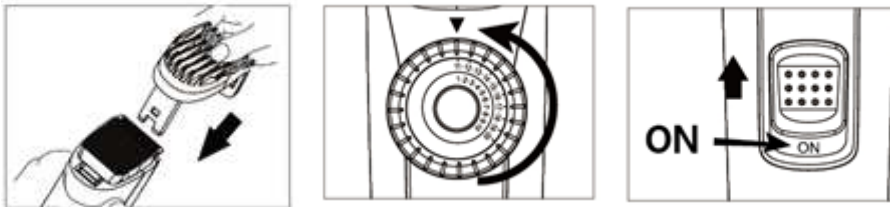

Removing the comb

Hold the hair trimmer in such a way that it is not directed towards you and push the comb firmly upwards.



Trimming without comb

Trimming your hair without an attachment allows to reach approx. 0.5 mm length.

Move the trimmer in a parallel position to the skin, against the direction of hair growth.

Before starting the hair cut

Check the hair clipper to make sure that it is free from hair and dirt.

Seat the person so that the head is approximately at your eye level.

Before cutting hair, always comb the hair so it is tangle free and dry.

Instructions for hair cutting

1. Comb the hair and start at the nape of the neck. Hold the trimmer with the comb teeth pointing upwards and slowly lift the clipper and work in upward strokes towards the center of the head.
2. To finish the haircut, use the trimmer without comb to give finishing touches by cutting very short around the base of the neck, nape, sideburns and ear sides (trimmer should be positioned vertically, do not press firmly).

The next procedure must be observed for removing the battery.

The hair clipper battery must be removed before discarding the equipment.

Ensure that your hair clipper is disconnected so as to reduce any risk of electrical shock. Discharge the battery fully.

Remove the protection cover situated in a location where you connect the mains voltage adapter and it is removed so as to access the battery compartment. Carry a screwdriver to remove the screw.

Remove the batteries from the equipment. Cut the cables and tab connecting the batteries in the printed circuit and remove them.

ATTENTION: THESE NI-MH CELLS MUST BE RECYCLED OR ELIMINATED IN ACCORDANCE WITH THE EQUIPMENT SCRAPPING.

Do not burn, dismantle, crush or break out the batteries because they can release toxic substances.

Do not expose them to extreme temperatures.

Drop them in the battery recycling bins designed for this purpose or return them to your retailer.



Correct Disposal of this product

(Waste Electrical & Electronic Equipment)

(Applicable in the European Union and other European countries with separate collection systems)

The European Directive 2012/19/EU on Waste Facilities Electrical and Electronic (WEEE)

This marking shown on the product or its literature, indicates that it should not be disposed with other household wastes at the end of its working life.

To prevent possible harm to the environment or human health from uncontrolled waste disposal, please separate this from other types of wastes and recycle it responsibly to promote the sustainable reuse of material resources.

Household users should contact either the retailer where they purchased this product or their local authority office, for details of where and how they can take this item for environmentally safe recycling.



LIVOO

BP 61071

67452 Mundolsheim - FRANCE

- Photo no contractual
- Worried about the quality of his products the manufacturer reserves the right to make modifications without advance notice