

LIVOO
Feel good moments
Instruction Manual

10W wireless charger alarm speaker



Reference : TES235
Version : 1.4
Language : English

WWW.LIVOO.FR



Instruction Manual

Thank you for buying our LIVOO product. We take great care in design, ergonomics and ease of use of our products. We hope that this product will give you complete satisfaction.

This instruction manual is also available on our website www.livoo.fr

GENERAL INSTRUCTIONS

PLEASE, TAKE TIME TO READ WELL THE INSTRUCTIONS FOR USE PARTICULARLY BEFORE THE FIRST USE.

A misuse of the appliance can damage it or hurt the user. Assure that you use the appliance for the use for which it is designed; we refuse any responsibilities as for the damages by an incorrect use or a bad manipulation.

- Before using the unit please read the manual carefully.
- Keep this product away from any water, liquid or wet areas.
- This product shall not be exposed to dripping or splashing and that no objects filled with liquids, such as vases, shall be placed on the apparatus.
- Use in dry locations only.
- Keep this product away from naked flames such as candles.
- This product should be only operated from the type of power source indicated on the marking label.
- Do not place the product in direct sunlight or heat. Keep away from temperatures over 40°C.
- Make sure the product has plenty of ventilation.
- Do not press the buttons too hard as it could damage the product.
- Do not use a wet cloth on the product. Always use a dry cloth to clean this product and keep it free from dust.
- Do not use chemicals on this product.
- Never try to repair this product yourself, take it to an approved technician. Trying to remove panels or repairing the unit yourself could lead to electric shock.
- When the unit is not in use, make sure it is correctly turned off and stored in a cool dry place.
- Do not insert foreign objects into the product.
- Adult Supervision is recommended with children using this product.
- Avoid dropping or standing on the product, as harsh impacts could damage the product.
- Ensure children and infants do not play with plastic bags or any packaging materials

Instruction Manual

Specifications

Bluetooth Version: V5.0

Speaker: 40mm (120 Hz-20KHZ)

Power out: 3Wx2 4Ω

SNR:90±5dB

Size: 120*120*33.5mm

Built-in battery: 2000mAh

Charging time: around 4.5 hours

Playing time: Up to 7 hours

Input DC5V 3A, DC9V 2A

Output DC5V 1A, DC9V 1.67A

Package contents :

1 x wireless charger alarm speaker

1 x Micro USB charging cable

1 x User Manual

Buttons

 Power Button

 Clock Button

 Volume +/Next song

 Volume -/Previous song

 Play/Pause Button

OPERATIONS

Charging the speaker

Before using, fully charge the battery by using the supplied USB cable. Plug in to any USB port supplying power (Laptop, Computer, AC Charger, Car Charger, etc.).

The LED light in the USB port is red when charging. The light will turn off when the battery is fully charged.

Power on/off

Long press the power on button  to power on /off the device. A voice prompts "Power ON" and "Power OFF". The display turns on/off.

Bluetooth® Pairing

With the Speaker turned on, the voice prompts "Pairing".

Open the Bluetooth® settings of your phone, tablet or other Bluetooth enabled audio device and select "TES235". If a password is requested, enter "0000".

After the pairing is successful, the voice prompt "Paired".

Instruction Manual

Speaker will automatically be paired if the mobile device has been paired before.

Press and hold  button for 2 seconds can disconnect the connected Bluetooth® device. Press and hold  to power off.

Playing Music

Select a song, artist, genre, or playlist on your phone, tablet or other Bluetooth enabled audio device.

Press  to start or pause the music.

Press and hold the + or - button to adjust the volume.

Short press the + or - button to go to next or last songs.

Hands-free for calling

Answer or hang up a call by pressing  Button.

Reject a call by pressing and holding  Button.

Double press  Button to call back the last number.

Wireless charging function

Connect to DC5V 3A or DC9V 2A power supply by provided Micro-USB Charging cable (2A date cable), the red LED light in the USB port will be on.

Put your mobile phone which supports wireless charging on the top of the center charging area.

It starts to be charged and will show battery status on your phone during charging.

Remark: If your mobile phone supports 10W wireless charger, the speaker will Auto charge base on 10W. If your mobile phone supports only 5W wireless charger, the speaker will Auto charge base on 5W.

Alarm clock function

Edit clock time

HOUR EDIT: Double-press Clock button to enter editor interface. Press “+” or “-” to Adjust hour.

MINUTE EDIT: After hour edit, short-press Clock button to switch to minute edit. Press “+” or “-” to Adjust minute. Short-press Clock button to confirm and exit edit mode. No operation for 5 seconds will automatically confirm and exit.

Alarm clock setting

Alarm Clock 1:

Press and hold Clock button for 2 seconds to enter alarm setting interface.

After the display showed “ALA1”, short-press “+” or “-” to switch on/off the 1st alarm.

Press the clock button then press “+” or “-” to adjust hour, short-press the clock button again to switch to minute.

Press “+” or “-” to adjust minute.

No operation 5 seconds will automatically confirm and exit.

Alarm Clock 2:

After alarm1 setting confirmed, short-press Clock button to switch to alarm 2 “ALA2” setting.

Instruction Manual

The operation method is the same as alarm1.

Alarm clock rings

When the time runs to the alarm clock setting time, the alarm bell rings for 30 minutes.

Short-press the “clock” button to stop the alarm;

Snooze mode: Short-press “Power” button, the alarm will ring again in 9 minutes later. Please short-press the clock button if want stop that alarm.

EU DECLARATION OF CONFORMITY

We
DELTA
BP61071
67452 Mundolsheim – France

Herewith declare under our sole responsibility, that the radio equipment

10W wireless charger alarm speaker
TES235 (Frequency range 120Hz - 20kHz)

Fulfils the essential requirements of the Directive 2014/53/UE

The following standards were applied:

Radio:
EN 303 417 V1.1.1 (2017-09)
EN 300 328 V2.1.1 (2016-11)

EMC:
Draft ETSI EN 301 489-1 V2.2.0 (2017 03)
Final draft ETSI EN 301 489-3 V2.1.1 (2017 03)
Draft ETSI EN 301 489-17 V3.2.0 (2017 03)
EN 55032: 2015
EN 55035: 2017
EN 61000-3-2: 2014
EN 61000-3-3: 2013

Health and Safety:
EN 62479:2010
EN 609501:2006+A11:2009+A1:2010+A12:2011+A2:2013

Mundolsheim, 16/12/2019

Instruction Manual



Correct disposal of the unit (Electrical and Electronic Equipment)

(Applicable in the European Union and the rest of Europe that have adopted separate collection systems countries)

The European Directive 2012/19/EU on Waste Electrical and Electronic Equipment (WEEE), requires that old household electrical appliances must not be disposed of in the normal household waste stream.

Old appliances must be collected separately in order to optimize the recovery and recycling of the materials they contain and reduce the impact on human health and the environment. The symbol of the crossed out dustbin is marked on all products to remind the obligations of separate collection. Consumers should contact their local authority or retailer for information concerning the correct disposal of their product.



Pour en savoir plus :

www.quefairedemesdechets.fr

LIVOO

BP 61071

67452 Mundolsheim

- Non contractual illustration.
- Product information is subject to change without prior notice.