

LIVOO
Feel good moments
Instruction manual

Portable gas stove



Reference : DOC178
Version : 1.4 rev.01
Language : English

Instruction manual

You have purchased a product LIVOO brand and we thank you. We take great care in design, ergonomics and ease of use of our products. We hope that this product will give you complete satisfaction.

This instruction manual is available too on our website www.livoo.fr

SAFETY ADVICES

IMPORTANT: READ THIS OPERATING INSTRUCTIONS CAREFULLY TO FAMILIARIZE YOUR APPLIANCE BEFORE ASSEMBLY TO ITS GAS CONTAINER. SAVE THIS MANUAL TO READ IT LATER.

USE OUTDOORS ONLY.

DO NOT MOVE THE APPLIANCE DURING COOKING.

THIS APPLIANCE MUST BE USED ONLY WITH MSF-1A OR MSF-1 (CRV) CARTRIDGES, DIRECT BUTANE PRESSURE. IT MAY BE DANGEROUS TO TRY TO USE OTHER TYPES OF GAS CONTAINERS.

IMPORTANT:

Read the following instruction carefully and be sure your barbecue is properly installed, assembled and cared for. Failure to follow these instructions may result in serious bodily injury and/or property damage.

Never use the appliance with the lid closed.

1. The appliance is safe and easy to use. Please ensure you to respect safety advise.
2. Never use the appliance in any enclosed covered area.
3. When the wind speed is above 2m/s, don't use appliance facing to the wind.
4. The appliance is designed for use outdoors only.
5. Warning! Accessible parts may be very hot. Keep young children away from the appliance.
6. Do not move the appliance while in use.
7. Any modification to the appliance may be dangerous and may cause injury or property damage.
8. The parts sealed by the manufacturer or his agent shall not be manipulated by the user.
9. Any unauthorised modification of the appliance will invalidate the guarantee on this appliance.
10. Do not modify the appliance
11. Use protective gloves when handling particularly hot components.
12. The appliance is equipped with a safety which stops the flow of gas if the pressure in the cartridge, e.g because of overheating becomes too high.

Instruction manual

13. The cartridge cannot be installed when the control knob is not in the OFF position or the appliance is in the transport position.
14. Make sure the contact points between the cartridge and the unit are present and in good condition before attaching the gas cartridge.
15. Never use a device with damaged or worn seals.
16. Do not use a leaking or malfunctioning appliance.
17. The gas cartridge must be changed in a well ventilated place, preferably outside, away from any source of ignition such as open flames, pilot lights, hotplates and away from other people.
18. If your appliance leaks (smell of gas), immediately put it outside, in a well ventilated place, without ignition source, where the leak can be sought and stopped. If you want to check the tightness of your device, do it outside. Do not search for leaks with a flame, use soapy water
19. Particular attention will be given to the appropriate requirements for ventilation
20. Always place the appliance in a stable, horizontal and heat-resistant position
21. The appliance should be operated away from flammable materials (petroleum-based products, thinners, or any other solid or liquid with a "flammable" symbol).
22. The appliance must be used at a minimum distance of 20 cm from a wall or other object and at least 1 meter from a ceiling
23. The use of this appliance in enclosed areas can be dangerous and is **PROHIBITED**.
24. Your gas stove should never be used by children. Accessible parts of the appliance may be very hot. Keep young children away while it is in use.
25. It is absolutely necessary to keep this appliance clean at all times as it comes into direct contact with food.
26. Regarding the instruction for cleaning surfaces in contact with food thanks to refer to the below paragraph "cleaning" in manual.
27. If the unit is not used for a long time, keep it in a cool place, away from moisture and dust.

TECHNICAL INFORMATION

Instruction manual

Max power	2,2kW (160g/h)	Pin: 0359CT03975  0359-18
Gaz category :	BUTANE DIRECT PRESSURE	
gaz type:	Butane (160 g/h)	
Outlet pressure of the valve	8.63Kpa	
gaz pressure:	5.5 bar - 7.0 bar	
Size of the injector:	0.60 mm	
Certificate	(EU) 2016/426	
ATTENTION: accessible parts can be very hot.		
DO NOT USE A CASSEROLE OF DIAMETER LESS THAN 12 CM OR MORE THAN 26 CM THAT COVERS THE COMPARTMENT OF THE GAS CARTRIDGE. THIS MAY CAUSE OVERHEATING OF THE GAS CARTRIDGE. DANGER: STRICTLY FORBIDDEN TO USE A COOKTOP IF ONE OF ITS SIDE IS UPPER To 80 MM, IT WOULD CAUSE A BIG RISK OF EXPLOSION OF THE CARTRIDGE OF GAS CAUSED BY ITS OVERHEATING		
Country of destination : all EU countries		

Warning:

- This appliance can only be used with MSF-1A ou MSF-1 (CRV), Butane direct pressure.
- Check the seals before connecting a new gas cartridge to the appliance.
- Use in a combustion air supplied enough area.
- Use only outdoor to avoid the dangerous building up of un-burnt gases for appliances which is not fitted with a flame supervision device
- Do not move the appliance during use.
- Never place two appliance close to each other.
- Do not obstruct the ventilation openings of the cartridge compartment.
- Keep the appliance away from inflammable materials.
- Do not use any pans that cover the cartridge compartment.
- If there is a leak in the appliance (smell of gas), immediately turn the control knob into the "OFF" position.
- If you wish to check for leaks on the appliance, do it outside and never try to detect the leak with a flame, but always use soapy water!
- In the event of any problems, please contact the dealer.

DESCRIPTION

Instruction manual

1. Body
2. Cartridge compartment cover
3. Pan support
4. Drip pan
5. Burner
6. Cartridge lever
7. Knob control

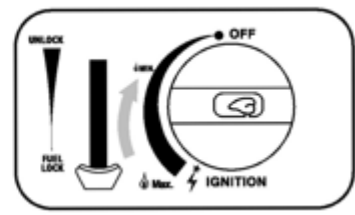
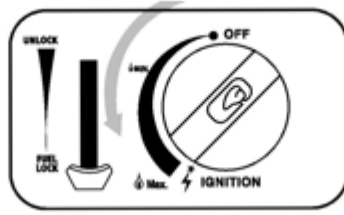
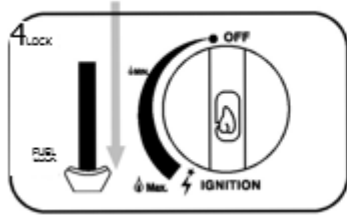
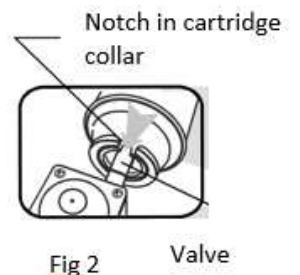


Fig 3

Fig 4

Fig 5

INSTRUCTIONS FOR USE

ASSEMBLY OF THE COOKING SUPPORT

Turn the cooking support (3) to its position of use



Instruction manual

1. Put the control knob (7) in the OFF position and set the cartridge lock lever (6) to the UNLOCK position.
2. Open the cartridge cover (2) and insert the cartridge, with the head to the front with the notch points upwards and aligns in the valve guide (fig.2).
3. Press the cartridge lever (6) down (fig.3).
4. If you hear noise, the cartridge has not been correctly fitted. Do not attempt to ignite the appliance but move lever (6) to the "Unlock" position and repeat steps (1-4)
5. Turn the control knob (8) fully to the ignition position until it clicks (fig.4)
Hold the knob in this position for few seconds prime the flame guard thermocouple.
6. Adjust the control knob to the required position. (fig.5)
Never set the cartridge lever (6) to the "UNLOCK" position during use!
7. After use turn the control knob (8) on "OFF"-position.
8. Check if burner is extinguished before setting the cartridge lever (6) to the "UNLOCK" position.
9. When the appliance has cooled completely, remove the cartridge.
10. Fit red protective cap and always store the gas cartridge in a cool, dry, well ventilated place.

CLEANING AND CARE

When the appliance has cooled completely it should be cleaned of any residues of food or fat after each use.

Turn the drip pan / pan support (3) over into its storage position and store the appliance in a dry place.

If the event of any problem, please contact the importer:

1 rue Foch BP 61071 67450 Mundolsheim Cedex France

PIN: 0359CT03256

CE0359/18

Instruction manual



**Correct disposal of the unit
(Electrical and Electronic Equipment)**

(Applicable in the European Union and the rest of Europe that have adopted separate collection systems countries)

The European Directive 2012/19/EU on Waste Electrical and Electronic Equipment (WEEE), requires that old household electrical appliances must not be disposed of in the normal household waste stream.

Old appliances must be collected separately in order to optimize the recovery and recycling of the materials they contain and reduce the impact on human health and the environment.

The symbol of the crossed out dustbin is marked on all products to remind the obligations of separate collection.

Consumers should contact their local authority or retailer for information concerning the correct disposal of their product.



Pour en savoir plus :
www.quefairedemesdechets.fr

LIVOO

BP 61071

67452 Mundolsheim - FRANCE

- Photo no contractual
- Worried about the quality of his products the manufacturer reserves the right to make modifications without advance notice