

Rechargeable epilator



Reference: DOS167
Version: 1.4
Language: English

Thank you to have purchased a product brand LIVOO. We take great care in design, ergonomics and simple use of our products. We hope that this product will give you complete satisfaction.

This user manual is also available on www.livoo.fr

General Instructions

PLEASE, TAKE TIME TO READ WELL THE INSTRUCTIONS FOR USE
PARTICULARLY BEFORE THE FIRST USE.

A misuse of the appliance can damage it or hurt the user. Assure that you use the appliance for the use for which it is designed; we refuse any responsibilities as for the damages by an incorrect use or a bad manipulation.

1. The appliance is only intended for the purpose described in these operating instructions. The manufacturer cannot be held liable for damage occurring as a result of inappropriate or careless use.
2. This appliance is intended for household use only, not for commercial applications.
3. This appliance can be used by children aged from 8 years and above and by persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
4. Children shall not play with the appliance.
5. Cleaning and user maintenance shall not be made by children without supervision.



6. Do not use this appliance nearby water!

WARNING : Do not use this appliance near bathtubs, showers, basins or other vessels containing water.

7. Not immerse the appliance.



8. The appliance is not suitable for cleaning under an open water tap.

9. **WARNING** : Keep the appliance dry.

10. The appliance is only to be used with the unit provided.

11. **WARNING**: For the purposes of recharging the battery, only use the detachable supply unit provided with this appliance reference “LW-030100EU”.

12. This appliance contains batteries that are non-replaceable.

WARNING

13. Keep children away from the packaging materials.

Risk of suffocation.

CAUTION

14. This appliance must only be supplied at safety extra low voltage corresponding to the marking on the appliance.

15. Do not stretch, twist or kink the power cord.

16. Do not position the power cord on or pull it over sharp or pointed objects.

17. Plug the power cable into a correctly installed mains outlet.

18. Do not open the case under any circumstances.

19. Switch the appliance off and unplug it from the power supply after each use and before cleaning.

WARNING: Electric shock

20. As with every electrical appliance, use this appliance carefully and cautiously, in order to avoid hazards due to electric shock.

For this reason, the appliance must only be operated as follows:

With the mains voltage specified on the appliance only

21. Switch the appliance off immediately if it is defective or not working properly and disconnect it from the power supply. Do not pull the power cord or the appliance to disconnect the power supply unit from the socket. Never hold or carry the appliance by the power cord.

22. Keep the cables away from hot surfaces

23. Ensure that the charger, the plug and the cable do not come into contact with water or other liquids. Therefore, use the charger in the following conditions:

- Only inside and in dry rooms
- Only with dry hands
- Never in the bath, in the shower or near a filled basin
- Never in swimming pools, whirlpools or in the sauna
- Never outside

24. Never reach for a charger that has been submerged in water. Disconnect it from the mains immediately.

WARNING: Fire hazard

25. There is a risk of fire if the appliance is used incorrectly or if it is not used according to these operating instructions.

- Never leave the appliance unsupervised, particularly if children are around.
 - Never use the appliance under covers, such as blankets or pillows.
 - Never use the appliance in the vicinity of petrol or other easily flammable materials
26. If the adaptor supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard (*)
27. This appliance is intended for household use and similar applications such as:
- staff kitchen areas in shops, offices and other working environments
 - farm houses
 - by clients in hotels, motels and other residential type environments
 - bed and breakfast type environments

(*)Competent qualified electrician: after sales department of the producer or importer or any person who is qualified, approved and competent to perform this kind of repairs in order to avoid all danger. In any case you should return the appliance to this electrician.

TECHNICAL INFORMATION

Rechargeable epilator: 3V --- , 1.0A. Battery: 2 x DC1.2V

Adapter: Input: 100-240V~ 50-60Hz 0.2A Max. Output: 3.0V --- 1.0A 3.0W

Information published	Value and precision	Unit
DELTA BP61071 67452 Mundolsheim – France	-	-
Model identifier	DOS167P	-
Input voltage	100-240	V

LIVOO

Feel good moments

User manual

Input AC frequency	50-60	Hz
Output voltage	3.0	V
Output current	1.0	A
Output power	3.0	W
Average active efficiency	71.59	%
Efficiency at low load (10 %)	N/A	N/A
No-load power consumption	0.052	W

CARE AND CLEANING


Clean the epilating head after each use.

- Use the included brush to clean the epilating discs.

Note: do not turn the unit on while using brush.

- Never immerse the appliance in water.
- Do not use scouring agents, aggressive cleaners to clean the housing.
- Never try to remove epilating discs from the head.

DESCRIPTION

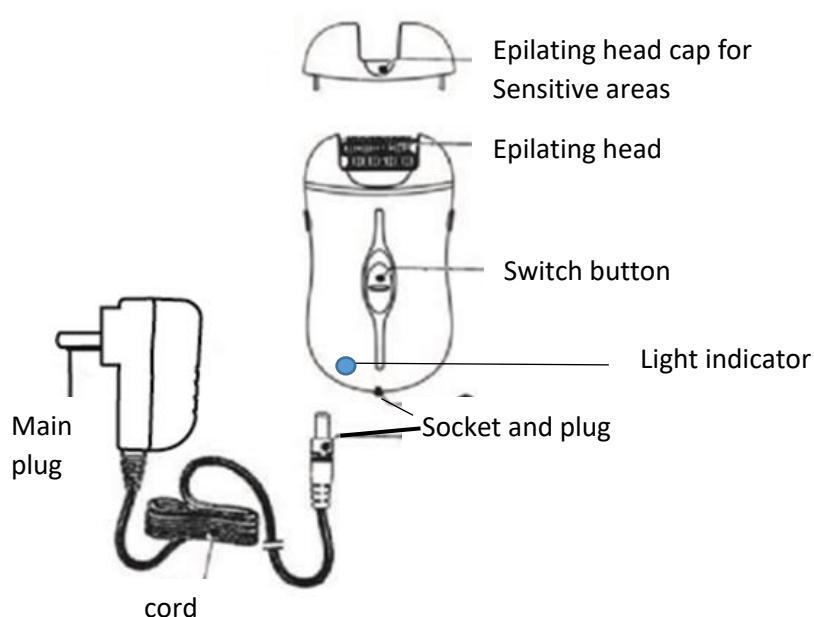

LIVOO

Feel good moments

User manual

Before use:

Make sure your skin is clean, dry and free of grease.


Epilating is better after a bath or shower.

When you use the epilator for the first time. We advise you to try it on a zone of growth of hairs to familiarize you in the process of removal of hair.

As hairs are removed from the root, the removal of hair can cause discomfort of the skin the first time as you use the hair remover. The more you will use the epilator, the more this embarrassment will disappear.

USE


1. Insert the appliance plug into the appliance socket (1) and then the main plug into wall socket (2) but you can use it without power cord by charging it before use (check below paragraph "charging").

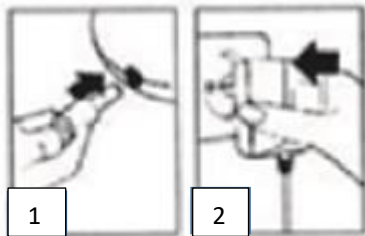

2. You have two sort of epilating head, one for sensitive zone (as armpits) and another one for normal zone (as legs).

You can change the head by pressing the both sides button (3) and remove the head you don't want to use (4).

Remove the head cap by pulling up the two sides clips, put the cap on the head you want to use by pushing it down (until you hear a "clip"). Then you can install the head by pushing downward (5) on the appliance.

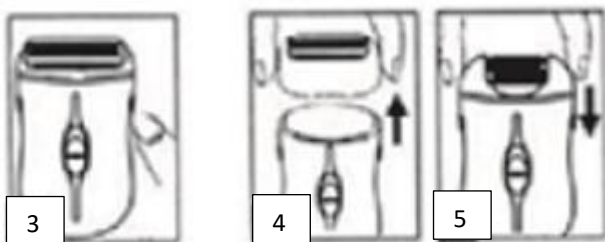


3. Stretch your skin, place the epilator perpendicularly onto the skin.
4. Slide the button to the one or second speed (6) :
 - First speed is for areas with little hair growth and where there are bones such as knees.
 - Second speed is for areas with stronger hair growth
5. Move the epilator slowly over the skin against the direction of hair growth (7).
6. Switch off after use by sliding the button (8).

LIVOO

Feel good moments

User manual

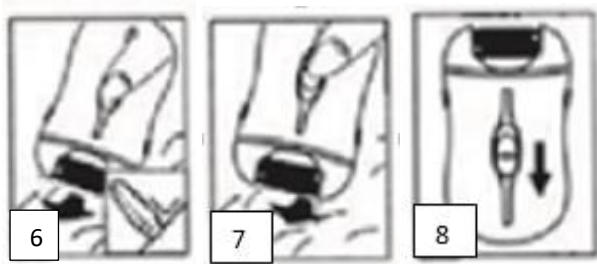

7. After you can apply a cream or lotion to reduce possible skin irritation.
8. After use and cleaning, you can store your appliance and its accessories in the storage pouch.

Charging:

Turn off the switch and connect the main plug (transformer) with the appliance, then connect the main plug to the wall socket (the light indicator will illuminate) for 8 hours to charge the epilator completely, It can be charged when fully released only.

Advises:

- Using an epilator may cause reddening or irritation of the skin. This is a normal reaction that quickly disappear. However, you should consult your doctor if the irritation has not disappeared within three days.
- Do not use the epilating head on face, irritated skin or skin with varicose veins, rashes, spots, moles (with hairs) or wounds without consulting your doctor first. People with a reduced immune response, e.g. during pregnancy, or people who suffer from diabetes mellitus, hemophilia or immunodeficiency should also consult their doctor first.
- In case of use on the zone bikini, this appliance is to be only used for the external outline. Do not use on the most intimate zones (pubic lips).
- For reasons of hygiene, we recommend you not to lend your appliance in your close environment.

Procedure to observe for battery's end of life

The appliance batteries must be removed before discarding the equipment. Please follow the procedure below:

Ensure that your appliance is disconnected so as to reduce any risk of electrical shock. Discharge the batteries fully.

Remove the protection cover situated in a location where you connect the mains voltage adapter and it is removed so as to access the batteries compartment. Carry a screwdriver to remove the screw.

Remove the batteries from the equipment. Cut the cables and tab connecting the batteries in the printed circuit and remove them.

ATTENTION: THESE NI-MH CELLS MUST BE RECYCLED OR ELIMINATED IN ACCORDANCE WITH THE EQUIPMENT SCRAPPING.

Do not burn, dismantle, crush or break out the batteries because they can release toxic substances.

Do not expose them to extreme temperatures.

Drop them in the batteries recycling bins designed for this purpose or return them to your retailer.

LIVOO

Feel good moments

User manual



Correct Disposal of this product
(Waste Electrical & Electronic Equipment)
(Applicable in the European Union and other European countries with separate collection systems)



The European Directive 2012/19/EU on Waste Facilities Electrical and Electronic (WEEE)

This marking shown on the product or its literature, indicates that it should not be disposed with other household wastes at the end of its working life.

To prevent possible harm to the environment or human health from uncontrolled waste disposal, please separate this from other types of wastes and recycle it responsibly to promote the sustainable reuse of material resources.

Household users should contact either the retailer where they purchased this product or their local authority office, for details of where and how they can take this item for environmentally safe recycling.



Pour en savoir plus :
www.quefairedemesdechets.fr

LIVOO
BP 61071
67452 Mundolsheim - FRANCE

- Photo no contractual.
- Worried about the quality of his products the manufacturer reserves the right to make modifications without advance notice.