

LIVOO
Feel good moments
Instructions for use

Electronic Bathroom Scale



Référence : DOM427
Version : 1.5
Langue : English

WWW.LIVOO.FR



Instructions for use

You have purchased a product LIVOO brand and we thank you. We take great care in design, ergonomics and ease of use of our products. We hope that this product will give you complete satisfaction.

This instruction manual is also available on our website www.livoo.fr

READ ALL THESE INSTRUCTIONS CAREFULLY BEFORE USING THE APPLIANCE AND SAVE THEM FOR FUTURE USE.

SAFETY INSTRUCTIONS

PLEASE TAKE THE TIME TO READ THE OPERATING INSTRUCTIONS CAREFULLY BEFORE USING THE PRODUCT FOR THE FIRST TIME. Improper use of the device can damage it or injure the user. Make sure that you use the device for the purpose for which it was designed; we accept no liability for damage (compensation) due to incorrect use or mishandling.

1. This appliance is intended for domestic use only. Any other use (medical, professional, commercial, etc.) is excluded.
2. Children should be supervised to ensure that they do not play with the appliance.
3. Keep this appliance indoors and in a dry place.
4. Do not immerse the unit in water or any other liquid.
5. Do not store any objects on the scale.
6. To avoid risk of injury, do not stand on the edges of the scale.
7. To prevent slipping, make sure that your feet and the scale are dry and free of dust before getting on the scale.
8. Do not disassemble the scale.
9. Avoid strong vibrations or shocks, such as dropping the scale on the floor.

Instructions for use

10. Always place your scale on a hard, level surface. Avoid carpets and rugs.
11. Do not use the scale on a slippery surface or on a wet floor.
12. Keep the scale away from heat sources (radiators, etc.) to avoid deformation of plastic parts.
13. Do not store the scale in an upright position.
14. Use only the type of battery specified in this manual.
15. Replace the batteries when they are worn out or leak.
16. Remove the batteries if the appliance is not used for a long period of time.
17. Do not disassemble the scale as improper handling may result in injury to persons or damage to the scale.

Key features

- High-precision strain gauge sensor system that guarantees the most accurate results
- Tempered glass platform
- Capacity: 5kg-180kg / Age : 10 – 99 years old / Size : 100 – 240 cm
- Division: 0.1kg
- LCD screen
- Automatic power on and off
- Low battery and overload indicator
- Switch with three different units: kg/lb/st
- 1 CR2032 lithium battery.
- CR2032 in the compartment (observing polarity), then close the compartment cover.

To change the batteries, open the cover at the back, place 1 lithium battery (CR2032) in the battery compartment and insert the battery cover.

Disclaimer / Warning :

1. To ensure accuracy, we suggest you take measurement at a fixed time every day, before breakfast (e.g. 6:00am-8:00am)
2. Please change a new battery when “LO” appears on the LCD which indicates that the battery is out of power.
3. “Err” showed on LCD indicates overload.


Attention

1. Please take off shoes before taking measurement to avoid scraping or scratching the glass platform.

Instructions for use

2. The glass platform may be pretty slippery when wet, thus please make sure both the glass and your feet are dry before using.
3. Please use soft tissue with alcohol or glass cleaner to clean the surface if it is dirty. No soap or other chemicals. Keep it away from water, heat and extreme coldness.
4. The scale is high precision measuring device. Never jump or stomp on the scale or disassemble it. Be careful not to drop or jar the scale.
5. The scale is for family use only and not suitable for professionals.
6. Please check the battery if the scale malfunctions. Replace the battery when necessary. For other problems, please contact the local dealer or our company directly by phone or e-mail.

Overview

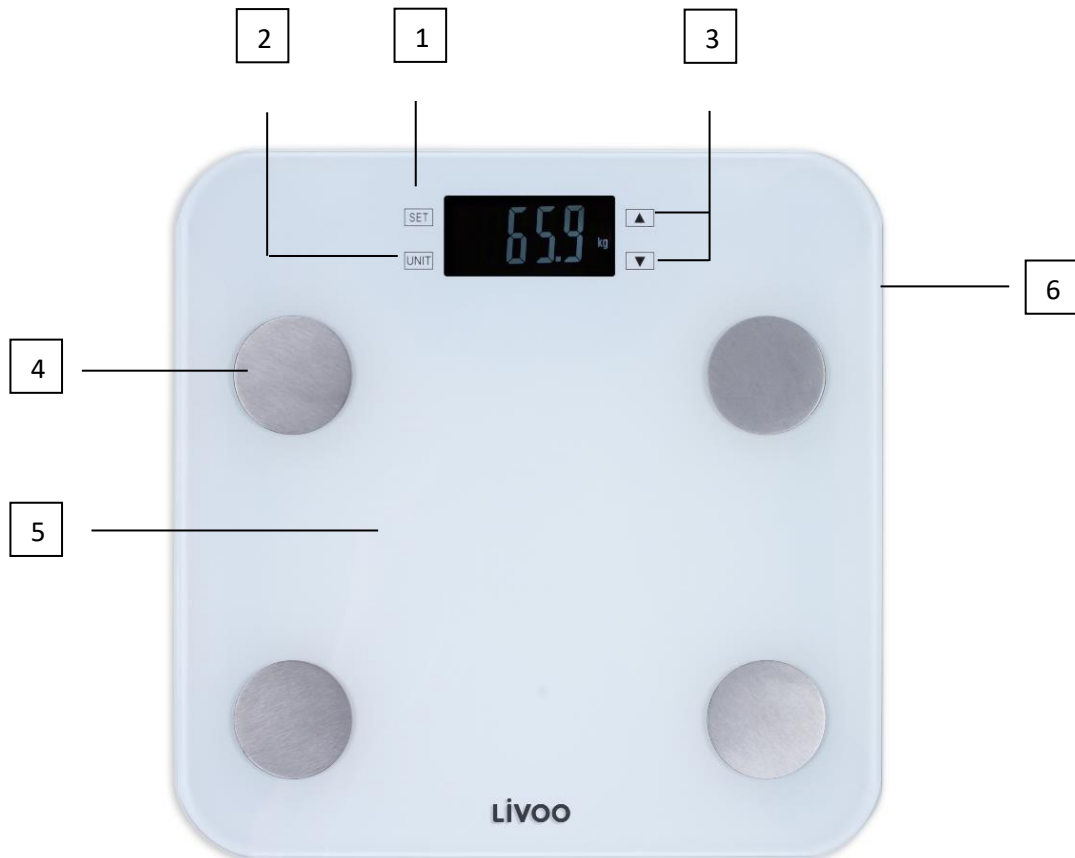

- 1 : SET key: to access the parameters, save data and access the saved data.
- 2 : UNIT key: to change the unit of measurement
- 3 : "▲" or "▼" keys: to select the memory, reduce and increase the displayed data
- 4 : Sensors
- 5 : Weighing surface
- 6 : Battery compartment at the back of the scale.

Instructions for use Indicators

Different indicators:

- Weight
- Body Fat in %.
- Moisture content in %.
- Muscle mass in %.
- Bone mass in %.
- Energy requirement in calories (kcal)
- BMI (Body Mass Index)

The scale has a total of 13 profiles in memory.

USING YOUR APPLIANCE

Remove the battery from the package and turn the scale over, open the cover, install the battery in the compartment and replace the cover (make sure the positive battery terminal is facing up).

Place the scale on a flat, stable surface. A clean and dry floor is ideal. Do not place the scale on a carpet. When you step on the scale and the display shows "0.0", press "UNIT" to select the unit (kg, st, lb).

Measurements are made using the load cells installed on the weighing surface:

- The electricity sent by the sensors circulates freely through the liquid surrounding your muscles, which is how the muscle mass is calculated.

- In the case of greasy mass, electricity offers a stronger resistance. This resistance is measured.

Setting and storing personal data in memory

Stand briefly on the scale to apply slight pressure. Once the display shows "0.0" and the unit of measure is set to "kg" or "lb" as desired, the setting can begin.

If you wish to weigh without a body scan, you do not need to enter your personal data.

1. Settings personal informations

1.1 Press the "set" button. Use the arrows on the side of the display "▲" or "▼" to select your personal profile between P01-P13. Once you have chosen your profile number, press the "SET" button to confirm.

1.2 Press "▲" or "▼" to select Male  or Female  and press "SET" to confirm.

1.3 The age preset is displayed: 20. Press "▲" or "▼" to choose your age (10-99), press "SET" to confirm.

1.4 The size preset is displayed: 165. Press "▲" or "▼" to choose your size (100-240), press "SET" to confirm.

Instructions for use

1.5 When the settings are complete, the selected information scrolls quickly on the display.

1.6 To start measuring, wait until the display shows "0.0" again.

2. Take the weight hydration and body fat percentage.

The analysis will only be able to work once your personal data has been saved (previous chapter).

2.1 Briefly climb onto the scale to apply slight pressure. Once the display shows "0.0", press "SET" and use the "▲" or "▼" keys to select your profile.

2.2 The data will be displayed briefly and then "0.0" will be displayed.

2.3 Stand barefoot on the unit while maintaining contact with the electrodes. There should be no contact between your feet, to avoid an erroneous measurement. Stand still but do not hold yourself.

2.4 Even after the weight is displayed continue to stand still.

Symboles / Indications	Signification
kg / lb / st:lb	Weight in the defined unit of mass
FAT	Body fat percentage
TBW	Moisture content of your body in %.
	Muscle mass in %.
	Bone mass in %.
KCAL	Basal calorie metabolism
BMI	Body Mass Index
Underfat	Low body fat
Healthy	Normal
Overfat	Light body fat
Obese	Obese

"Lo" on the display indicates that the battery is low. You must replace the battery. The data you have stored will not be erased.



The "Err" message indicates an overload, or an error in measuring the percentage of fat. Do not leave the scale during measurement.

If the body fat percentage is less than 5%, the display shows "Er".

Instructions for use

Disposal of batteries and accumulators (Applicable in the European Union countries and in the other European countries having systems of selective collection)



This symbol, affixed on batteries and accumulators or on packaging, indicates that batteries and accumulators supplied with this product must not be treated as simple household waste.

By assuring you that these batteries and accumulators are discarded in a appropriate way, you participate actively in the prevention of the negative consequences which their ill-treatment could cause on the environment and on the human health. The recycling of materials contributes besides to the conservation of natural resources.

For the products, which, for safety reasons, of performance or integrity of data require a permanent connection in a battery or in an accumulator, it will be advisable to move closer you to check with technical service qualified to make its replacement.

By bringing back your electric device at the end of life to an appropriate point of collection you make sure that the battery or the incorporated accumulator will be correctly treated.

For all other scenarios and to remove battery or accumulators in complete safety of your appliance, refer to the user manual.

Bring back batteries or worn accumulators to the point of collection suited for the recycling.

For any further information about the recycling of this product or batteries and accumulators, you can contact your municipality, your local waste reception center or the point of sale where you bought this product.



Disposal of this product (Waste Electrical & Electronic Equipment) (Applicable in the European Union and other European countries with separate collection systems)

The European Directive 2012/19/EU on Waste Facilities Electrical and Electronic (WEEE)

This marking shown on the product or its literature, indicates that it should not be disposed with other household wastes at the end of its working life.

To prevent possible harm to the environment or human health from uncontrolled waste disposal, please separate this from other types of wastes and recycle it responsibly to promote the sustainable reuse of material resources.

Household users should contact either the retailer where they purchased this product or their local authority office, for details of where and how they can take this item for environmentally safe recycling.



LIVOO
BP 61071
67452 Mundolsheim - FRANCE

- Non contractual illustration
- Product information is subject to change without prior notice