

UV sterilizer



Reference: TEA256
Version: 1.4
Language: English

Thank you for buying our LIVOO product. We take great care in design, ergonomics and ease of use of our products. We hope that this product will give you complete satisfaction.

This instruction manual is also available on our website www.livoo.fr

IMPORTANT SAFETY INSTRUCTIONS

READ CAREFULLY ALL THESE INSTRUCTIONS BEFORE USING THE DEVICE AND PRESERVE THEM FOR ANY LATER NEED.

1. Please follow the rules depicted in this manual closely to ensure your safety.
2. Be more wary of any edges, uneven surfaces, metal parts, accessories and its packaging so as to prevent any possible injury or damage.
3. Keep this appliance out of reach of children. Take note that this appliance is not edible and should not be placed in your mouth.
4. Do not modify, repair or dismantle the appliance. Doing so may result in fires, electric shocks, complete breakdown of the appliance, etc. All of which, are not covered under warranty.
5. Do not use any diluents or volatile liquid to clean the appliance. Keep in mind that the surface of the appliance should only be wiped with a clean dry cloth.
6. Do not use this appliance in locations whereby there are high-temperatures or high humidity levels; ideally, the appliance should be used in locations free of dust and exposure to direct sunlight.
7. Do not insert foreign objects, such as pins, into this appliance.
8. Do not touch this appliance when your hands are wet as this may result in electric shocks.
9. Refrain from dropping the appliance as well any collision with other objects.
10. Should any abnormal situations or problems occur while using this appliance, discontinue use of the appliance immediately.
11. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard (*).
12. Do not stare at the ultraviolet lamps for long time.
13. Do not open the appliance during use.

(*) qualified competent Person: technician of the after-sales service of the builder (manufacturer) or the importer or every qualified, authorized and competent person to make this type (chap) of repair.

LIVOO
Feel good moments
User manual



CAUTION
ULTRAVIOLET C RADIATION
DO NOT LOOK AT THE DEVICE DIRECTLY
WHILE IT IS OPERATING.
EVEN BRIEF EXPOSURE TO UV RAYS CAN
DAMAGE THE EYES.

Specifications:

Rated Input: DC 5V/1A

USB Output: DC 5V/1A

UV-C wavelength: 254nm

Working Temperature: 0-55°C

360° Sterilization

Max. power: 5W

UV-C light power: 2W x 2

Maximum sterilizing space: 154 x 84 x 16mm

Package contents included:

UV Sterilizer

USB charging cable

USE

This easy to carry UV sterilizer is equipped with 2 large ultraviolet lamps, which allow disinfection.

The UV sterilizer size is adapted to most of the small common use objects, such as cell phones, iPod, MP4, Bluetooth® headsets, small gadgets, socks, watches, small toothbrushes, jewelries, etc.


(Mobile devices max. size : 5.8").

Instructions

1. Connect the UV sterilizer onto power supply (wall socket, PC or laptop) by using the USB charging cable.
2. Put the chosen object for disinfection into the box. Close the lid.
3. Turn on the UV sterilizer by pushing the on/off button.
The UV lamps and indicator light on during sterilization.
4. The sterilization takes 15 minutes. After sterilization is done, the UV sterilizer turns off automatically.

After use, unplug your UV sterilizer.

USB output for charging mobile device.

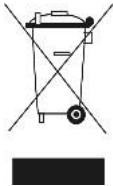

**Correct disposal of the unit
(Electrical and Electronic Equipment)**

(Applicable in the European Union and the rest of Europe that have adopted separate collection systems countries)

The European Directive 2012/19/EU on Waste Electrical and Electronic Equipment (WEEE), requires that old household electrical appliances must not be disposed of in the normal household waste stream. Old appliances must be collected separately in order to optimize the recovery and recycling of the materials they contain and reduce the impact on human health and the environment. The symbol of the crossed out dustbin is marked on all products to remind the obligations of separate collection. Consumers should contact their local authority or retailer for information concerning the correct disposal of their product.



Pour en savoir plus :
www.quefairedemesdechets.fr

LIVOO

BP 61071

67452 Mundolsheim

- Non contractual illustration
- Product information is subject to change without prior notice