

Bluetooth® compatible headset with microphone



Reference : TEC614
Version : 1.4
Language : English

LIVOO

Feel good moments

User manual

Thank you for buying our LIVOO product. We take great care in design, ergonomics and ease of use of our products. We hope that this product will give you complete satisfaction.

This manual is also available on www.livoo.fr

GENERAL INSTRUCTIONS

PLEASE TAKE TIME TO READ WELL THE INSTRUCTIONS FOR USE PARTICULARLY BEFORE THE FIRST USE.

A misuse of the appliance can damage it or hurt the user. Assure that you use the appliance for the use for which it is designed; we refuse any responsibilities as for the damages by an incorrect use or a bad manipulation.

- Before using the appliance for the first time, please read carefully these instructions and save it for any further need.
- Keep this product away from water, liquids or humid areas.
- Keep this product away from naked flames such as candles.
- The unit comes with a rechargeable battery so please do not throw it into fire to avoid explosion.
- The product should only be supplied by the power source indicated on the label.
- Do not place the product in direct sunlight or heat. Keep away from temperatures over 40°C.
- Do not press the buttons too hard as it could damage the product.
- Do not use a wet cloth on the product. In order to clean it, always use a dry cloth. Keep it free from dust.
- Do not use chemicals on this product.
- Never attempt to repair this product yourself. Any operation that requires opening the product should be left to a qualified technician.
- When the product is not in use, make sure it is shut off and stored in a cool and dry place.
- Do not insert any foreign object into the product.
- Adult Supervision is recommended with children using this product.
- Avoid dropping or standing on the product, as harsh impacts could damage the product.
- Make sure children and infants do not play with plastic bags or any packaging materials.
- Please follow the instruction to operate.




Feel good moments

User manual

SPECIFICATIONS

Bluetooth® Version	Bluetooth® V5.0
Bluetooth® Chipset	CSR 8615
Operation Range	10m
Bluetooth® Protocols	HSP HFP A2DP AVRCP
CODEC Code	SBC
Battery Capacity	180mAh/3.7V
Charging Time	2h
Stand-by Time	200h
Working Time	About 17h (50% volume)
Headset Net Weight	51g
Charge Base Net Weight	242g
Headset Dimension	163.21*142.27*48.5mm
Charge Base Dimension	79*73*31mm

PRODUCT DIAGRAM

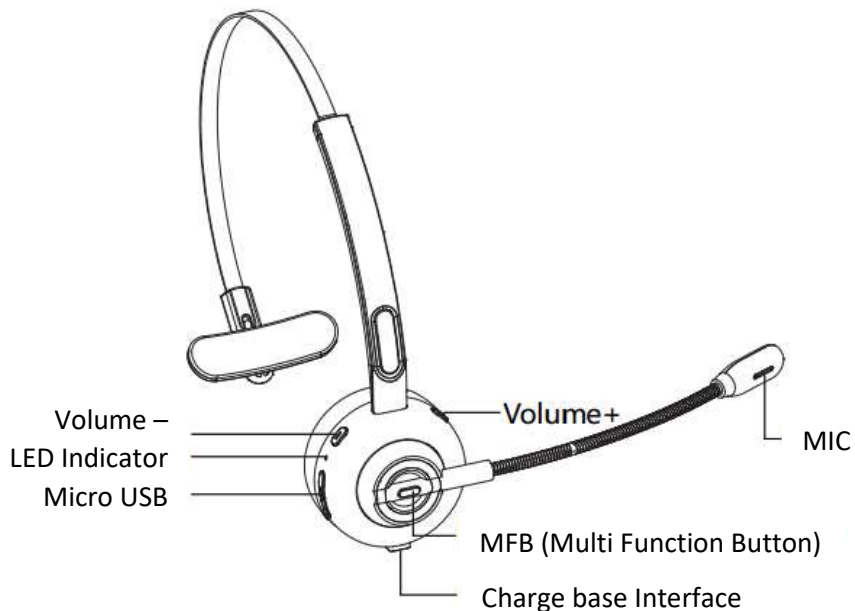


LIVOO

Feel good moments

User manual

PACKAGE CONTENT

- A. Bluetooth® Headset TEC614 x 1
- B. Charge Base x 1
- C. Micro USB charging cable x 1
- D. User manual x 1

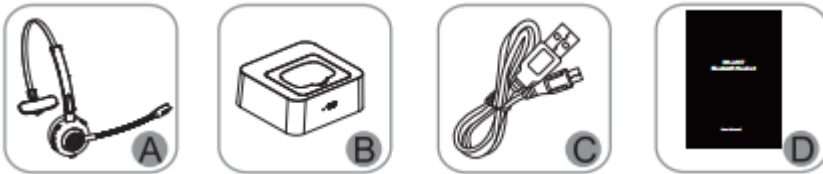

BASIC OPERATION

BUTTON	FUNCTION	OPERATION
MFB	Power On	In off status, Long press 1-3 seconds MFB to power on.
	Power Off	In on status, Long press 5 seconds to power off.
	Enter into pairing mode	In off status, Long press 5-8 seconds to enter into pairing mode. Or under unconnected standby mode, double press the MFB to enter into pairing mode.
	Play/Pause	Short press when play music.
	Redial a call	Double press MFB to dial the last call.
	Reconnect	When there is a pairing record, power on and enter into reconnect state or short press MFB to reconnect under pairing mode.
	Voice dialing	Long press 1 second MFB then release.
	Auto switch	Long press 1 second MFB to switch the audio between phone and Bluetooth® headset.
	Answer a call	Short press (when call coming).
	Hang up a call	Short press (during a call).
	Reject a call	Long press 1 second (when call coming).
Volume +	Volume up	Short press.
	Next song	Long press for 1 second.
Volume -	Volume down	Short press.
	Previous song	Long press for 1 second.



LIVOO

Feel good moments

User manual

BLUETOOTH® PAIRING AND CONNECTION

- A. In off status, long press 5-8 seconds to enter into pairing mode with LED Blue & Red flash alternately.
- B. Search and click to connect "TEC614" on your phone Bluetooth® lists, LED change to LED Blue flash after connected, now you can play music from phone to headphone.
- C. You can press MFB/ volume+ / volume- on the Bluetooth® headset to control the answer/hang up a call and play/pause of the music, next and previous songs, volume up and down.

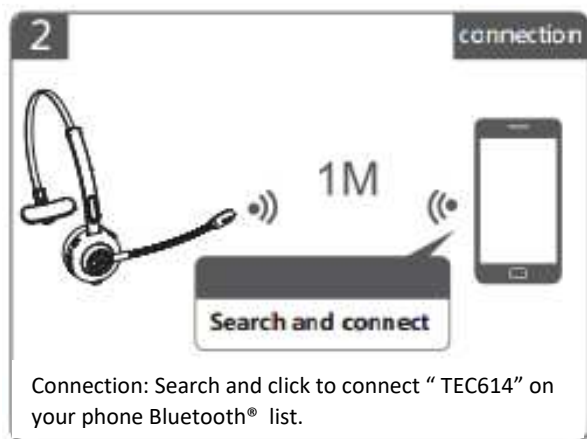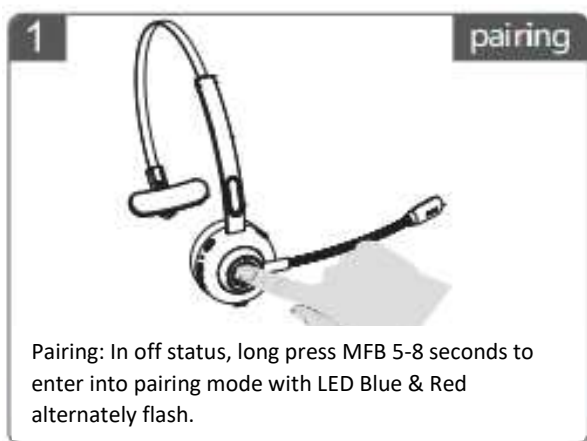

CONNECTION WITH TWO DEVICES

- A. Follow previous part to connect with first phone, then turn off the Bluetooth® function of first phone.
- B. Double press MFB to pairing mode again with Red & Blue LED flash alternately.


LIVOO

Feel good moments

User manual

C. Search and click to connect “TEC614” on your second phone Bluetooth® (or PC) lists, LED change to Blue LED low flash after connected.

D. Turn on Bluetooth® function of first phone, click to reconnect “TEC614” on Bluetooth® lists. Headset connected with two phones now.

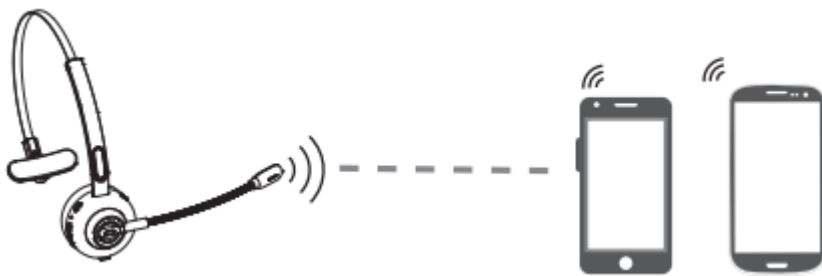

Notes :

Music only can be played from one phone under two connections, when you want to play music from another phone, you need to pause or close the music of the previous phone. The same operation during talking status.

LED INDICATOR

Mode	LED Indicator
Power on	LED Blue flashes 1 second
Power off	LED Red flashes 1 second
Pairing mode	LED Red & Blue flashes alternately
Unconnected standby mode	LED Blue flashes once every 2 seconds
Connected standby mode	LED Blue flashes once every 5 seconds
Playing music	LED Blue flashes once every 5 seconds
Talking	LED Blue flashes once every 5 seconds
Delete paired record	Blue and Red LED flashes once at the same time
Charging	Solid LED Red
Full charged	Solid LED Blue
Low battery	Red LED flash

LIVOO

Feel good moments

User manual


CHARGING

Please charge the TEC614 at once when the Red LED flash.

Charging time about 2 hours. Solid LED Red change to Solid LED Blue when full charged.

Charge Connections

Please connect the TEC614 to charging port through the Micro USB charging cable, any charger can be used as car charger, travel charger, computer USB, etc.

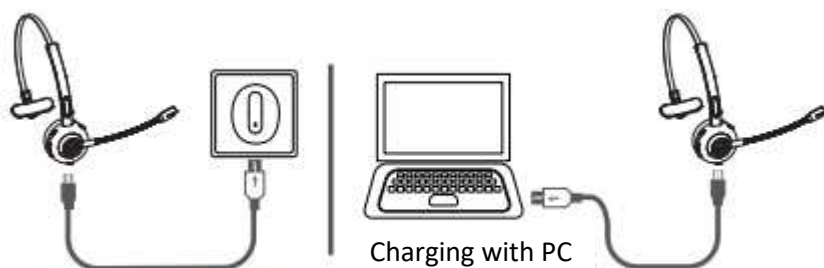


Charging with Charger

Charging with PC

Use of charge Base

Please place the TEC614 on the charging base, then connect the charging base to USB charger through the Micro USB port for charging.

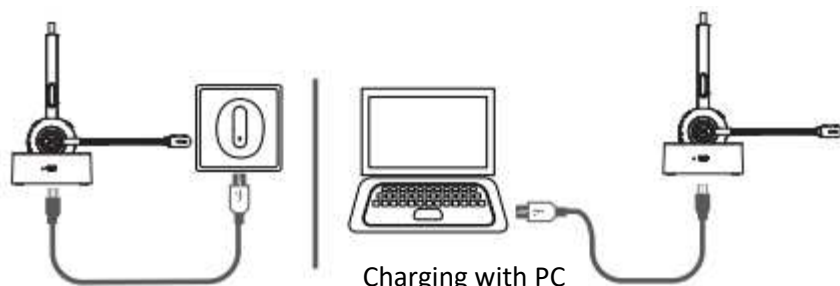

Charging with Charger

Charging with PC

Note :

Please charge the TEC614 at least one time every 2 months when don't use it.

ATTENTIONS AND Q AND A

A. How to reconnect and operation when failed to reconnect?

When TEC614 connected with your mobile phone successfully at the first time, it will search and reconnect the paired device automatically when power on, if failed, please pair and connect again.

B. How to Delete paired records?

In Power on state, long press the volume+ and the volume- button for 5 seconds to clear the pairing record. The indicator Blue and Red LED flashes once at the same time that means the pairing record has been cleared, and the TEC614 will not connect back to the connected device. When there are various connection problem, try clearing the pairing record firstly.

C. What's the password for pairing?

Some connection devices require password for pairing, please try 0000 or 8888 or 1111 or 1234.

D. What devices could charge for the headphone?

Any car charger, power bank, PC etc. which meet DC 5V, charging current more than 500mA could be used to charge this item.

E. Three-way calling function operation.

Call coming during call: short press the MFB to answer the new call and hang up the current call;

Call coming during the call: double press the MFB to answer the new call and keep the current call;

Call with a new call coming: long press the MFB for 1 second rejecting a new call.

When you are on a three-party call, double press the MFB to switch audio between the current call and the keep call.

EU DECLARATION OF CONFORMITY

We
DELTA
BP61071
67452 Mundolsheim – France

Herewith declare under our sole responsibility, that the radio equipment

Bluetooth® compatible headphone
TEC614 (Frequency range 2402MHz-2480MHz)

Fulfills the essential requirements of the Directive 2014/53/UE
The following standards were applied:

Radio:

LIVOO

Feel good moments

User manual

EN 300 328 V2.2.2: 2019-07

EMC:

EN 301 489-1 V2.2.2.3: 2019-11

EN 301 489-17 V3.1.1: 2017-02

Health and Safety:

EN 62638-1 2014+A11 2017

EN 62479: 2010

EN 50663:2017

Mundolsheim, 03/12/2020



Correct disposal of the unit

(Electrical and Electronic Equipment)

(Applicable in the European Union and the rest of Europe that have adopted separate collection systems countries)

The European Directive 2012/19/EU on Waste Electrical and Electronic Equipment (WEEE), requires that old household electrical appliances must not be disposed of in the normal household waste stream. Old appliances must be collected separately in order to optimize the recovery and recycling of the materials they contain and reduce the impact on human health and the environment. The symbol of the crossed out dustbin is marked on all products to remind the obligations of separate collection. Consumers should contact their local authority or retailer for information concerning the correct disposal of their product.



Pour en savoir plus :
www.quefairedemesdechets.fr

LIVOO

BP 61071

67452 Mundolsheim

- Non contractual illustration

LIVOO

Feel good moments

User manual

- Product information is subject to change without prior notice.