

Bluetooth® compatible speaker



Reference : TES247
Version : 1.4
Language : English

LIVOO
Feel good moments
User manual

Thank you to have purchased a product brand LIVOO. We take great care in design, ergonomics and simple use of our products. We hope that this product will give you complete satisfaction.

This manual is also available on www.livoo.fr

GENERAL INSTRUCTIONS

PLEASE, TAKE TIME TO READ WELL THE INSTRUCTIONS FOR USE PARTICULARLY BEFORE THE FIRST USE.

A misuse of the appliance can damage it or hurt the user. Assure that you use the appliance for the use for which it is designed; we refuse any responsibilities as for the damages by an incorrect use or a bad manipulation.

1. Before using the unit please read the manual carefully.
2. Keep this product away from any water, liquid or wet areas. This product shall not be exposed to dripping or splashing and that no objects filled with liquids, such as vases, shall be placed on the apparatus.
3. Use in dry locations only.
4. Keep this product away from naked flames such as candles.
5. This product should be only operated from the type of power source indicated on the marking label.
6. Do not place the product in direct sunlight or heat. Keep away from temperatures over 40°C.
7. Make sure the product has plenty of ventilation.
8. Do not press the buttons too hard as it could damage the product.
9. Do not use a wet cloth on the product and keep it free from dust.
10. Do not use chemicals on this product.
11. Never try to repair this product yourself because it could lead to electric shock, take it to an approved technician.
12. When the unit is not in use, make sure it is correctly turned off and stored in a cool dry place.
13. Do not insert foreign objects into the product.
14. Adult supervision is recommended with children using this product.
15. Avoid dropping it as harsh impacts could damage the product.
16. Ensure children and infants do not play with plastic bags or any packaging materials

TECHNICAL INFORMATION

BLUETOOTH

Bluetooth Version	5.0
Bluetooth Profil	A2DP AVRCP
Frequency band / output power	2400-2483.5MHz
Bluetooth distance	≥10

AUDIO

Rated output power	1 * 5W(RMS)
--------------------	-------------

LIVOO
Feel good moments
User manual

Frequency response	200-20Khz
Signal to noise ratio	85dB


SPEAKER

Impedence	4ohms
Speaker	45MM
Sensibility	0-7DBM

GENERAL INFORMATIONS

Input	5V, 2A
Built in battery	3.7V 1800mAh
Size	7,5 x 7,5 x 8,80
Weight	0.251 kg

DESCRIPTION

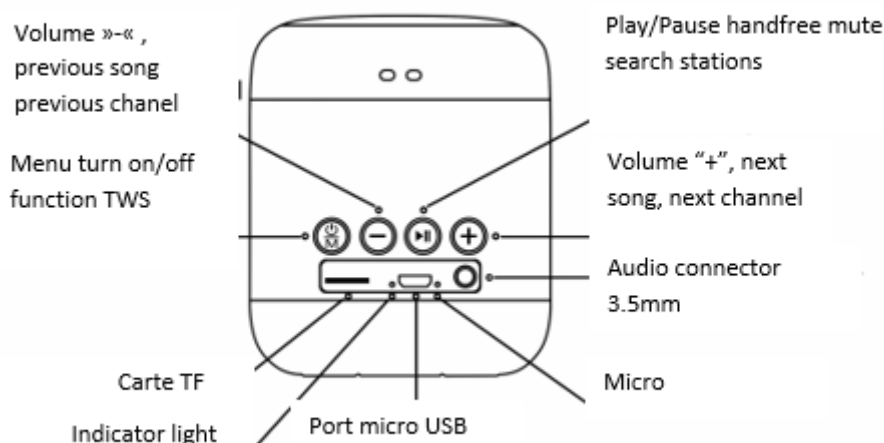

OPERATION

1. Bluetooth Mode Operation

- Long press the power button 3 seconds to turn on the speaker, the bluetooth will enter pairing mode after the boot tone, blue light flashes means that bluetooth waiting for you connect.
- Open the bluetooth of your mobile phone, search for the bluetooth name TES247, click it to pair. The device will show that it is connected , and the blue light will change to slow flash
- Open the music player of your device and play music.

2. Charging Operation

Inset the micro jack of Charging cable into speaker's micro USB socket , then put the another side of the charging cable into computer's USB socket .

The light of the speaker will turn red when charging. When the battery is full, the red light off.

LIVOO
Feel good moments
User manual

3. External audio-input Operations:

- Aux-in : Power on the set then insert the aux-in cable into speaker's 3.5mm aux-in socket , then the set will automatically change into Aux-in mode .
- TF card: Power on the set then insert the TF card into speaker's card socket, then the set will automatically change into TF card mode.
- If need to change to Bluetooth mode but set under external audio-in mode (the one of both Aux-in and TF card), then you can short press Power/M button to switch to the mode which you like.

Button Instructions:

Power /M Button:

- Long Press Power Button 3 seconds to turn on/off.
- Short Press Power /M button to change the mode to Aux-in, TF card, Bluetooth mode.

Volume control +/- previous track

- Long press is previous track
- Short press is volume decrease

Play/Pause button:

- In play mode, short press Power button, Play/Pause.
- In calling mode, short press power button, Answer / Hang up.

Volume control +/- next track:

- Long press is next track
- Short press is volume increase

TWS Function:

Turn on two speakers in the same time then you can see both LED flash fast , then press Play/Pause button twice immediately , 3sec later you can hear the connect sound then one of the led light will turn to slow flash and another one is keep flash fast . That means two speakers have connect successfully. Then open the bluetooth function of your phone and do connection to enjoy the music.

EU DECLARATION OF CONFORMITY

We
DELTA
BP61071
67452 Mundolsheim – France

Herewith declare under our sole responsibility, that the radio equipment

Bluetooth® compatible speaker
TES247 (frequency 2400MHZ-2483.5 MHz)
Fulfils the essential requirements of the Directive 2014/53/UE

LIVOO
Feel good moments
User manual

The following standards were applied:

Radio:

ETSI EN 300 328 V2.2.2 (2020-02)

EMC:

ETSI EN 301 489-1 V 2.2.3 (2019-11)

ETSI EN 301 489-17 V 3.2.2 (2019-12)

Health and Safety:

EN 62368-1:2014+A11:2017

EN 50663: 2017

Mundolsheim, le 30/12/2021



Correct Disposal of this product

(Waste Electrical & Electronic Equipment)

(Applicable in the European Union and other European countries with separate collection systems)

The European Directive 2012/19/EU on Waste Facilities Electrical and Electronic (WEEE)

This marking shown on the product or its literature, indicates that it should not be disposed with other household wastes at the end of its working life.

To prevent possible harm to the environment or human health from uncontrolled waste disposal, please separate this from other types of wastes and recycle it responsibly to promote the sustainable reuse of material resources.

Household users should contact either the retailer where they purchased this product or their local authority office, for details of where and how they can take this item for environmentally safe recycling.



Pour en savoir plus :

www.quefairedemesdechets.fr

LIVOO
BP 61071
67452 Mundolsheim - FRANCE

- Photo no contractual
- Worried about the quality of his products the manufacturer reserves the right to make modifications without advance notice